
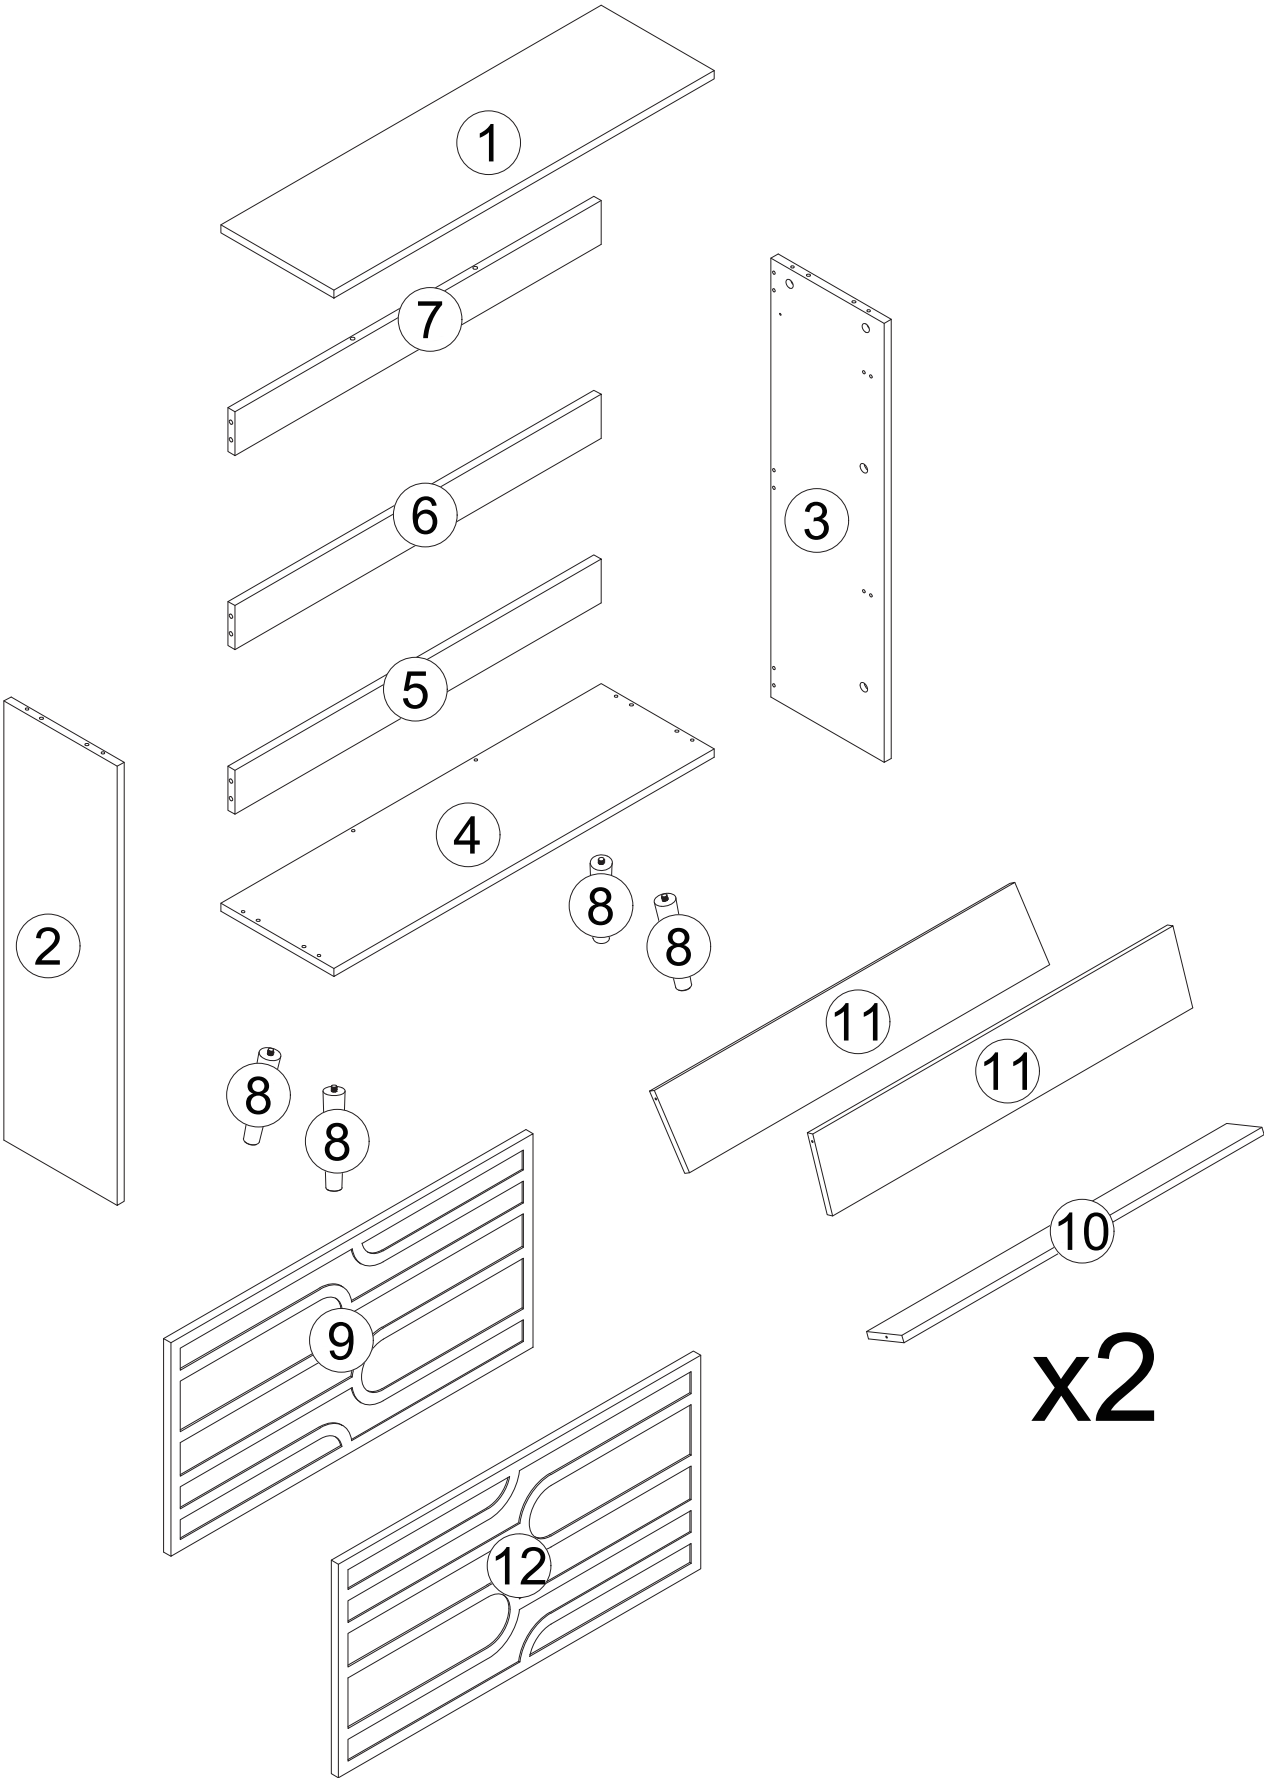
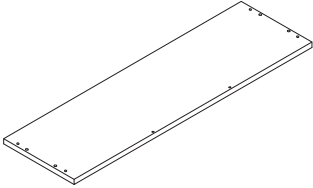
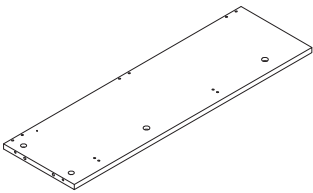
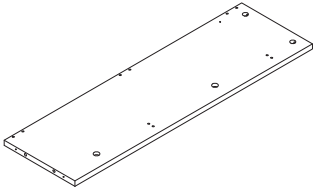
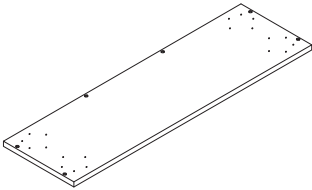
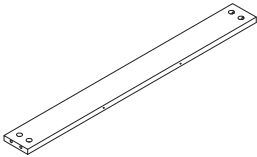
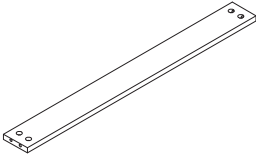
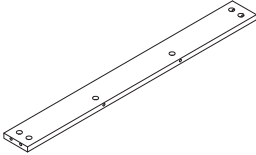

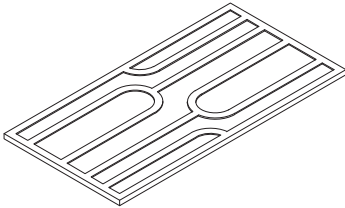
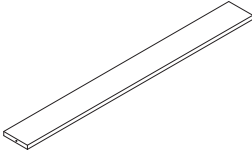
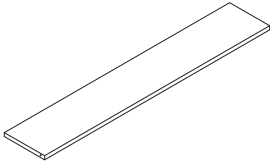








Parts

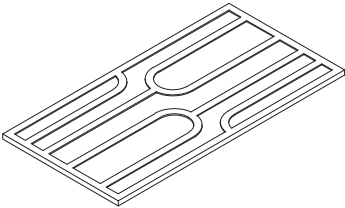



Installation Parts

① 1PC 	② 1PC 	③ 1PC 
④ 1PC 	⑤ 1PC 	⑥ 1PC 
⑦ 1PC 	⑧ 4PC 	⑨ 1PC 
⑩ 2PC 	⑪ 4PC 	⑫ 1PC 


Sheet Parts

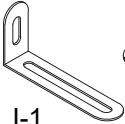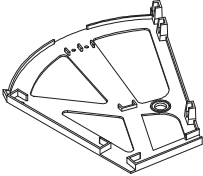A M6*35  18 PCS +2(spare)	B M15*10  18 PCS +2(spare)	C Ø6*30  8 PCS +1(spare)	D M4*35  6PCS +1(spare)
E M3.5*12  24 PCS +3(spare)	F  F-1 F-2 F-3 4PCS	G  4PCS +1(spare)	H  4PCS
I  I-1 I-2 I-3 I-4 2PCS	J  2PCS	K  2PCS	L M4*12  20PCS +2(spare)
M  4PCS +1(spare)	N  N-1 N-2 2PCS		


This Cam Lock Fastening System will be used throughout the assembly process

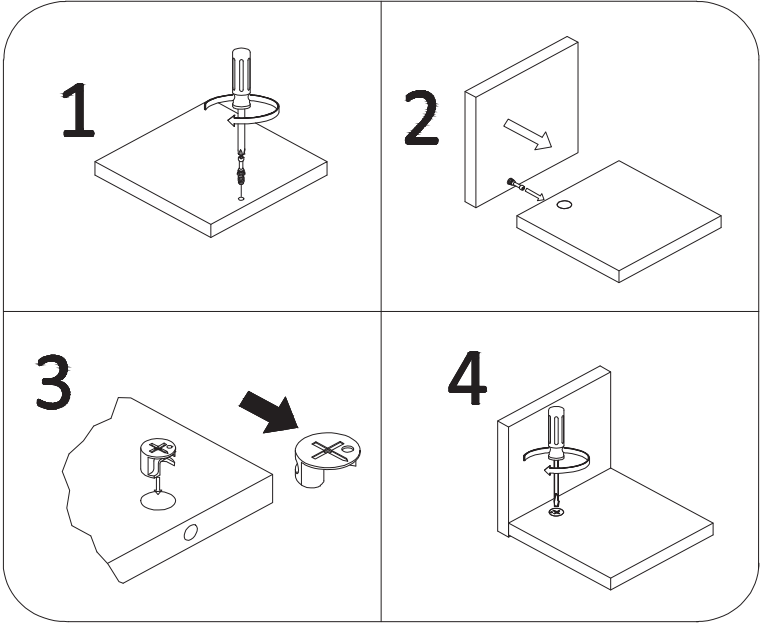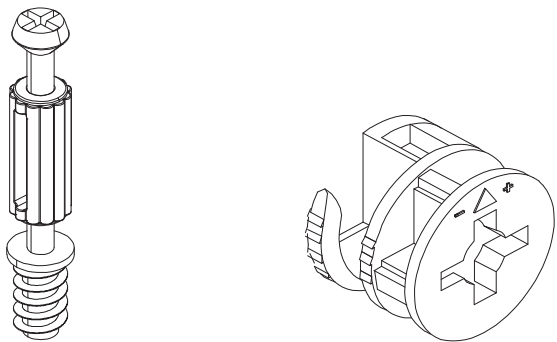

STEP 1

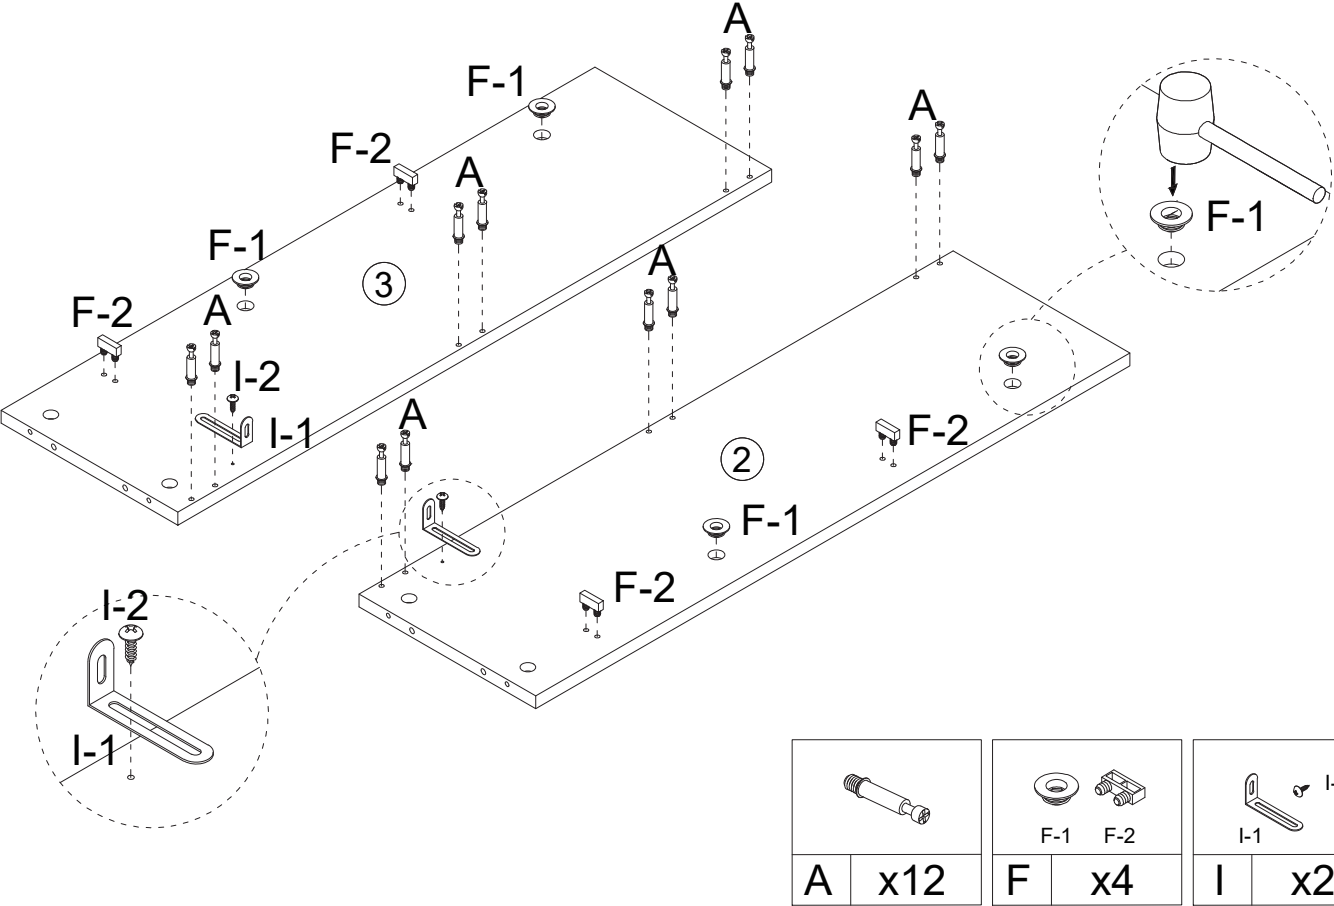


STEP 2

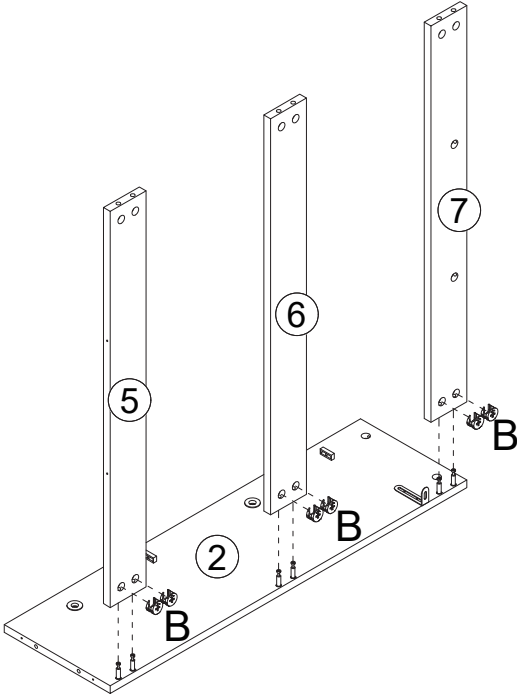


B
x6

STEP 3

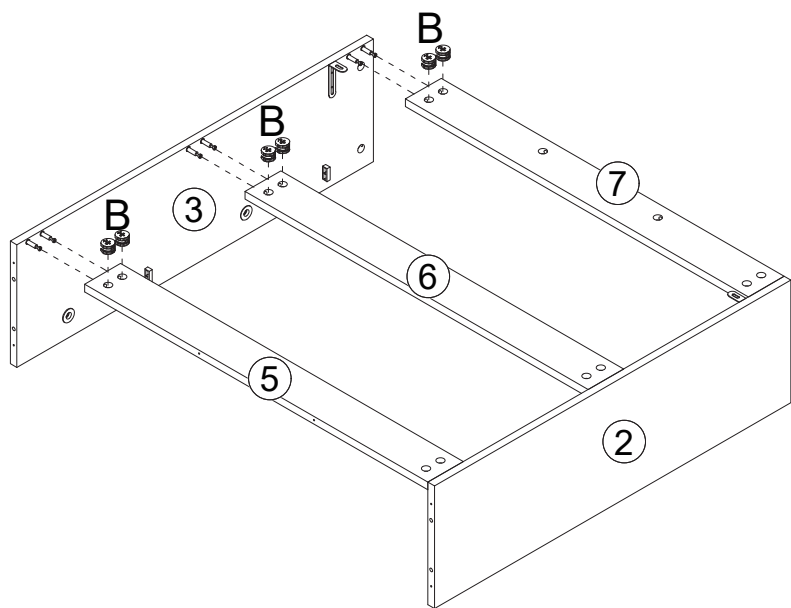


B	x6

STEP 4

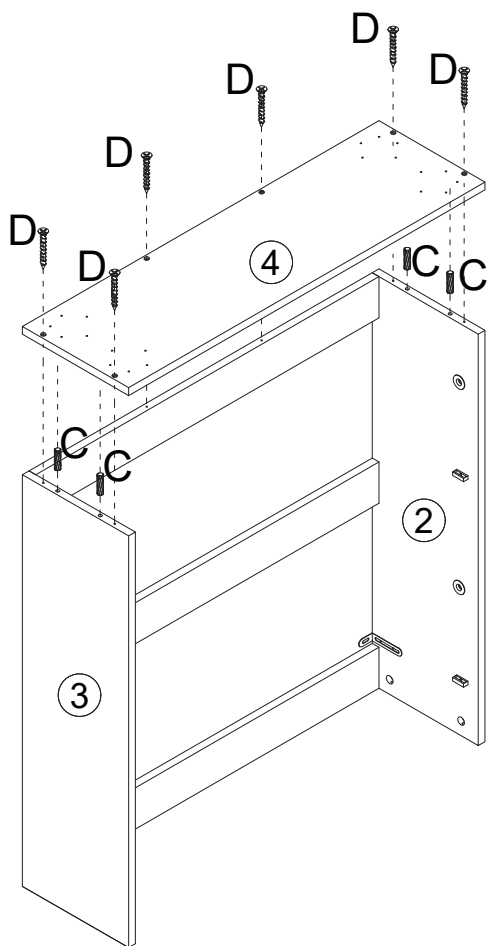


C	x4	D	x6

STEP 5

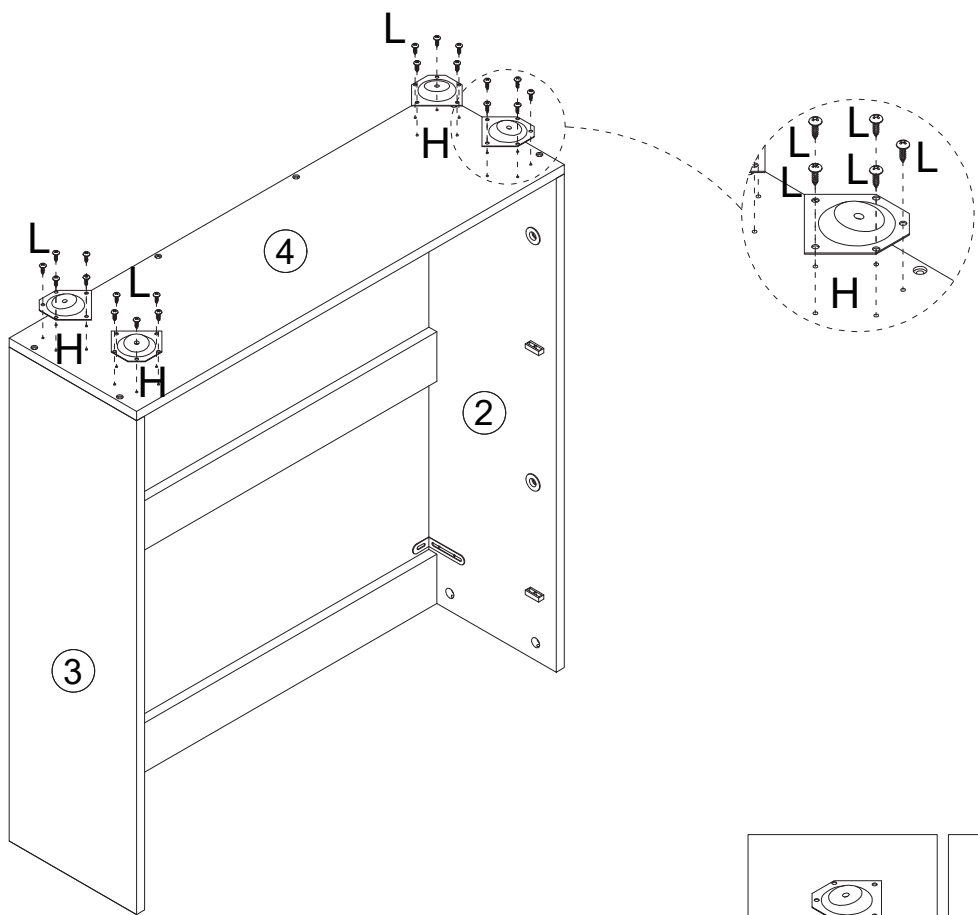



	
H x4	L x20

STEP 6



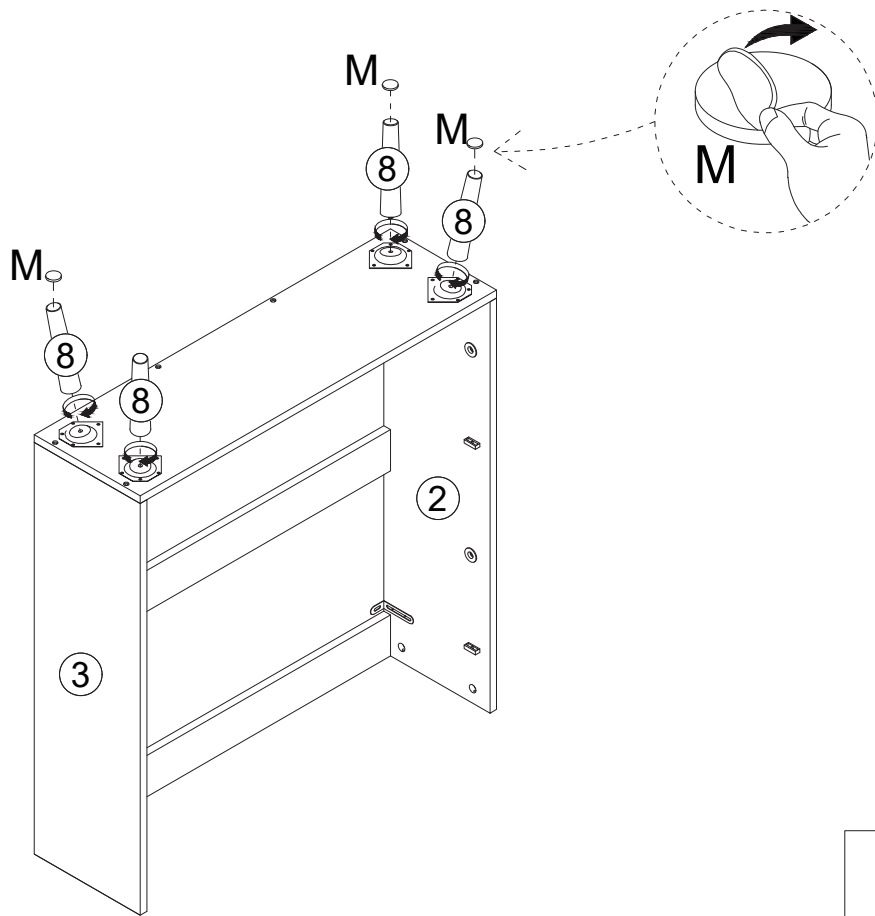



M x4


STEP 7

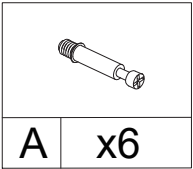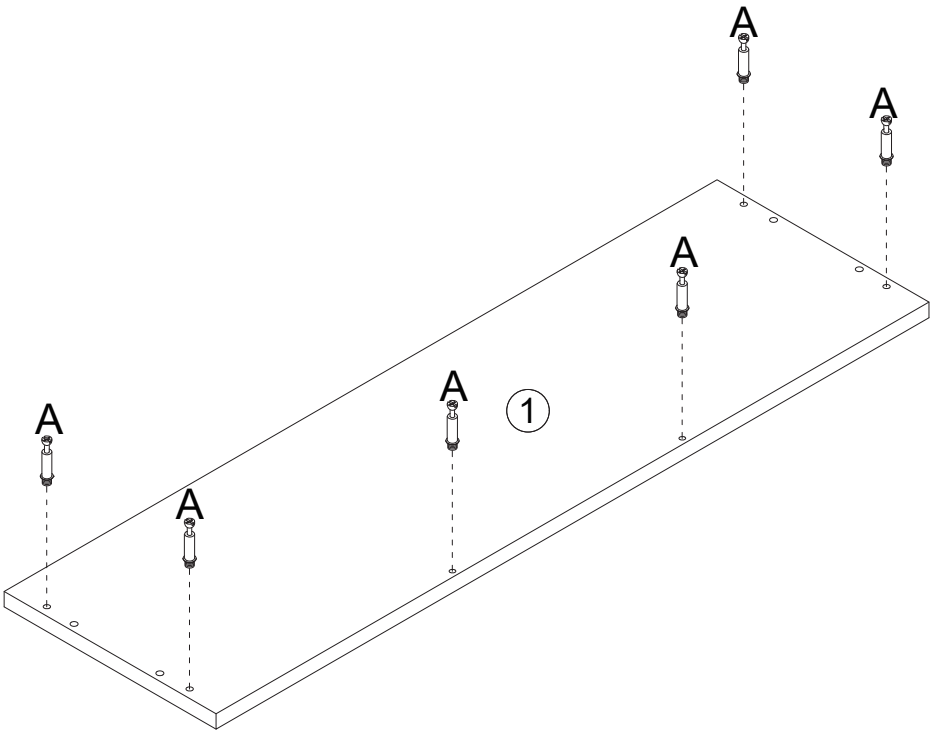


STEP 8

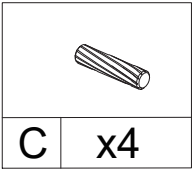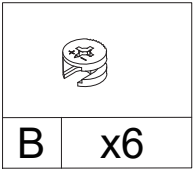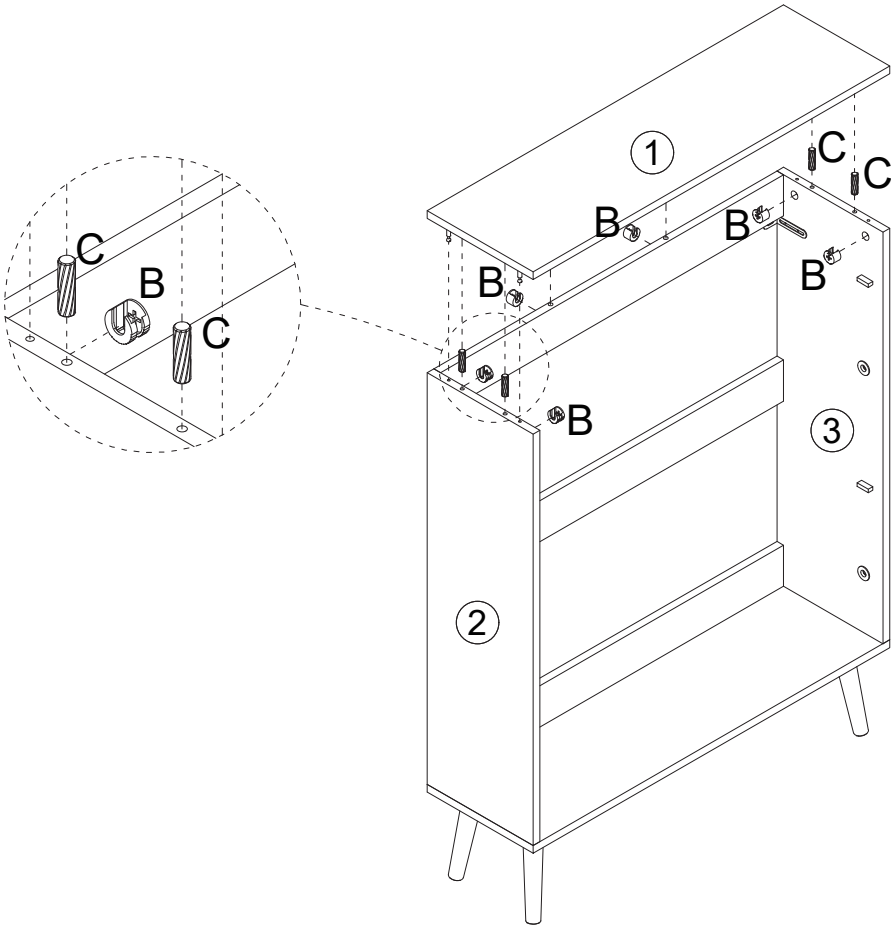


STEP 9

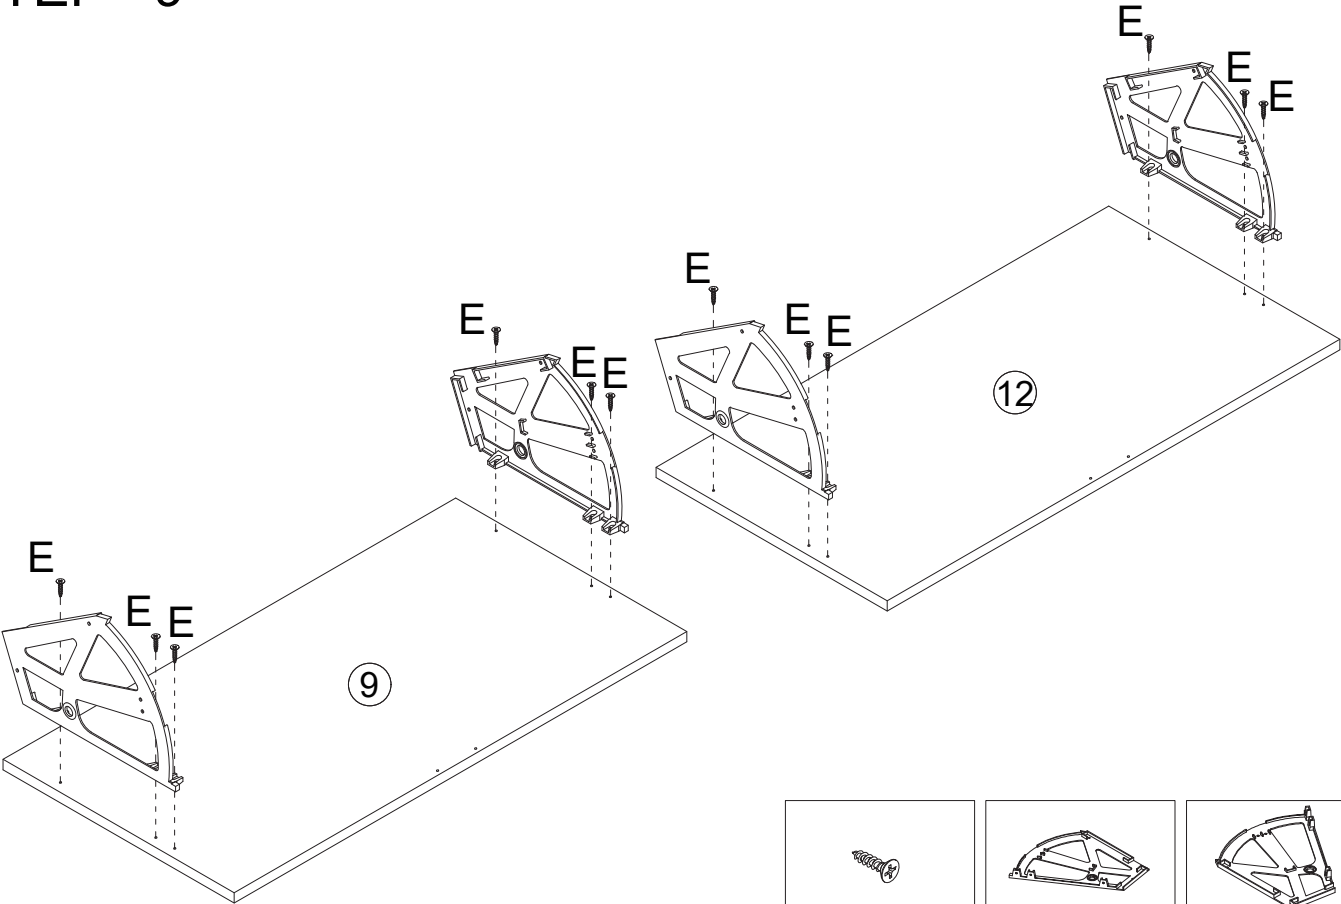


		
E	x12	J x2
		K x2

STEP 10

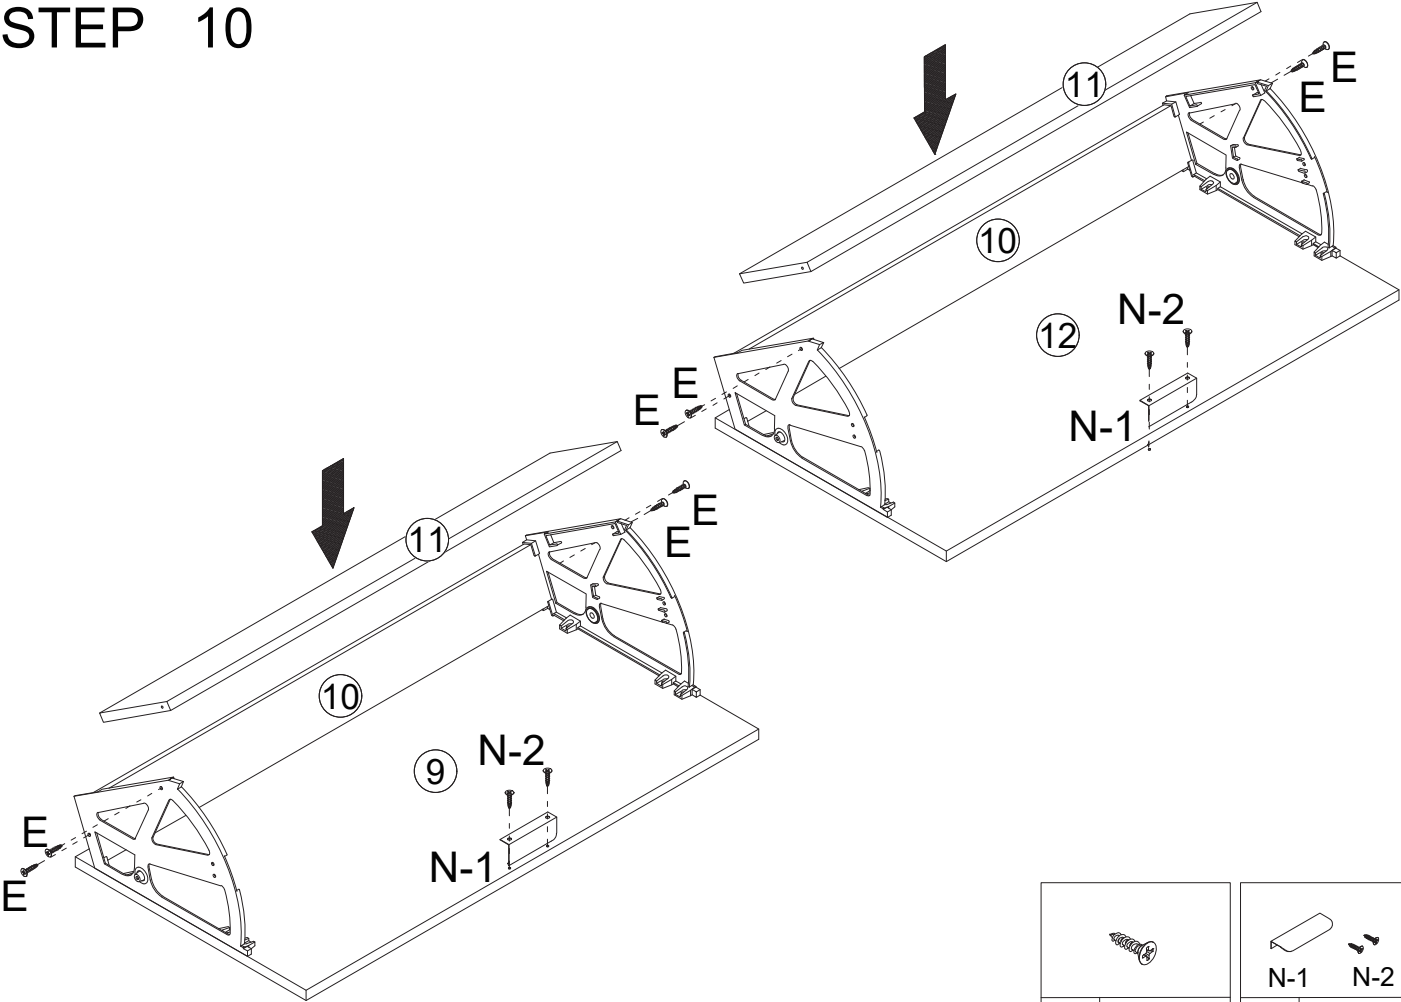


		
E	x8	K x2
		N-1 N-2

STEP 11

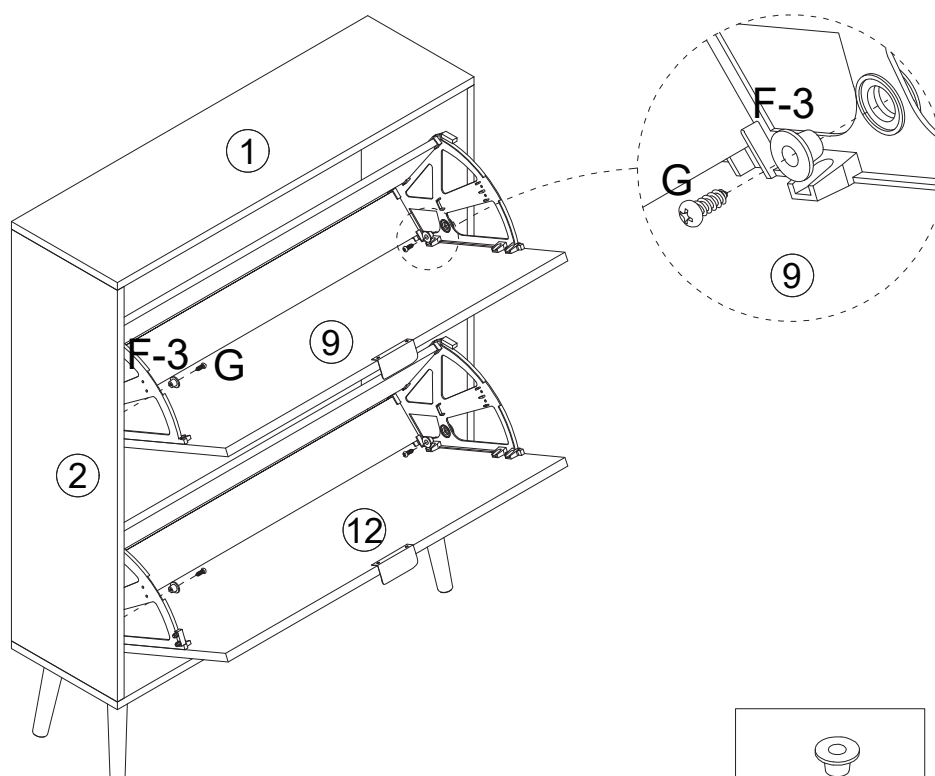


			
F-3		G	
F	x4	G	x4

STEP 12


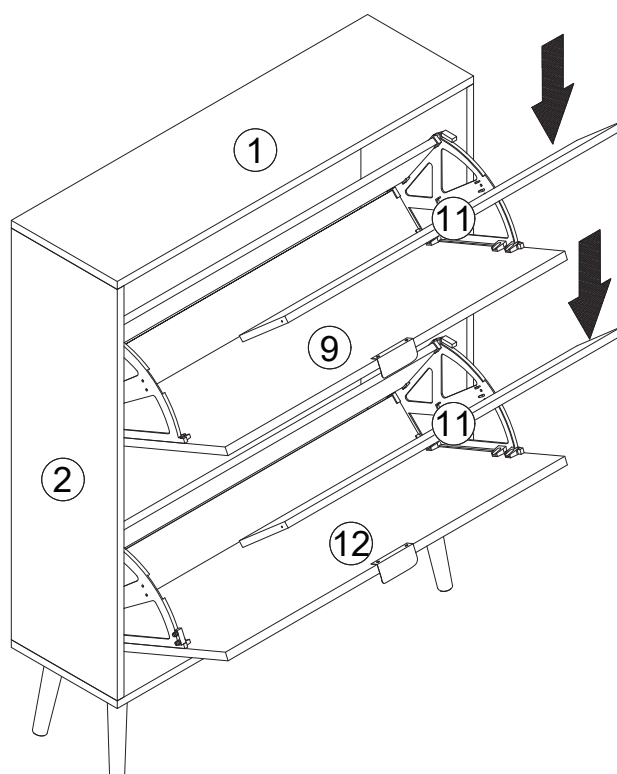


STEP 13

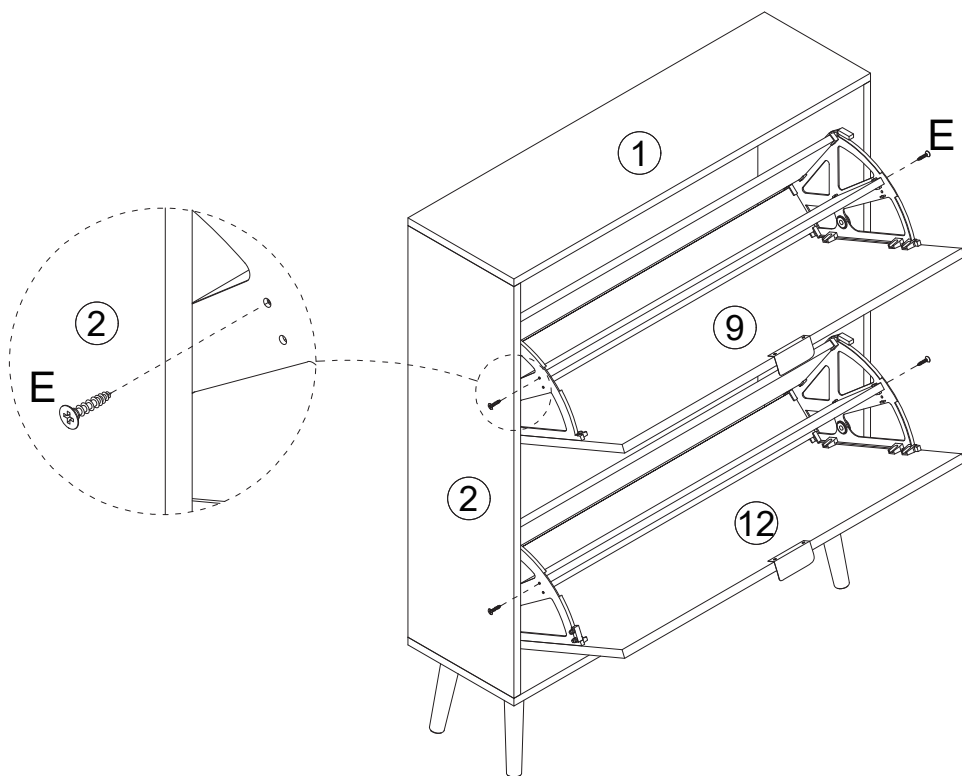

	
E	x4


STEP 14

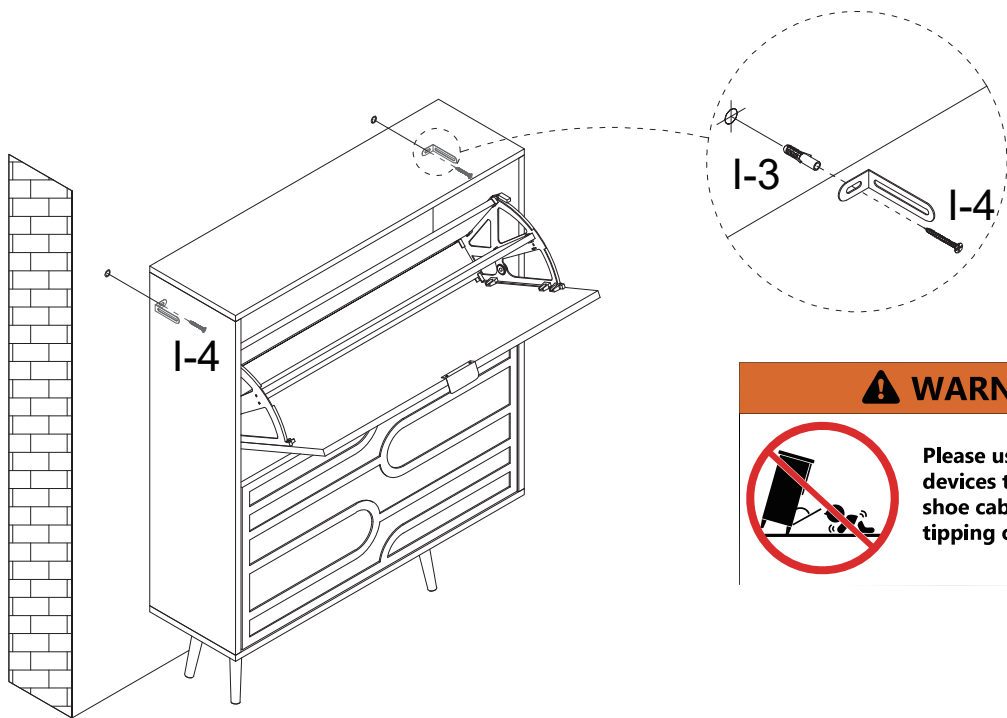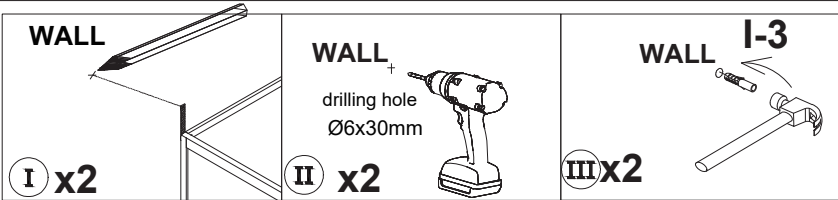

**WARNING**



Please use anti tipping devices to prevent the shoe cabinet from tipping over.

	
I	x2