

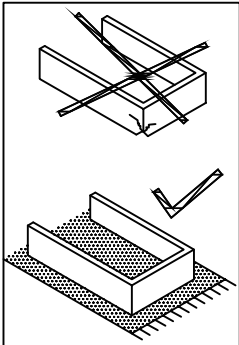

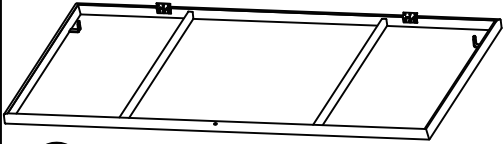
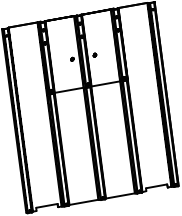
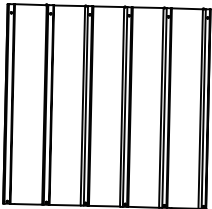
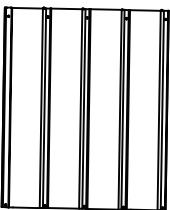
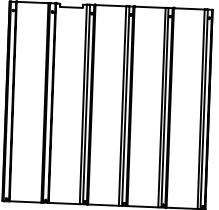
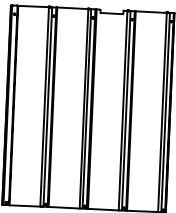






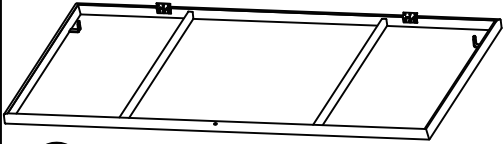
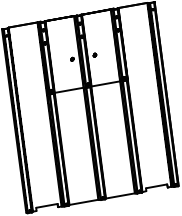
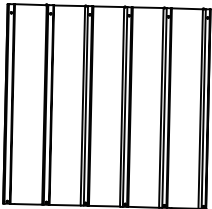
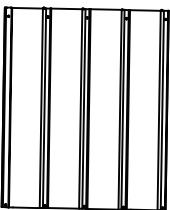
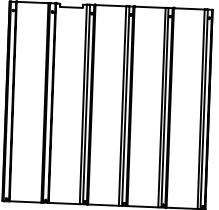
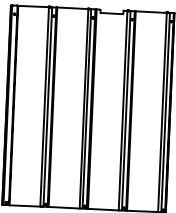






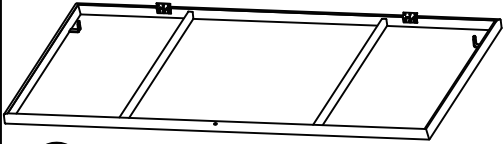
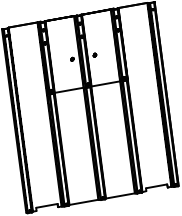
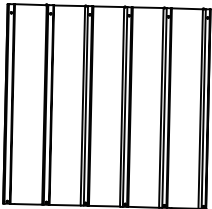
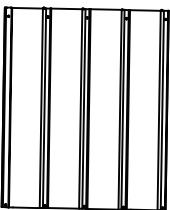
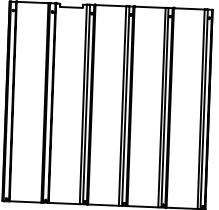
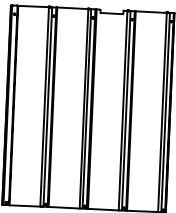





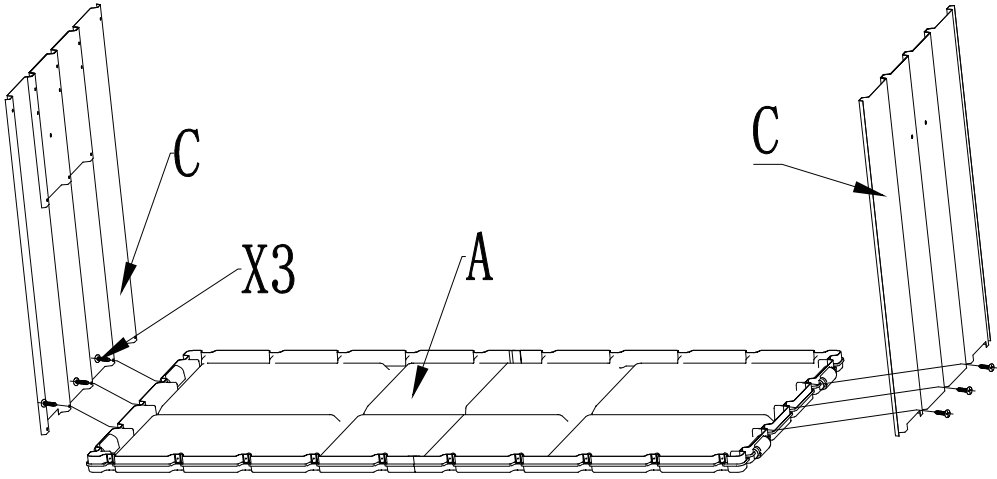




BEFORE STARTING ASSEMBLY




- ① Some parts have metal edges. Please be careful when handling components. Always wear work gloves.
- ② Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.
- ③ Please do not fully tighten the bolts prior to complete assembly.
- ④ Retain for future reference. Read carefully. For domestic use.


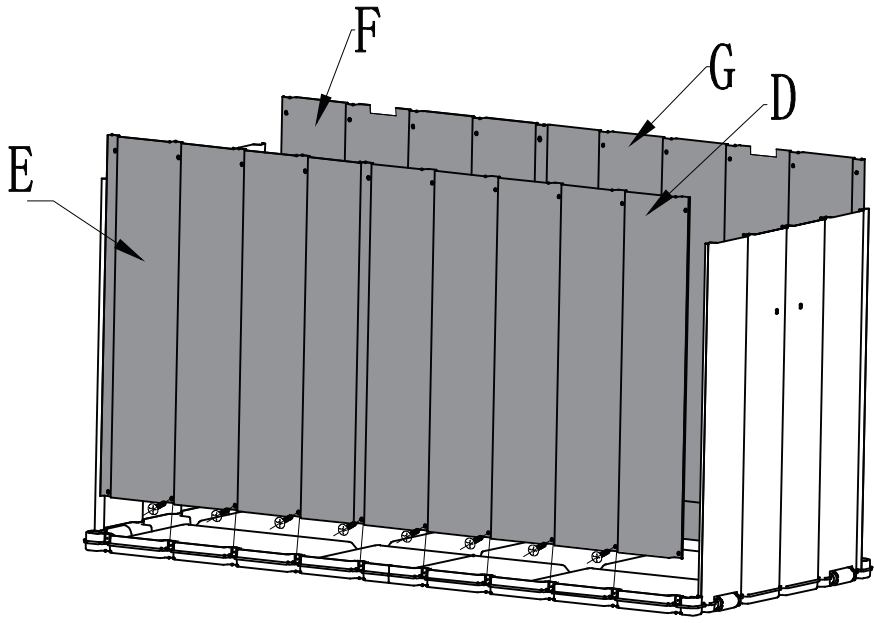




	<table border="1"> <tr> <td data-bbox="400 197 917 427">  A 1X </td><td data-bbox="943 197 1460 427">  B 1X </td></tr> <tr> <td data-bbox="400 450 917 680">  C 2X </td><td data-bbox="943 450 1460 680">  D 1X </td></tr> <tr> <td data-bbox="400 703 917 934">  E 1X </td><td data-bbox="943 703 1460 934">  F 1X </td></tr> <tr> <td data-bbox="400 956 917 1187">  G 1X </td><td data-bbox="943 956 1460 1187">  H 1X  I 1X </td></tr> <tr> <td data-bbox="400 1209 917 1440">  J 1X  K 1X  L 4X </td><td data-bbox="943 1209 1460 1440">  M 4X  N 4X  P 2X </td></tr> <tr> <td data-bbox="400 1462 917 1693">  Q 2X  R 1X  S 1X </td><td data-bbox="943 1462 1460 1693">  T 2X  U 2X M6  V 2X </td></tr> <tr> <td data-bbox="400 1715 917 1946">  W1 M6X16 2X  W2 M6X25 2X  X1 ST4X8 23X  X2 38X  X3 ST4X16 38X </td><td data-bbox="943 1715 1460 1946">  Y M4X10 15X  Z1 1X  Z2 1X  Z3 1X </td></tr> </table>	 A 1X	 B 1X	 C 2X	 D 1X	 E 1X	 F 1X	 G 1X	 H 1X  I 1X	 J 1X  K 1X  L 4X	 M 4X  N 4X  P 2X	 Q 2X  R 1X  S 1X	 T 2X  U 2X M6  V 2X	 W1 M6X16 2X  W2 M6X25 2X  X1 ST4X8 23X  X2 38X  X3 ST4X16 38X	 Y M4X10 15X  Z1 1X  Z2 1X  Z3 1X
 A 1X	 B 1X														
 C 2X	 D 1X														
 E 1X	 F 1X														
 G 1X	 H 1X  I 1X														
 J 1X  K 1X  L 4X	 M 4X  N 4X  P 2X														
 Q 2X  R 1X  S 1X	 T 2X  U 2X M6  V 2X														
 W1 M6X16 2X  W2 M6X25 2X  X1 ST4X8 23X  X2 38X  X3 ST4X16 38X	 Y M4X10 15X  Z1 1X  Z2 1X  Z3 1X														
1	⚠ Please do not fully tighten the bolts prior to complete assembly.														





 (A) 1X	
 (C) 2X	
 (X3) 6X	(1) Place part #C on part #A, align the screw holes, and secure with 3 bolts #X3. (2) Repeat the above procedure to assemble the other side. 
 (D) 1X	<u>Step 1:</u> Place part #D, #E, on part #A, align the screw holes, and secure with 8 bolt #X3.
 (E) 1X	<u>Step 2:</u> Place part#F, #G on part #A, align the screw holes, and secure with 8 bolt #X3.
 (F) 1X	
 (G) 1X	
 (X3) 16X	
2	




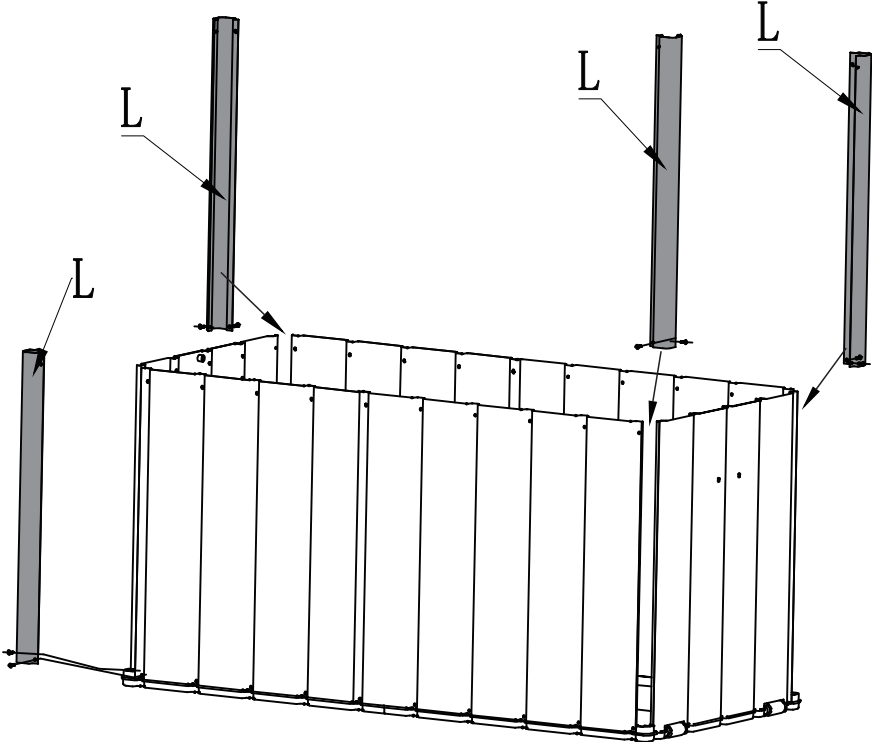
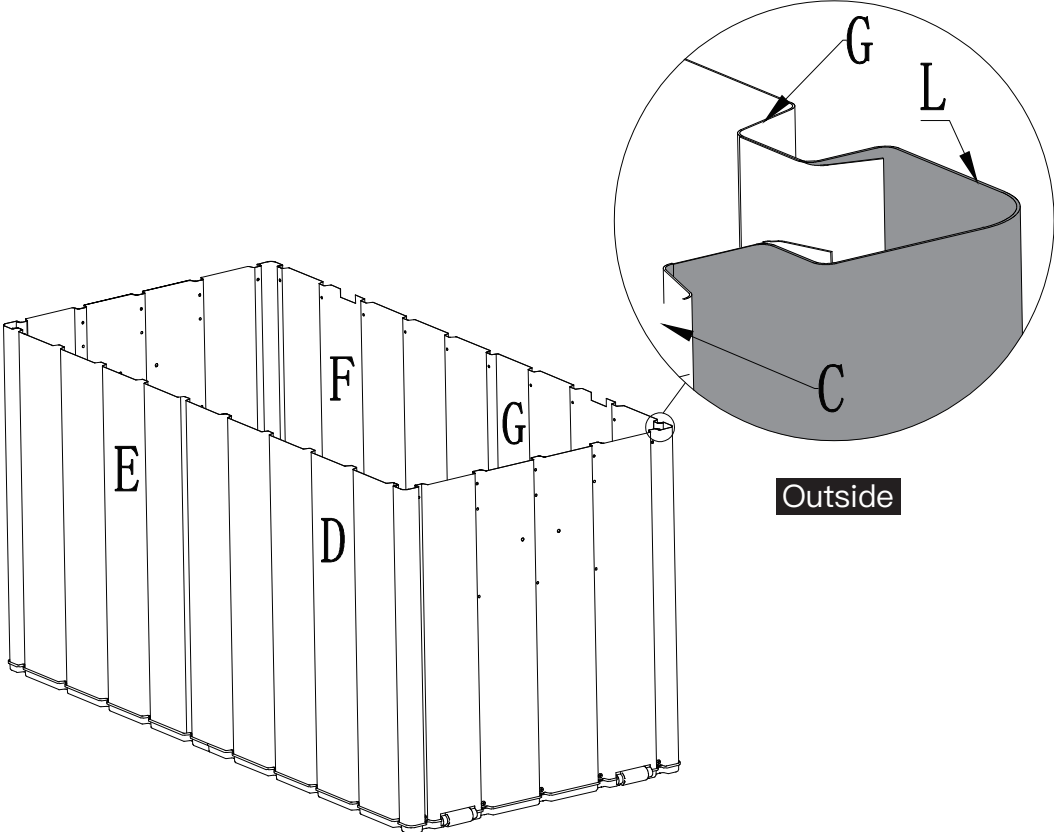
 (L) 4X	(1) Insert 4 part #L to the bottom of the deck box and secure with 8 bolt #X3.
 St4x16 (X3) 8X	
	
3	

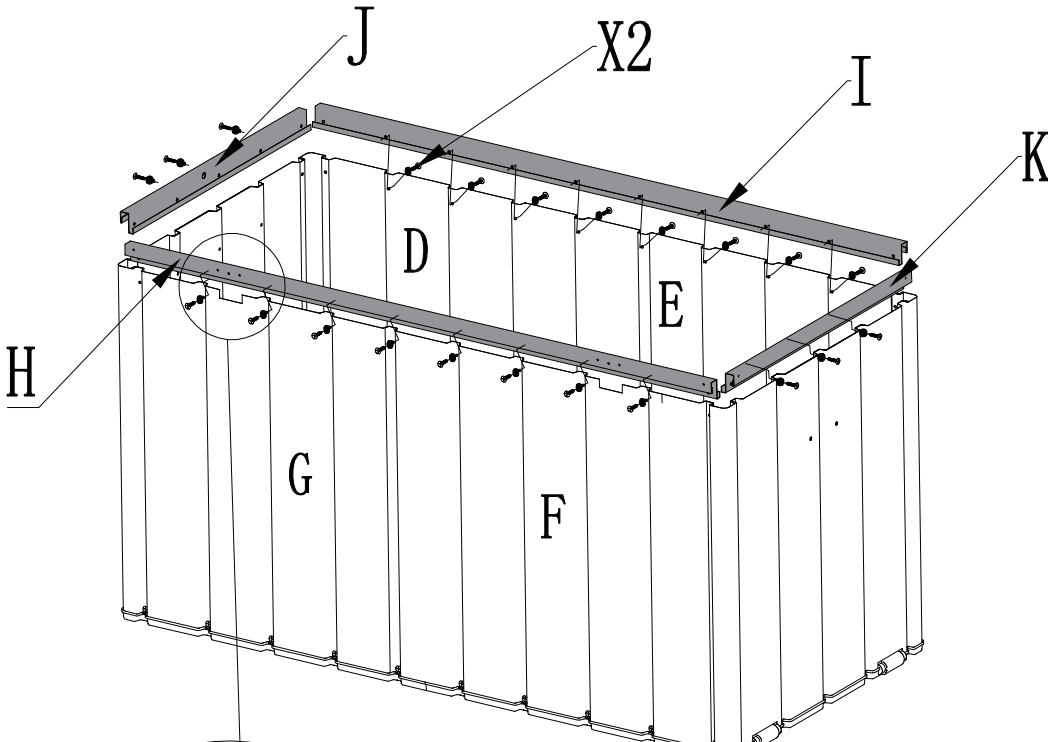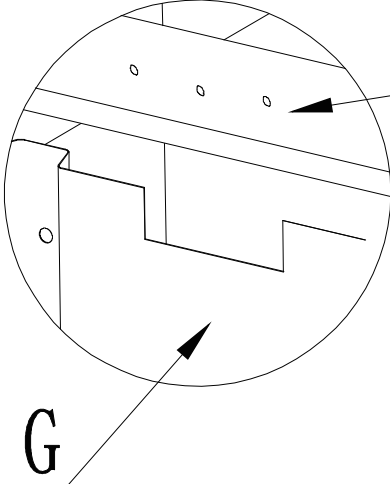 (H) 1X	
 (I) 1X	
 (J) 1X	
 (K) 1X	
 St4x8 (X2) 22X	
	 Step 1: Place part #H on the storage panel #G & #F as shown, align the screw holes, and secure with 8 gaskets and bolts #X2. Step 2: Place part #I on the storage panel #E & #D as shown, align the screw holes, and secure with 8 gaskets and bolts #X2. Step 3: Place part #J on the storage panel as shown, align the screw holes, and secure with 3 gaskets and bolts #X2. Step 4: Place part #K on the storage panel as shown, align the screw holes, and secure with 3 gaskets and bolts #X2.
4	

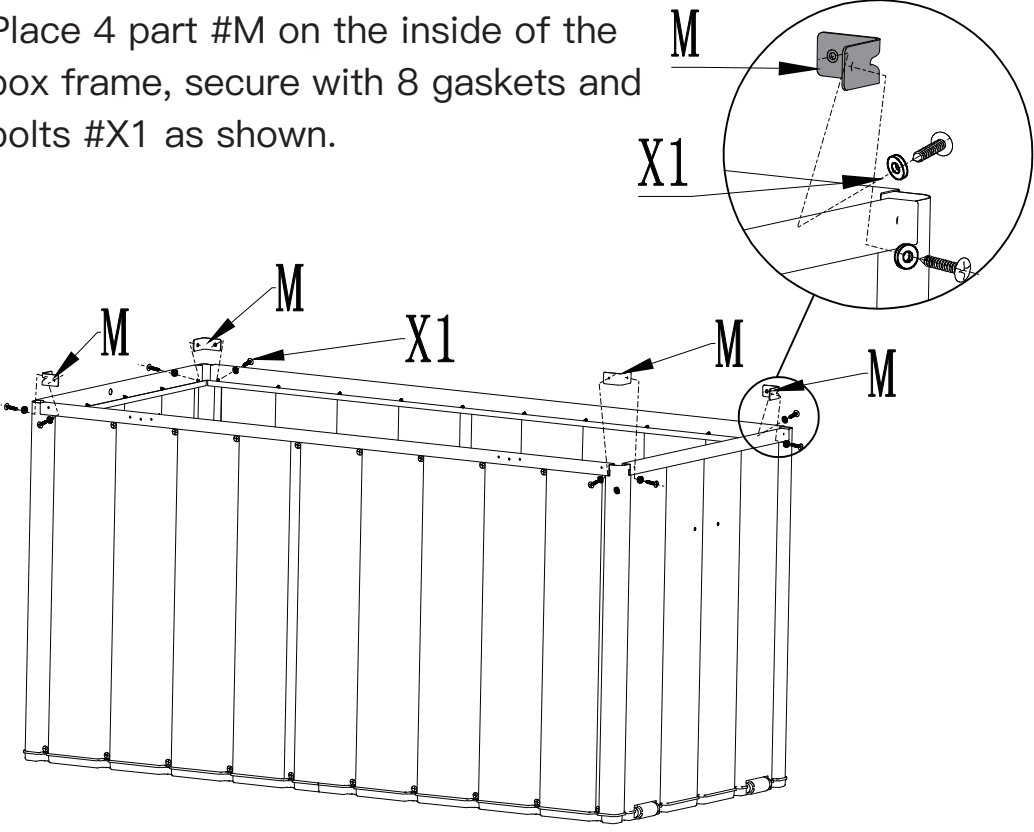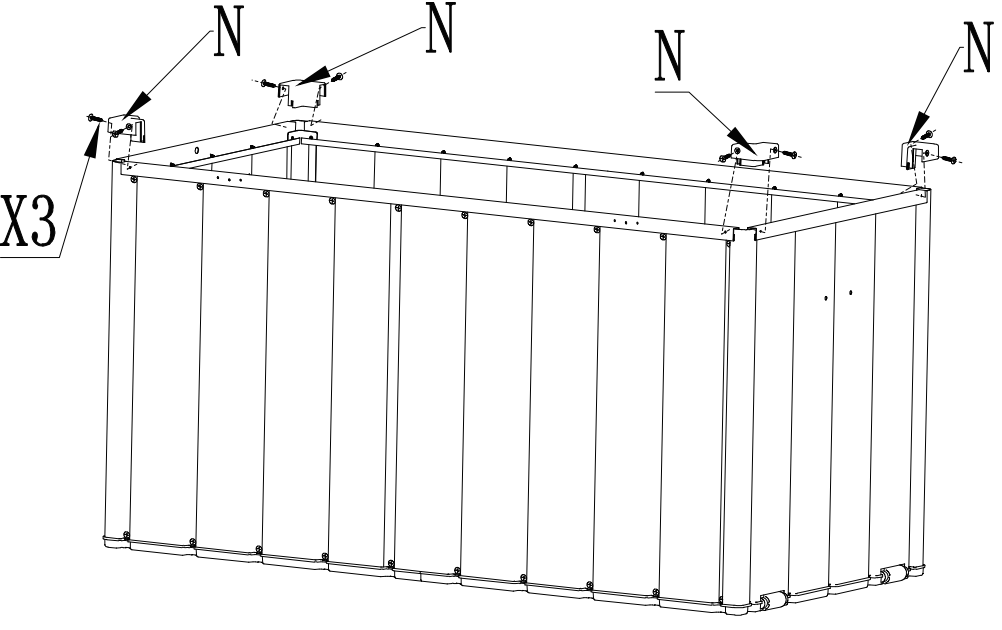 (M) 4X	Place 4 part #M on the inside of the box frame, secure with 8 gaskets and bolts #X1 as shown. 
 (X1) 8X	
 (N) 4X (X3) 8X	Cover 4 part #N on the corner of the box, secure with 8 bolt #X3 as shown. 
5	

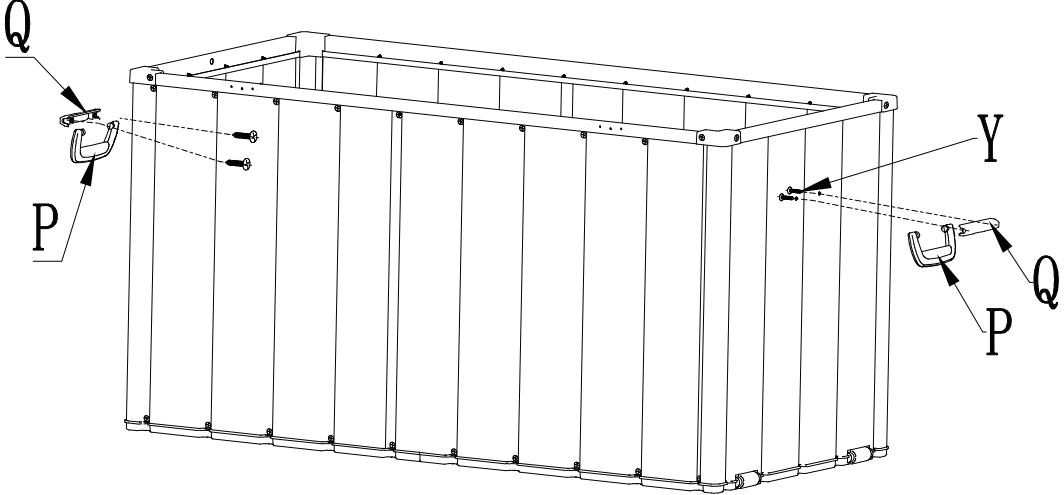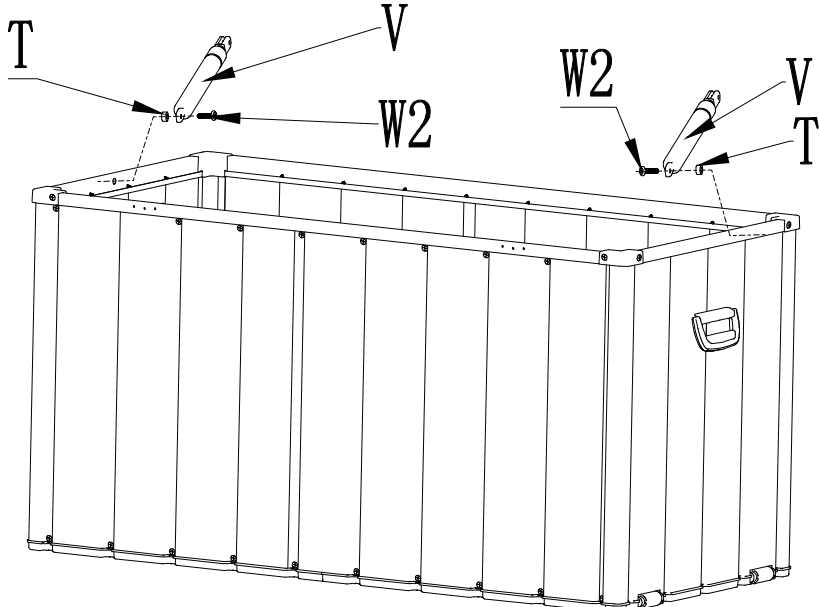 (P) 2X	Step 1: Connect part #P and part #Q. Step 2: Use bolt #Y to secure them to the storage panel.
 (Q) 2X	
 (Y) 4X	
 (V) 2X	Use bolt #W2 and gasket #T to secure part #V on the storage panel as shown.
 (T) 2X	
 (W2) 2X	
6	

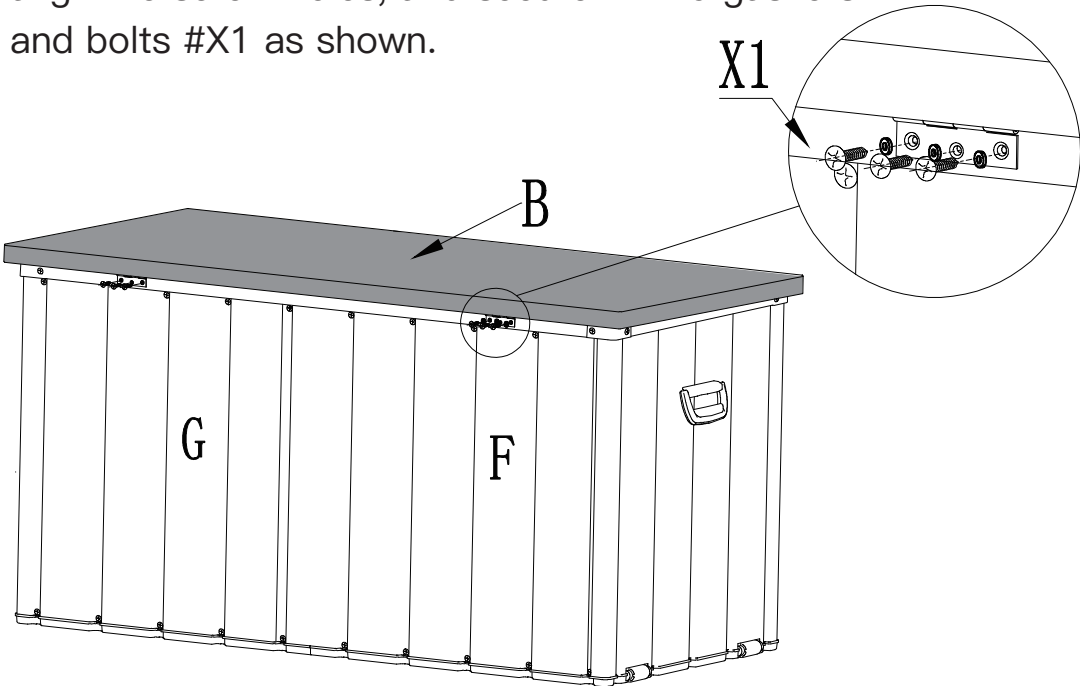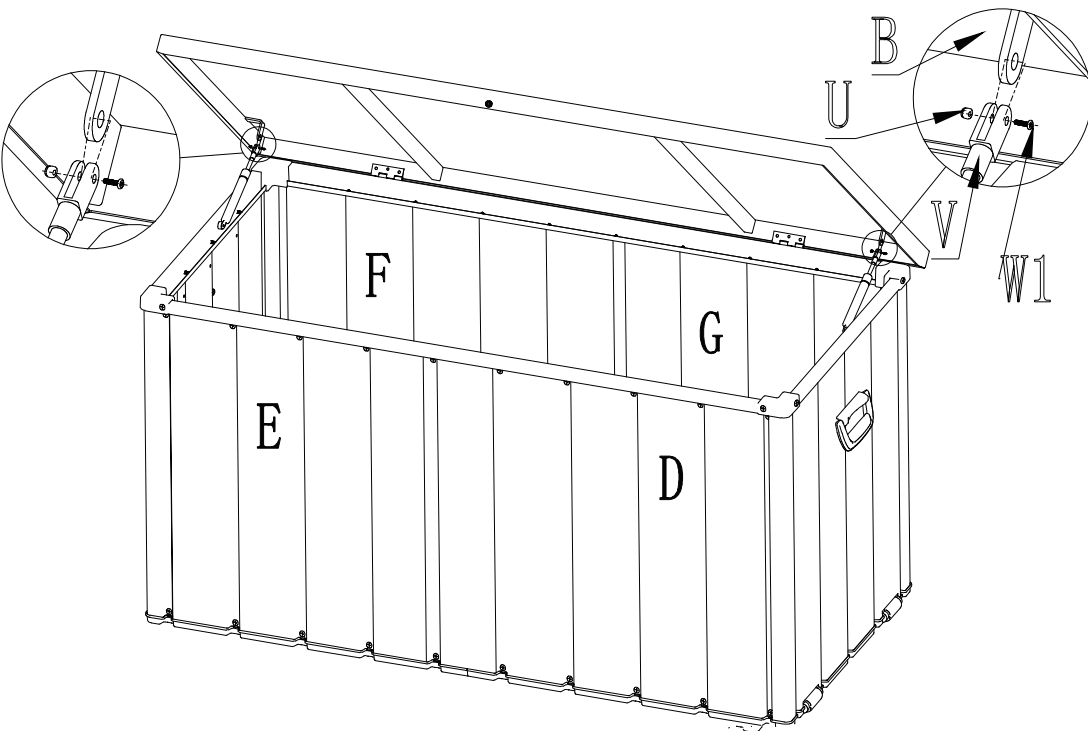 (B) 1X	(1) Place part #B on the storage panel #G & #F, align the screw holes, and secure with 6 gaskets and bolts #X1 as shown. 
 M4x10 (X1) 6X	
 (U) 2X	(2) Use bolt #W1 and nut #U to connect part #V with the bracket under the lid. 
 (W1) 2X	
7	

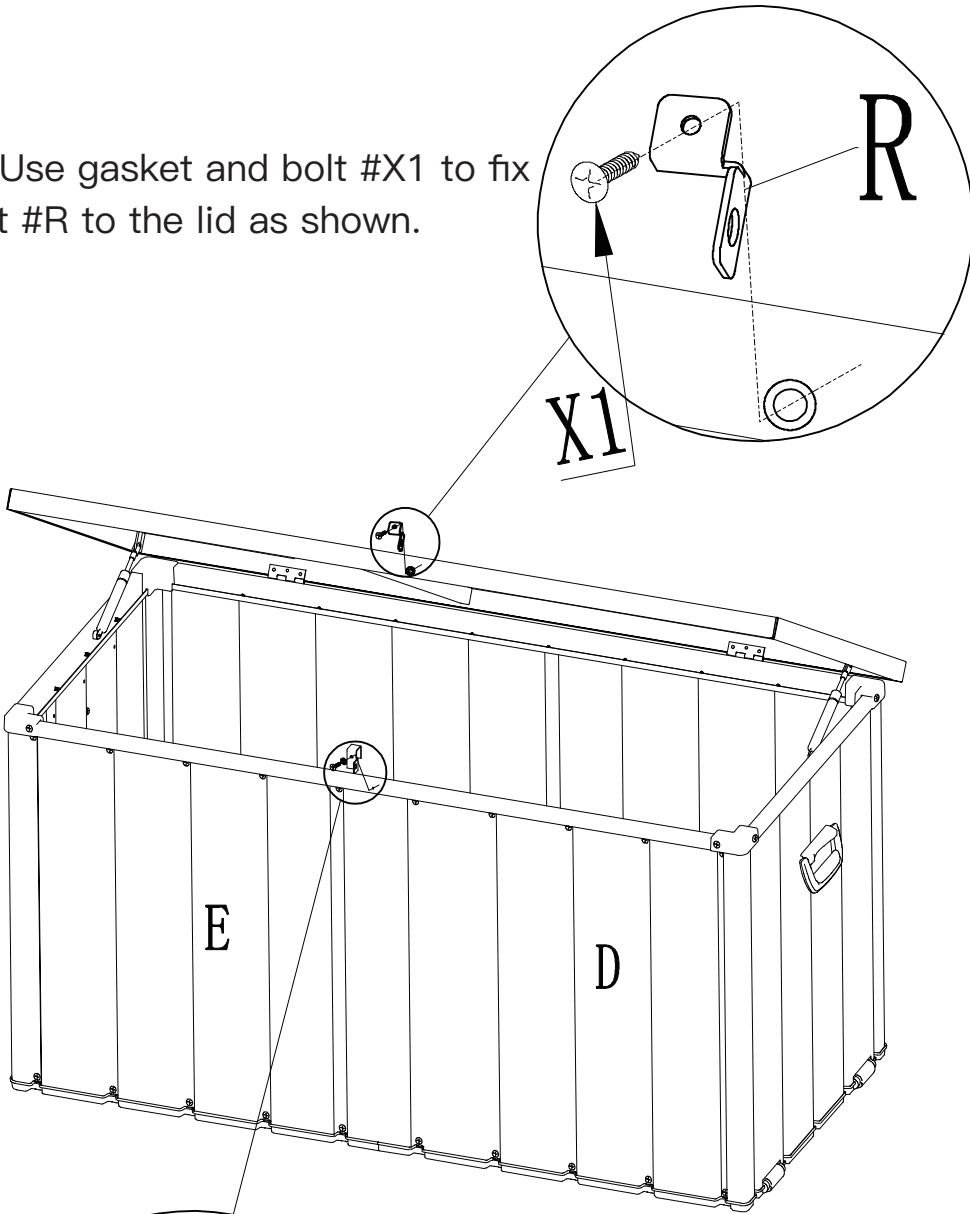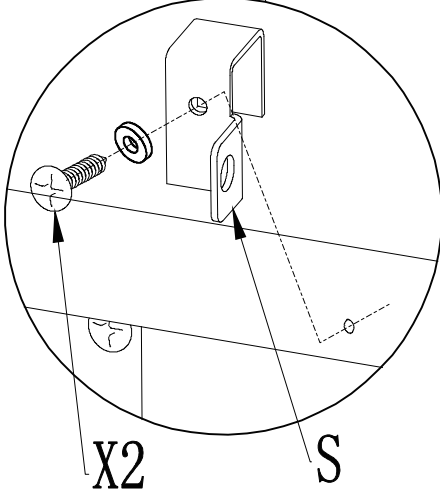 R 1X	
 S 1X	(1) Use gasket and bolt #X1 to fix part #R to the lid as shown.
 X1 M4x10 1X	
 X2 St4x8 1X	
	  (2) Use gasket and bolt #X2 to fix part #S to the storage frame as shown.
8	



CARE & SAFETY

It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.

Wear safety goggles and always follow the manufacturer's instructions when using power tools.

Hot items such as recently used grills, blowtorches, etc., must not be stored in the box.

Not designed for carrying items.

Do not stand on lid.

To prevent risk of suffocation, do not allow children to play inside the box.

IF THERE ARE MISSING OR BROKEN PARTS, PLEASE DO NOT RETURN THE PRODUCT DIRECTLY.

Please log onto our website, or contact Customer Service.