


HALL TREE

Assembly Instructions-Please keep for future reference

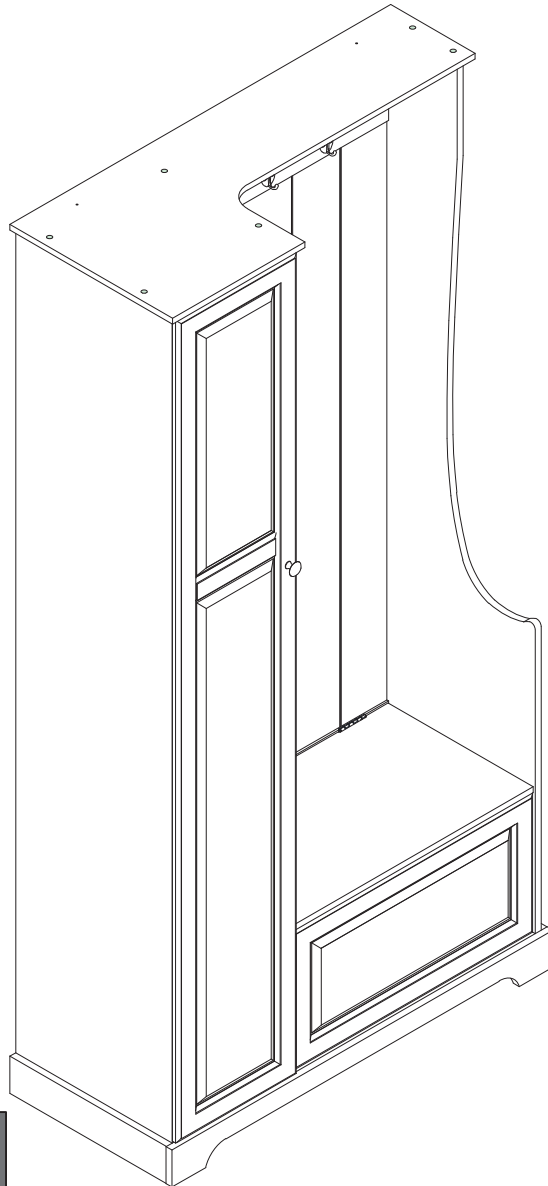

Dimensions

Width-35.43inch
Depth-15.35inch
Height-70.47inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the malecamlock as diected inthe assembly instructionsusing a scewdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

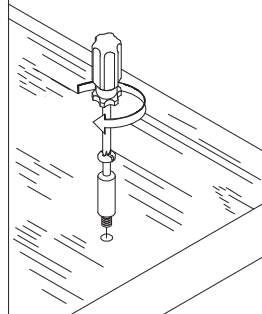

Step 2

Push the male camlock into the entry hole.

2

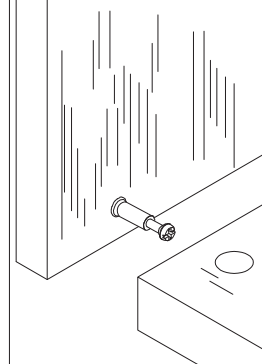


Step 3

Insert the femalecamlock as shown in theinstruction.

Note: ensure that thearrow on the top of thecamlock points towardsthe entry hole for themale camlock.

3

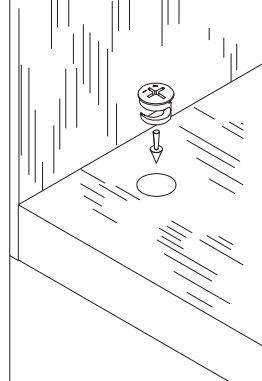


Step 4

Turn the female camlock clockwise with ascrewdrive.r


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

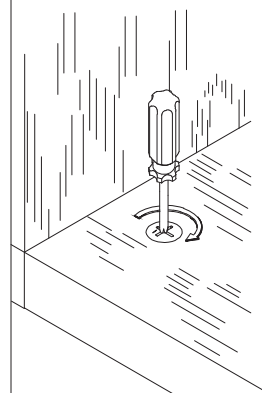

Assembly Instructions

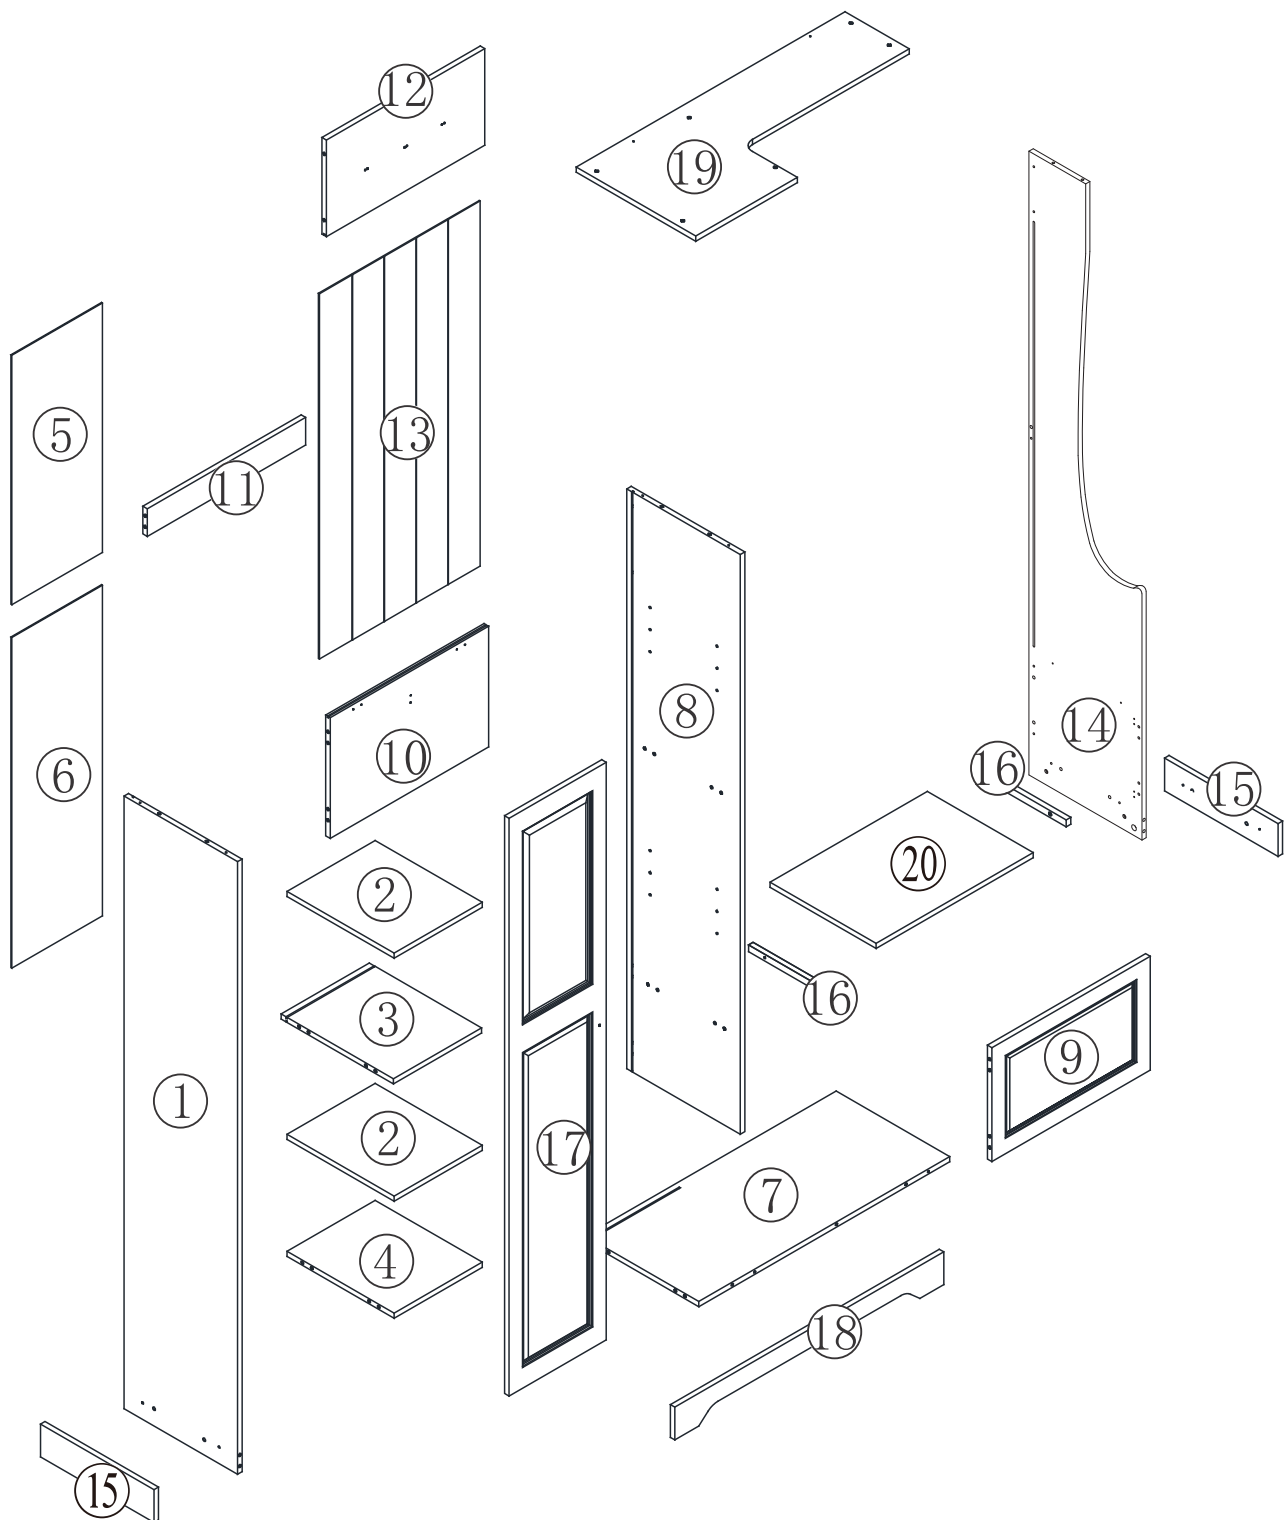

Assembly Instructions

There are 1 boxes of this product


BOX-1: N721P484458

① 1




1773x371x14

② 2



252x332x12

③ 1



258x371x12

④ 1



258x341x12

⑤ 1



680x266x5

⑥ 1



1021x266x5

⑦ 1




847x371x14

⑧ 1



1697x371x14

⑨ 1



575x290x14

⑩ 1




575x304x14

⑪ 1




575x75x12

⑫ 1



575x200x14

⑬ 1



1203x584x5

⑭ 1



1773x(371+186)x14

⑮ 2



371x76x14

⑯ 2




331x20x9

⑰ 1




1690x286x14

⑱ 1



904x76x14

⑲ 1

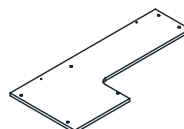

903x(386+200)x12

⑳ 1






569x344x14


HARDWARE LIST/LISTE DU MATÉRIEL-N721P484458

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 27+1	(B)  Cam lock 27+1	(C)  6*30mm Dowel x 42+ 3	(D)  4*40mm Screw x 10+ 1
(E)  x 1	(F)  4*20mm Screw x 1	(G)  4*22mm Screw x4	(H)  Hinge x 3
(I)  3.9*12mm Screw x 40+ 3	(J)  x 8	(K)  x 3	(L)  x 1
(M)  x 2	(N)  x 4	(O)  x 12+ 1	(P)  3*14mm Screw x 12+ 1
(Q)  Q1  Q2 x 2	(S)  4*18mm Screw x4	(T)  4*12mm Screw x 16+1	(U)  6*20mm Dowel x 4

Tools required




Phillips screwdriver
(medium & large)




Assembly Instructions

Step 1

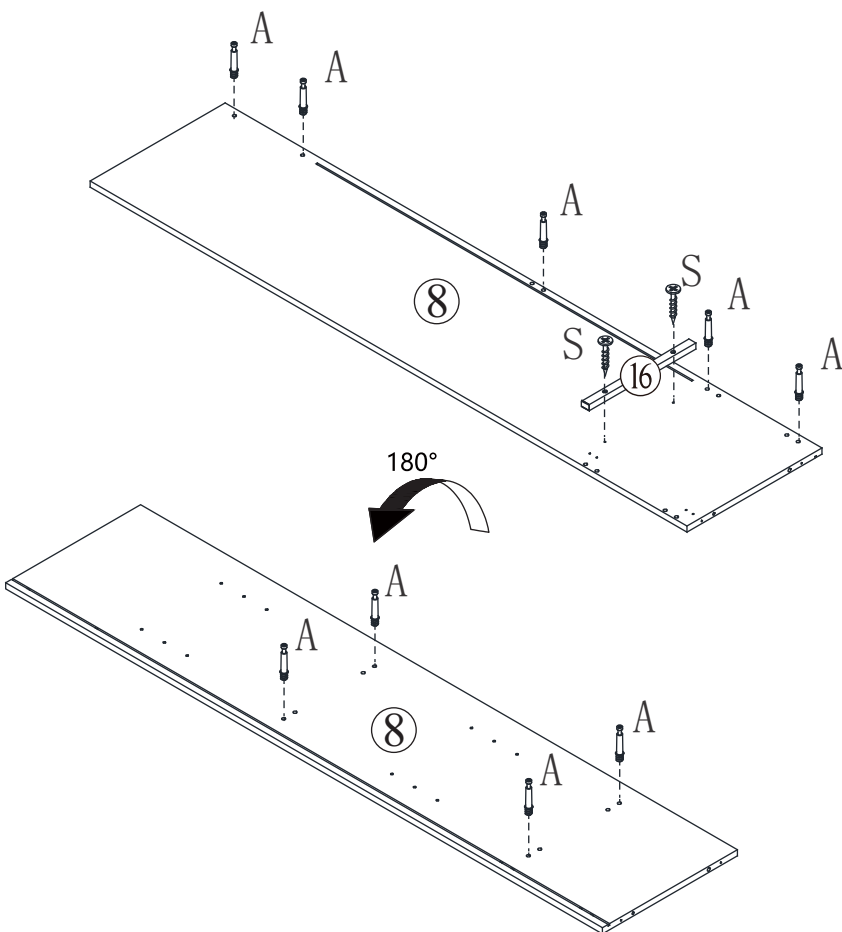


8		1
16		1
A		9
S		2

Step 2

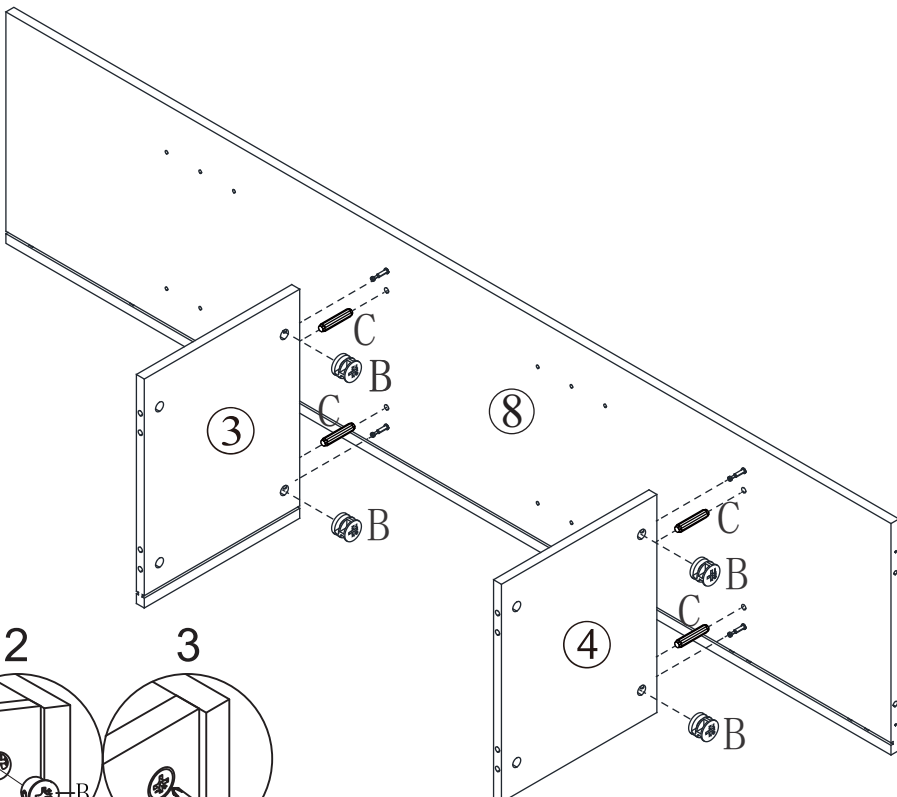



3		1
4		1
B		4
C		4

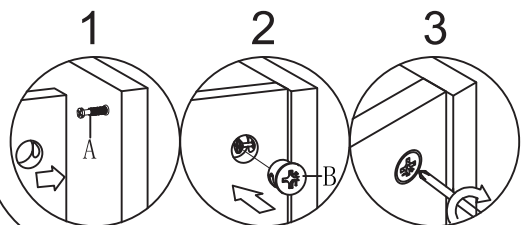


Assembly Instructions


Step 3

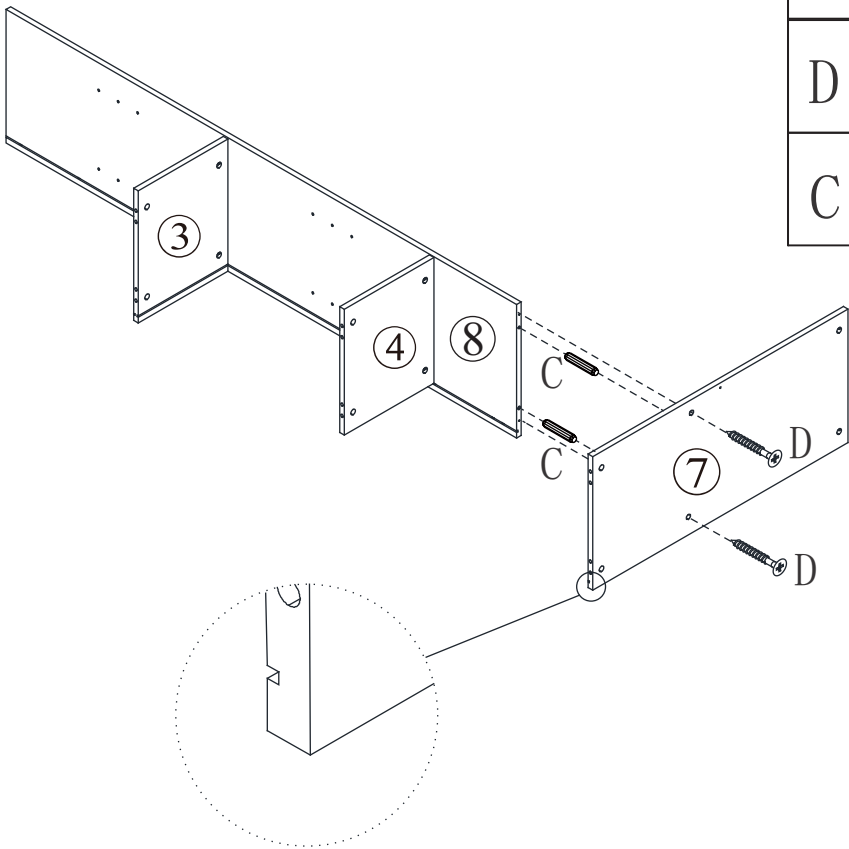

7		1
D		2
C		2



Step 4

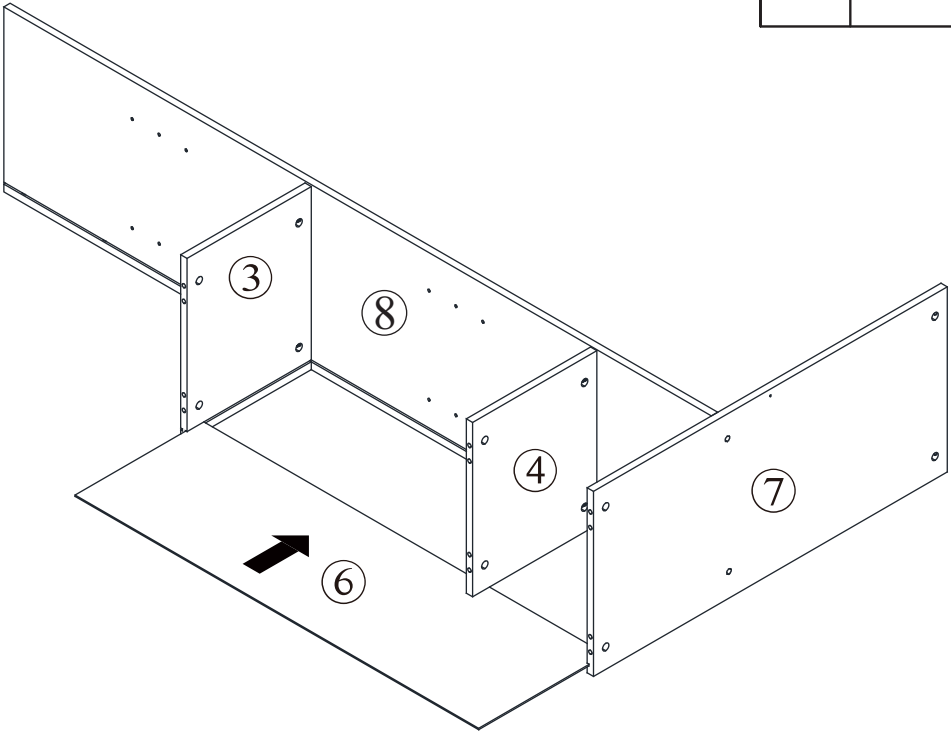


6		1
---	---	---

Assembly Instructions



Step 5

1		1
A		6

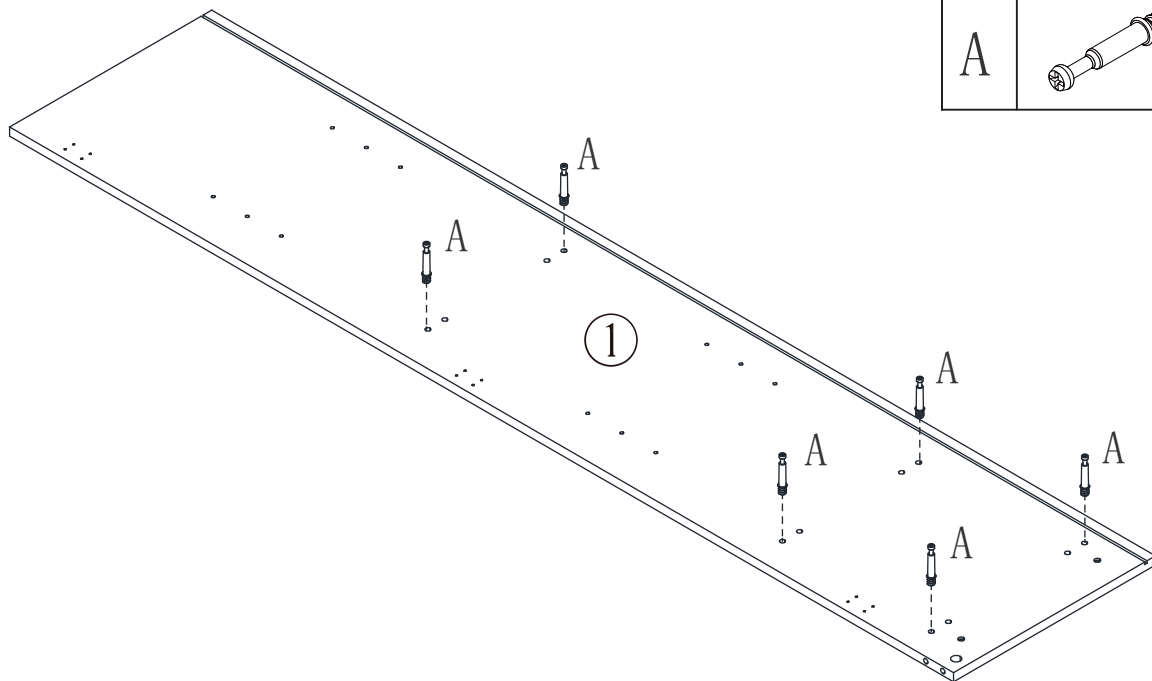


Step 6

B		6
C		6

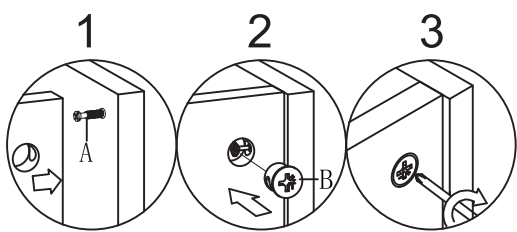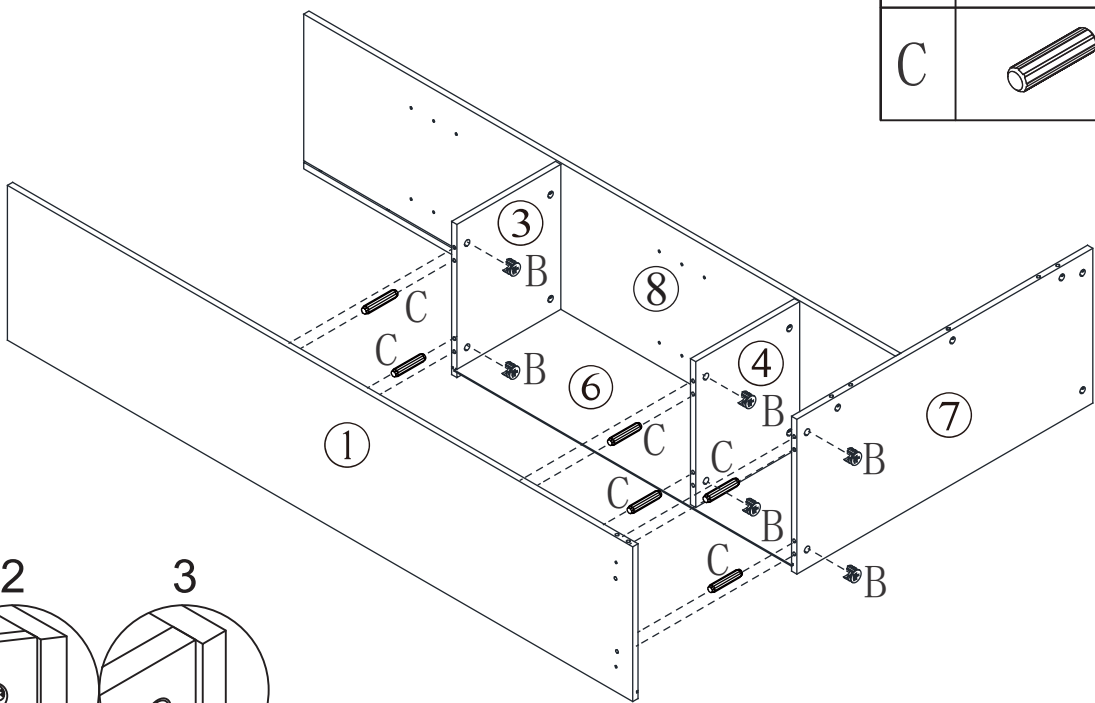


Assembly Instructions


Step 7

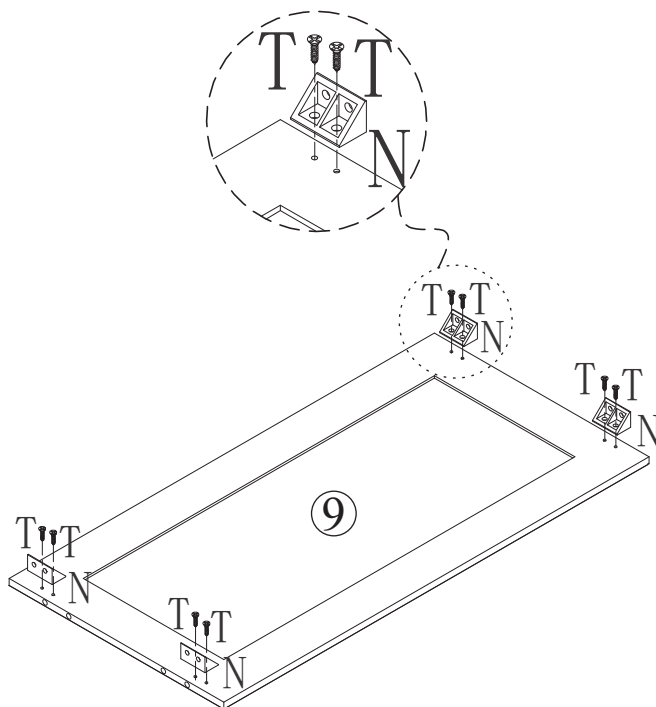

9		1
N		4
T		8

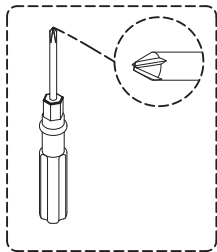

Step 8


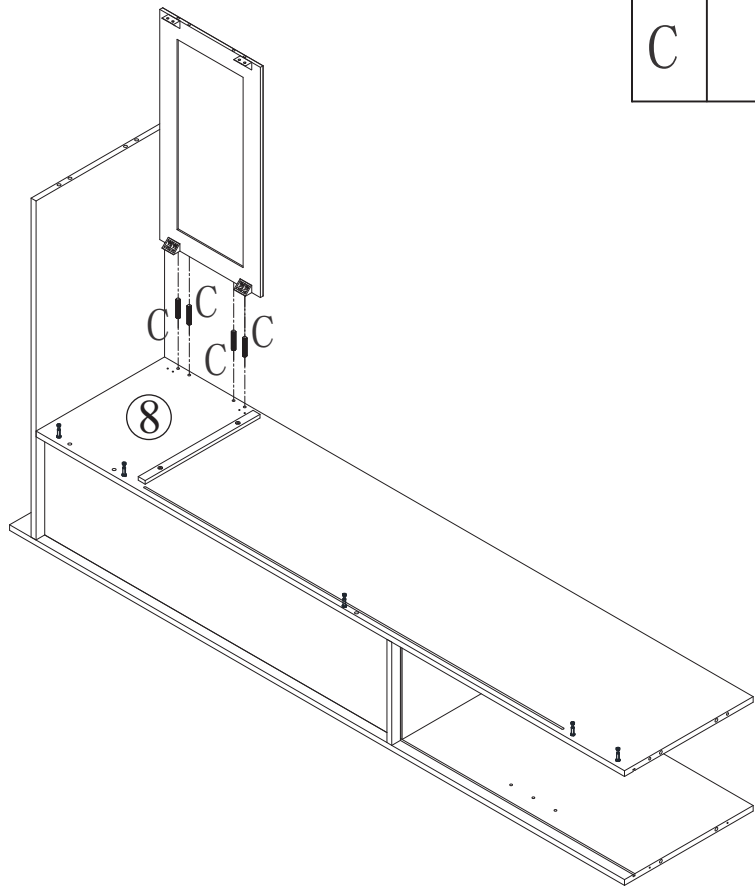


C		4
---	--	---

Assembly Instructions


Step 9

T		4
---	---	---

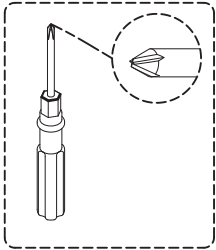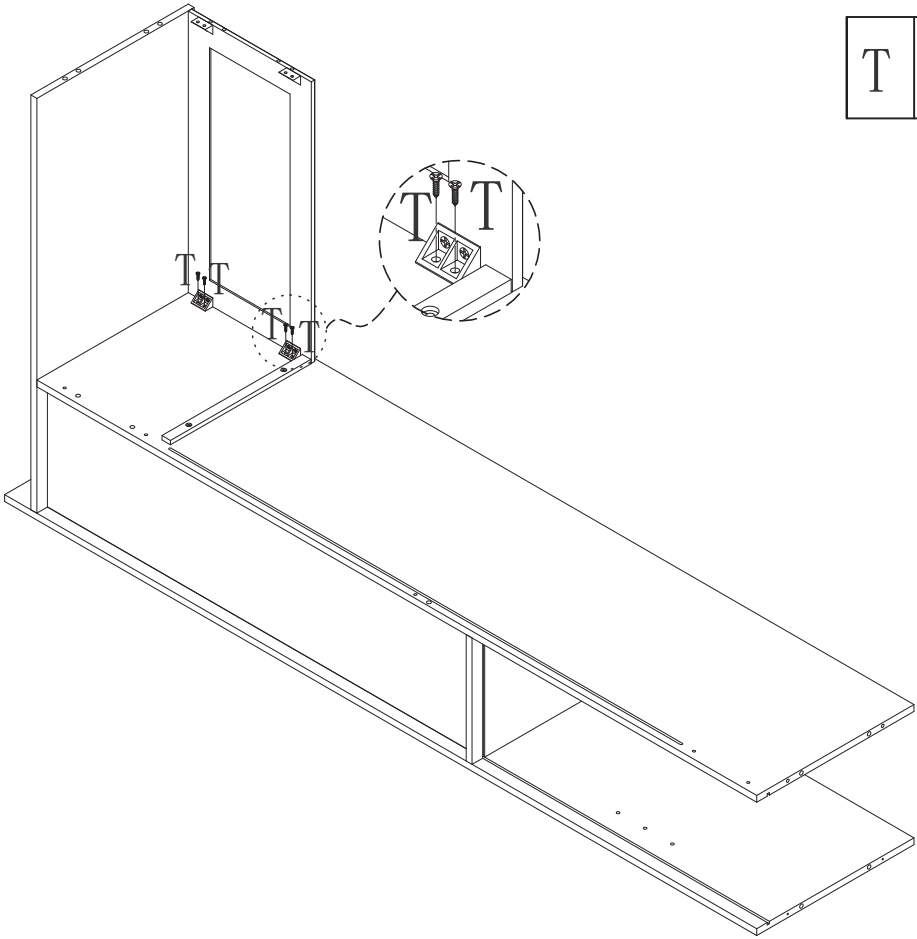


Step 10

10		1
11		1
12		1
C		3

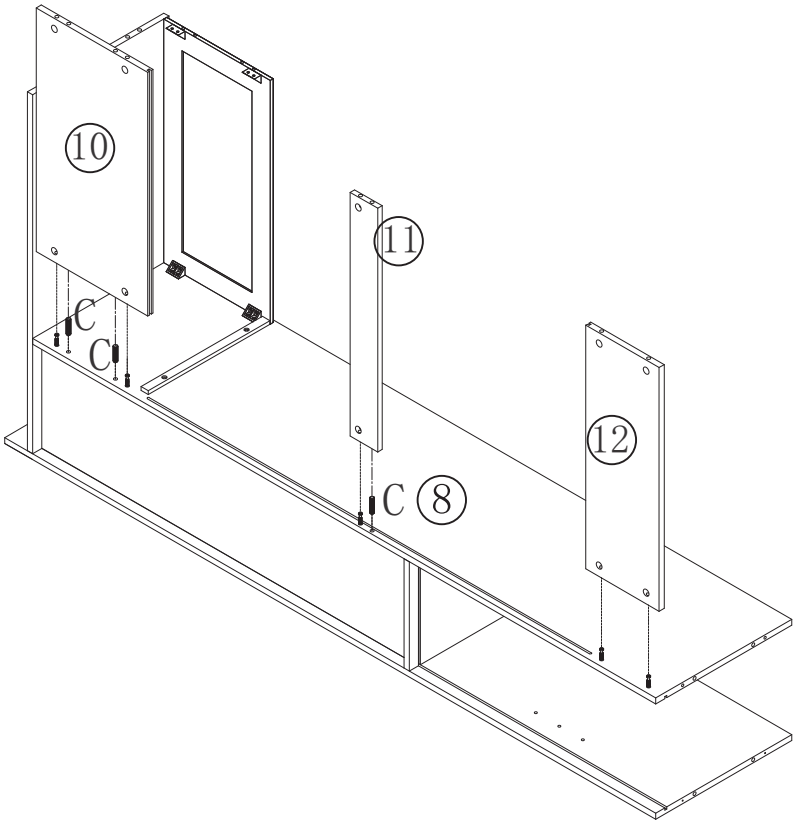


Assembly Instructions


Step 11

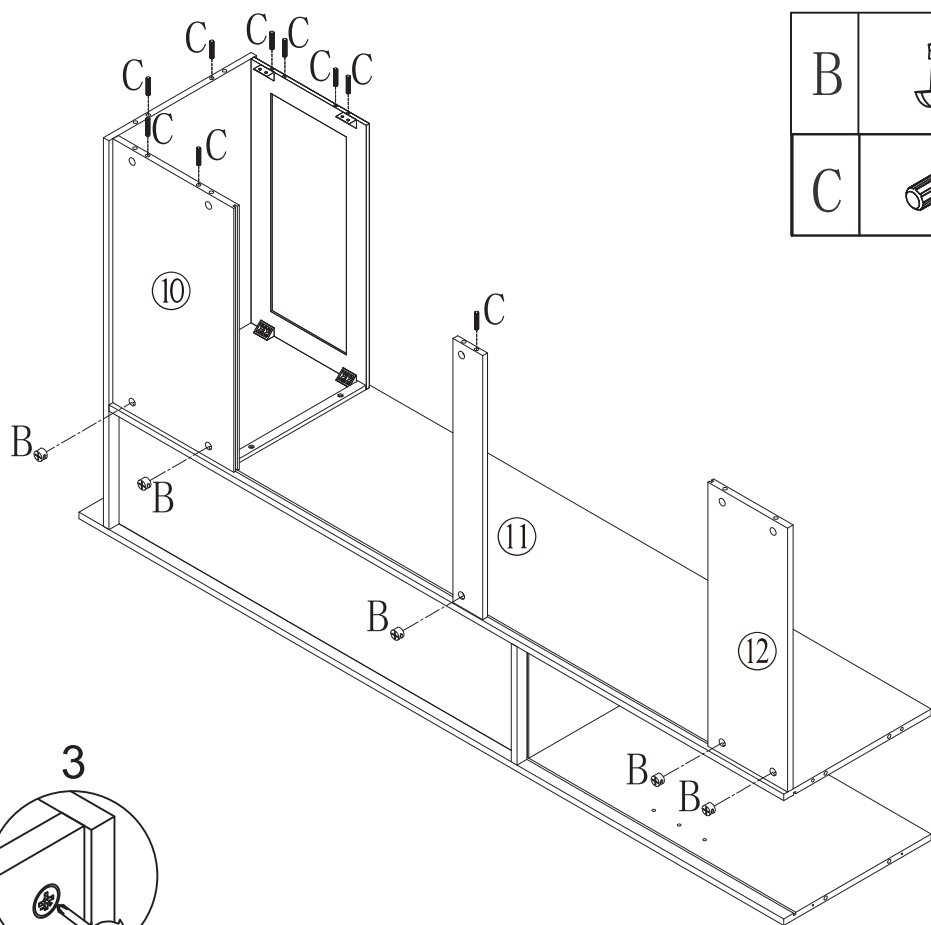


B		5
C		9

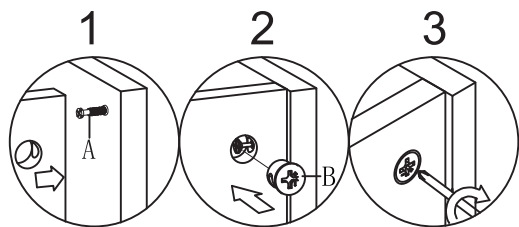


Step 12

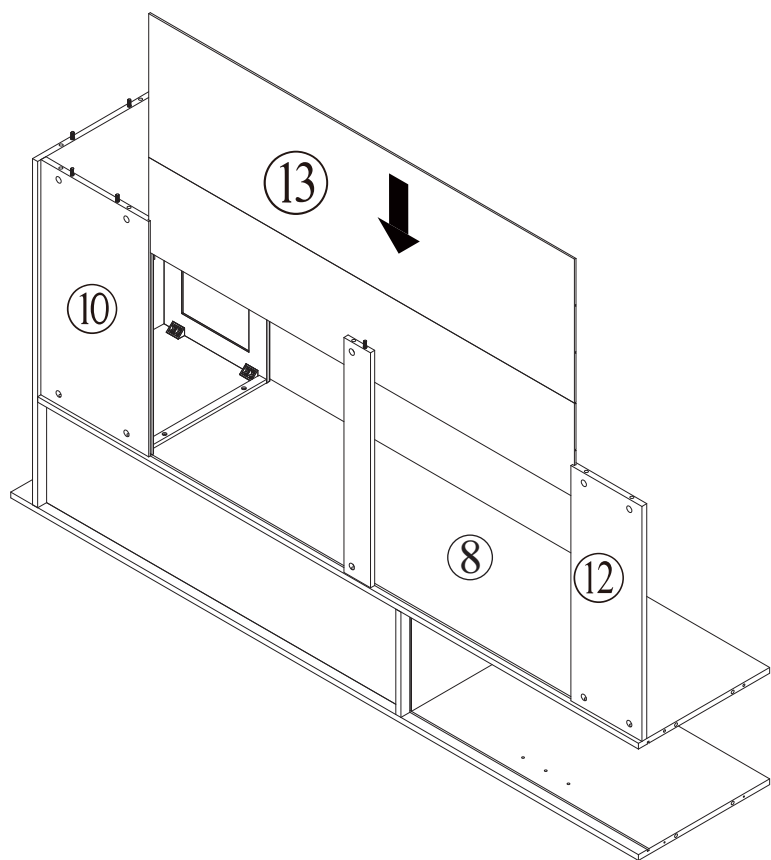


13		1
----	---	---

Assembly Instructions


Step 13

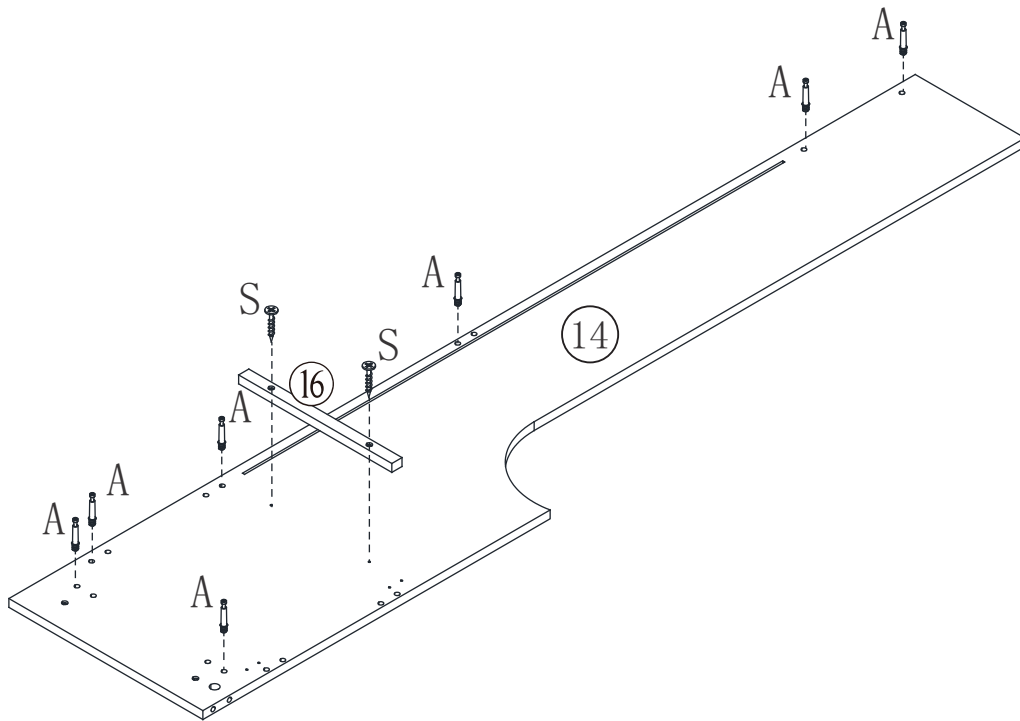


14		1
16		1
A		7
S		2

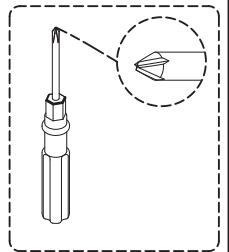

Step 14

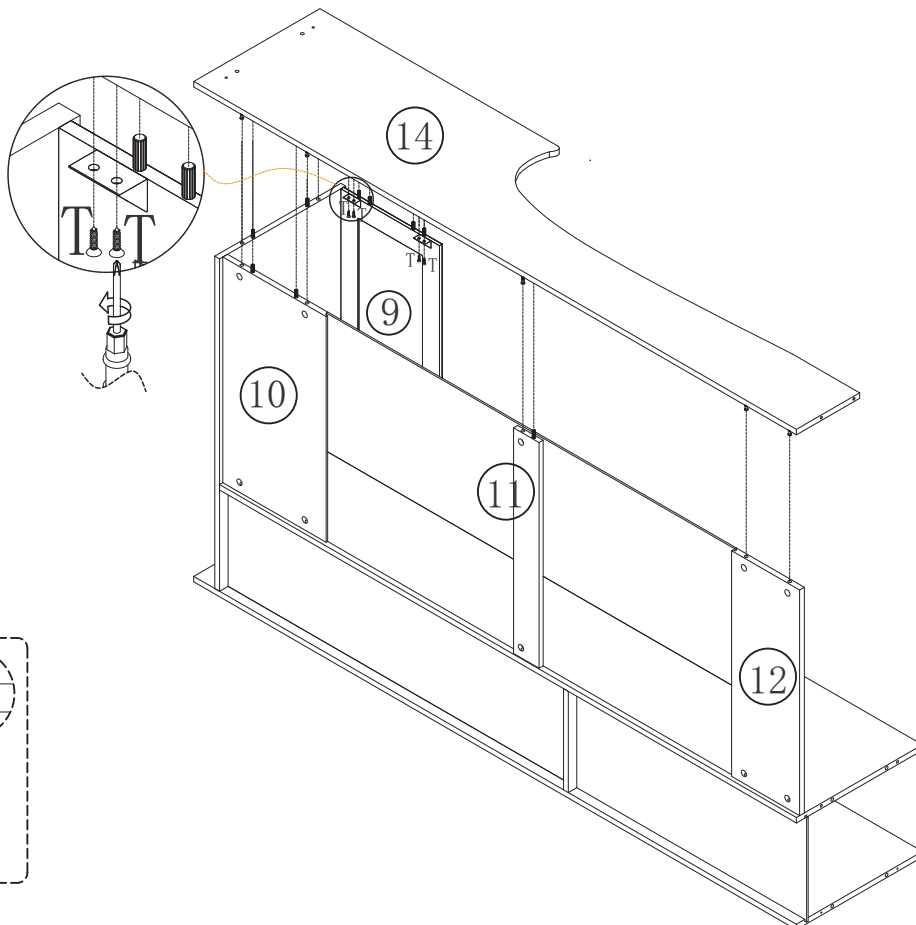



T		4
---	--	---

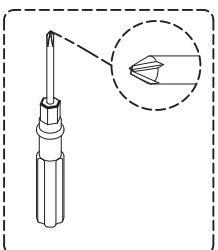

Assembly Instructions

Step 15


B		7
---	---	---

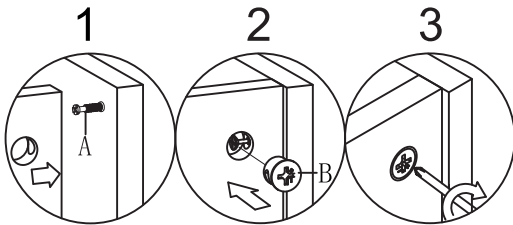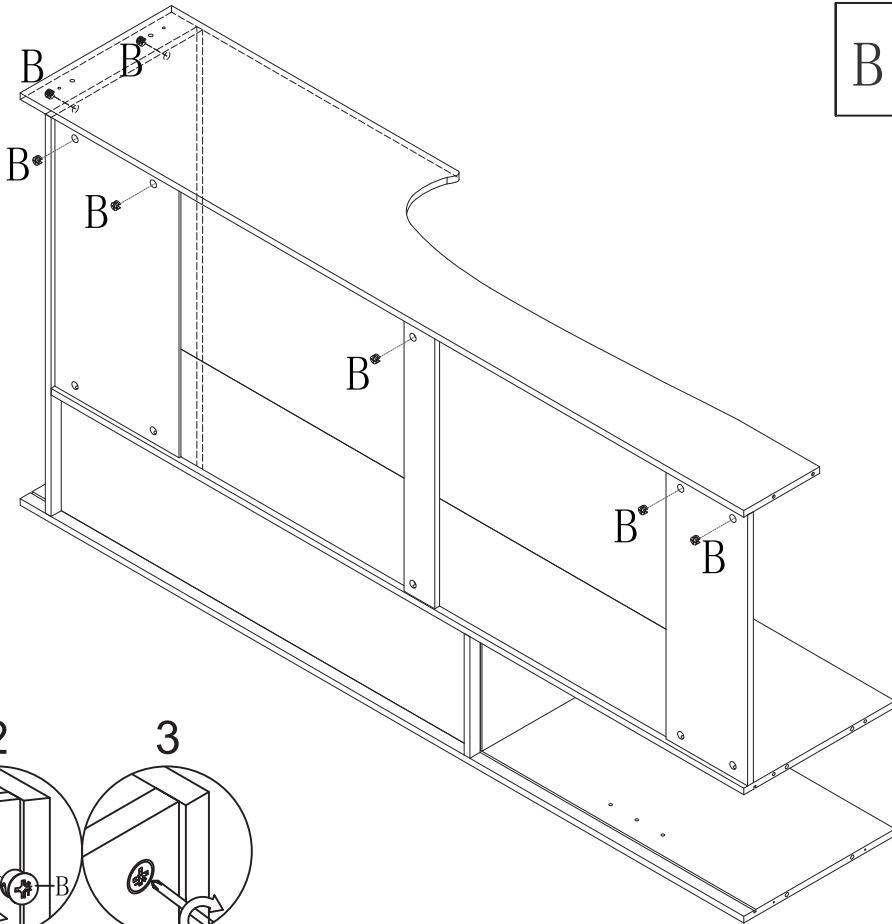

Step 16





It's better if 2 persons work together in this step.

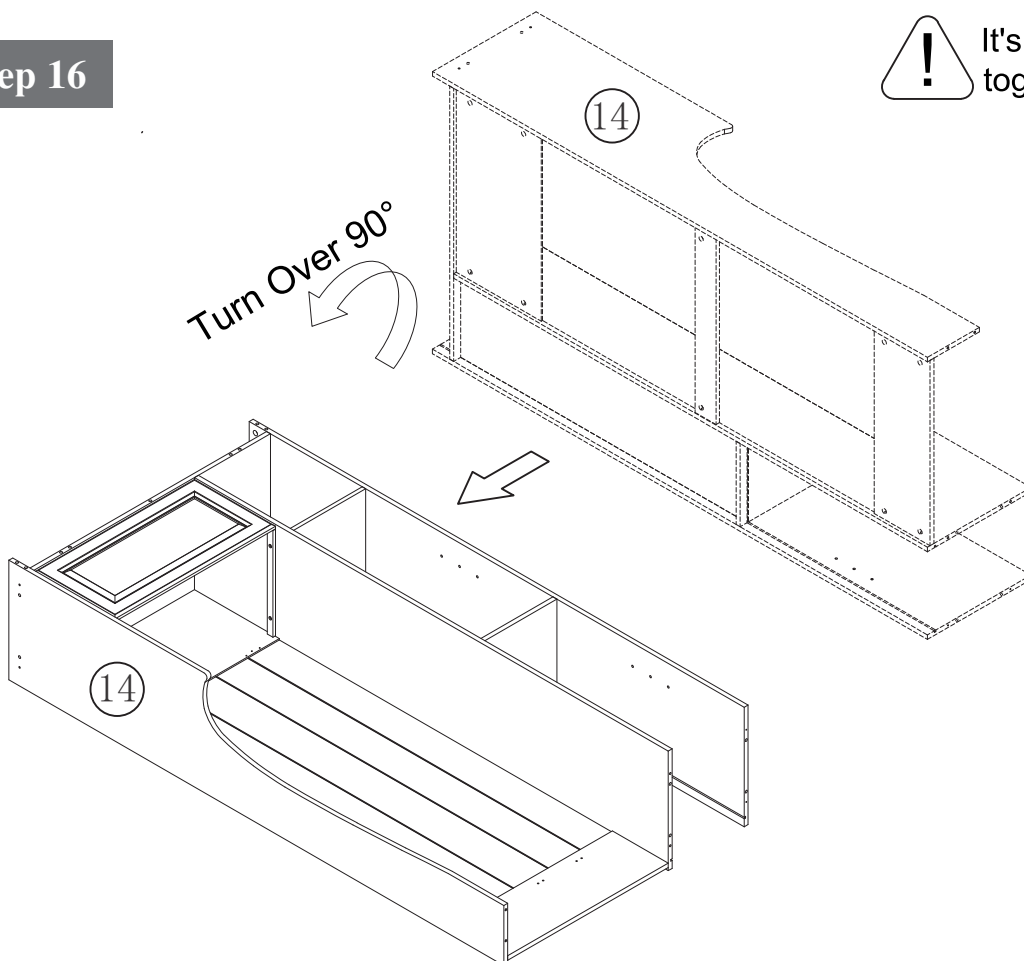



Assembly Instructions



Step 17

5		1
C		4

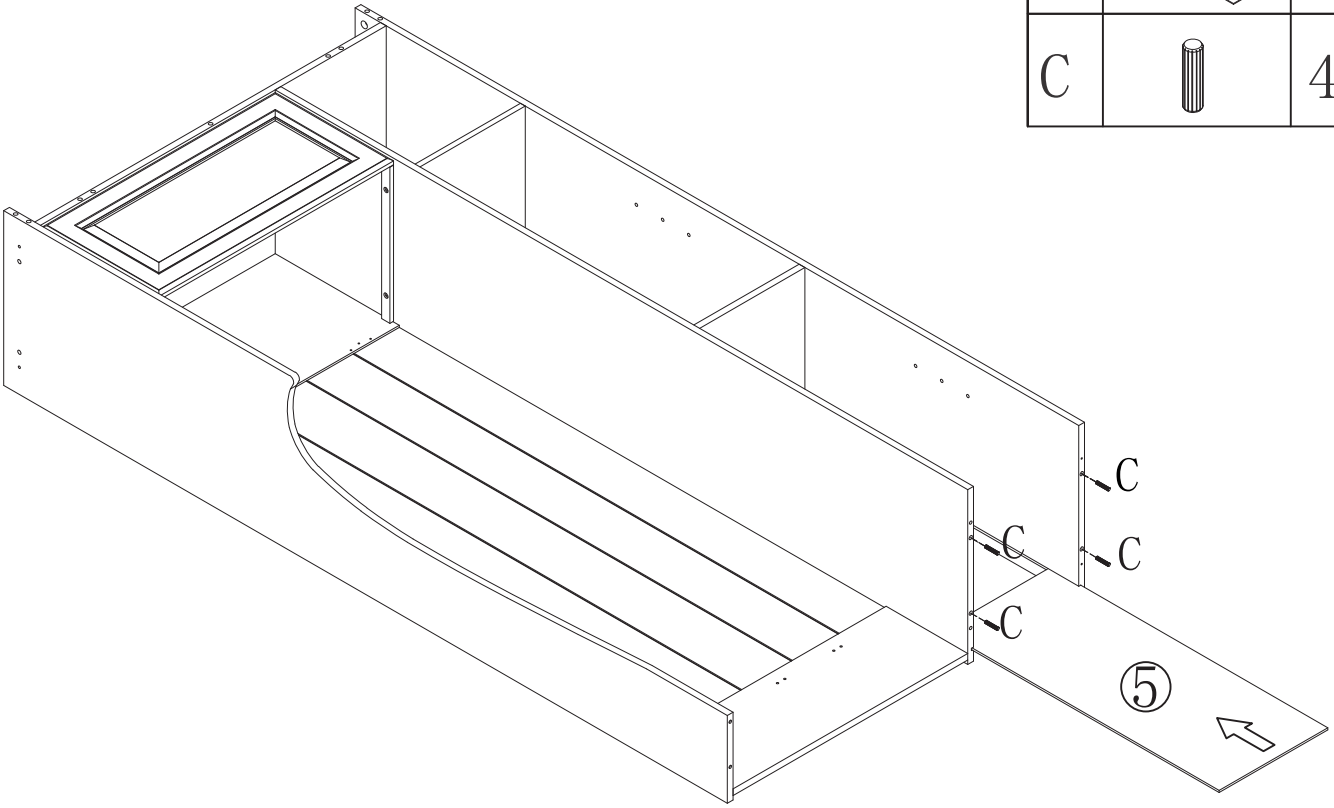


Step 18

19		1
Q1		2
I		2

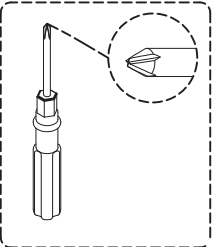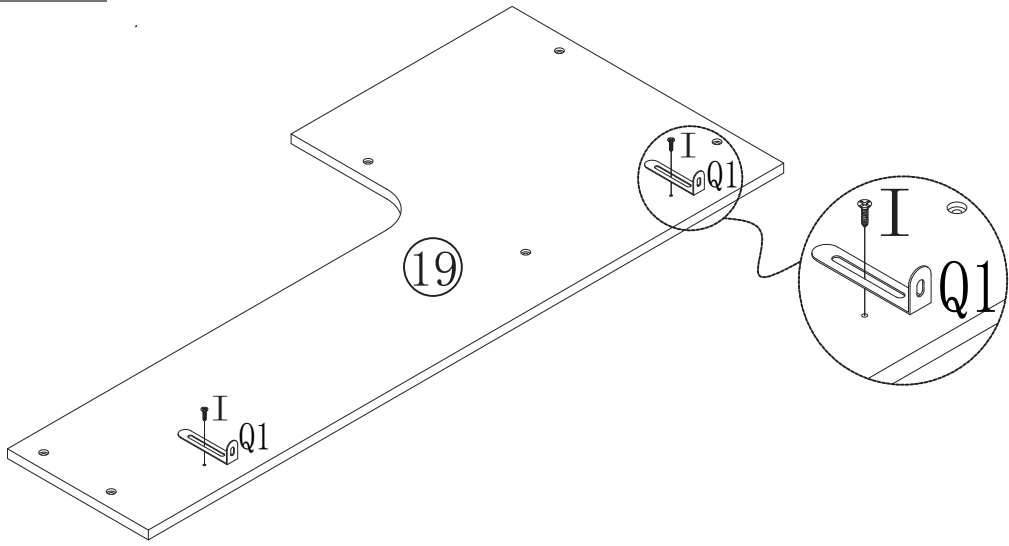


Assembly Instructions

Step 19

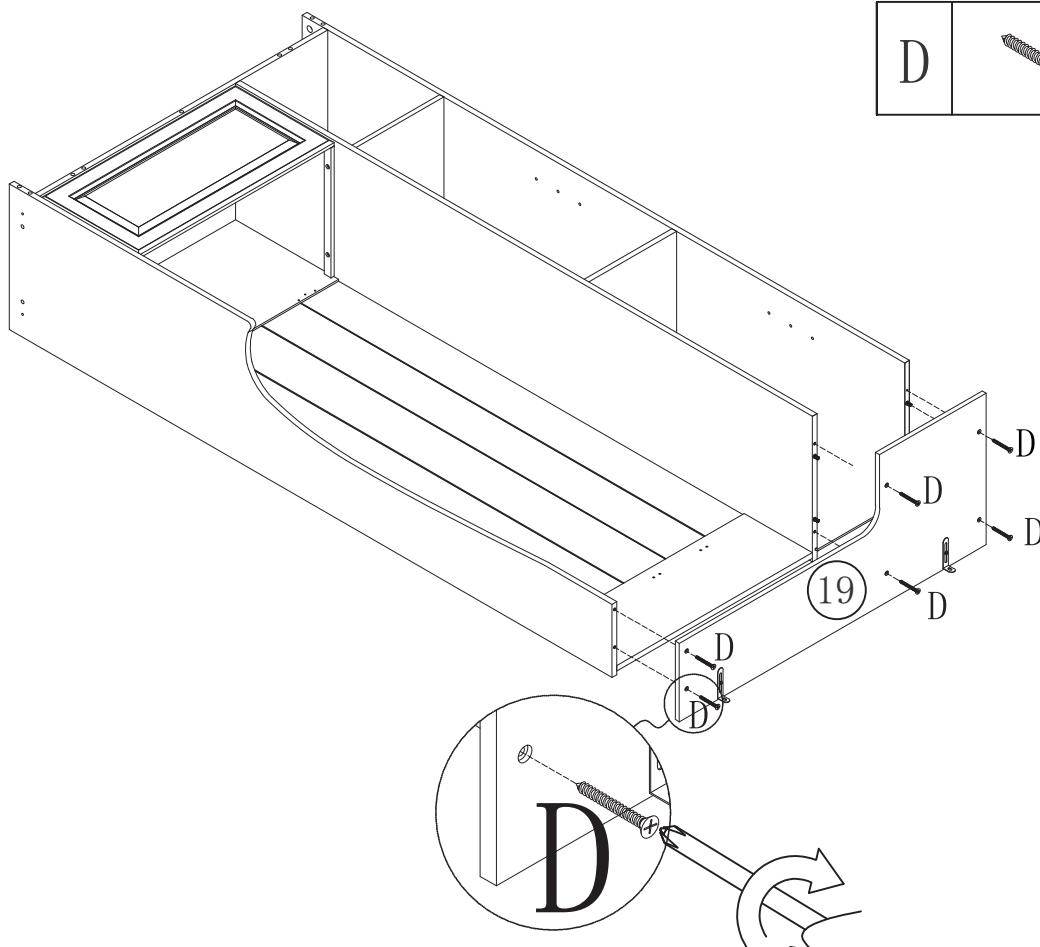

D		6
---	---	---


Step 20


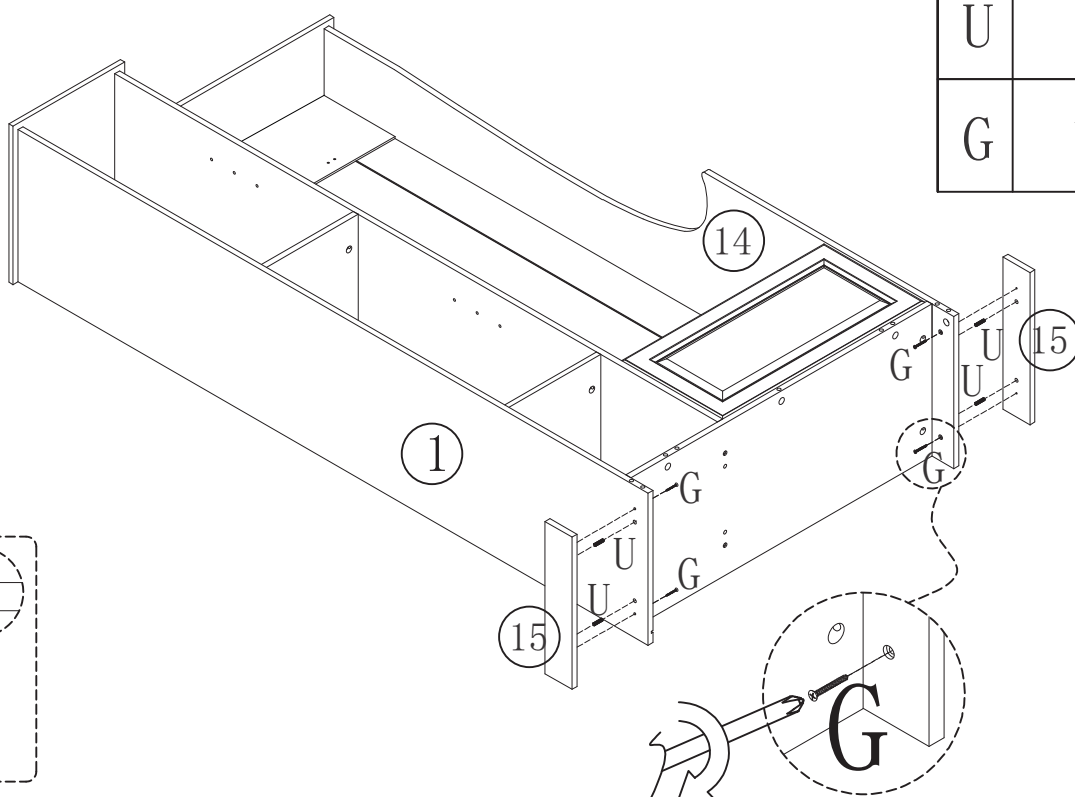


15		2
U		4
G		4

Assembly Instructions



Step 21

18		1
A		5

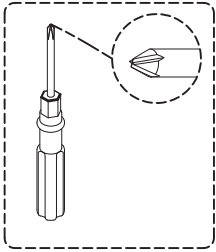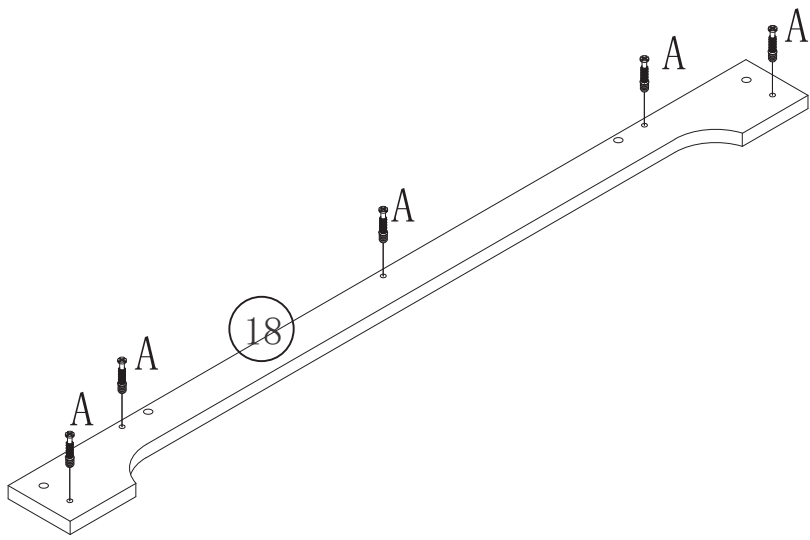


Step 22

C		4
B		5

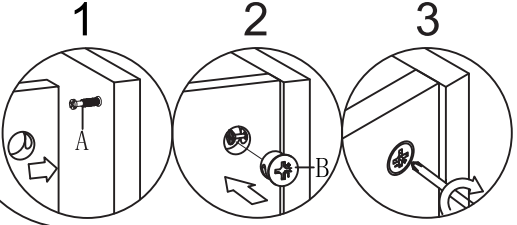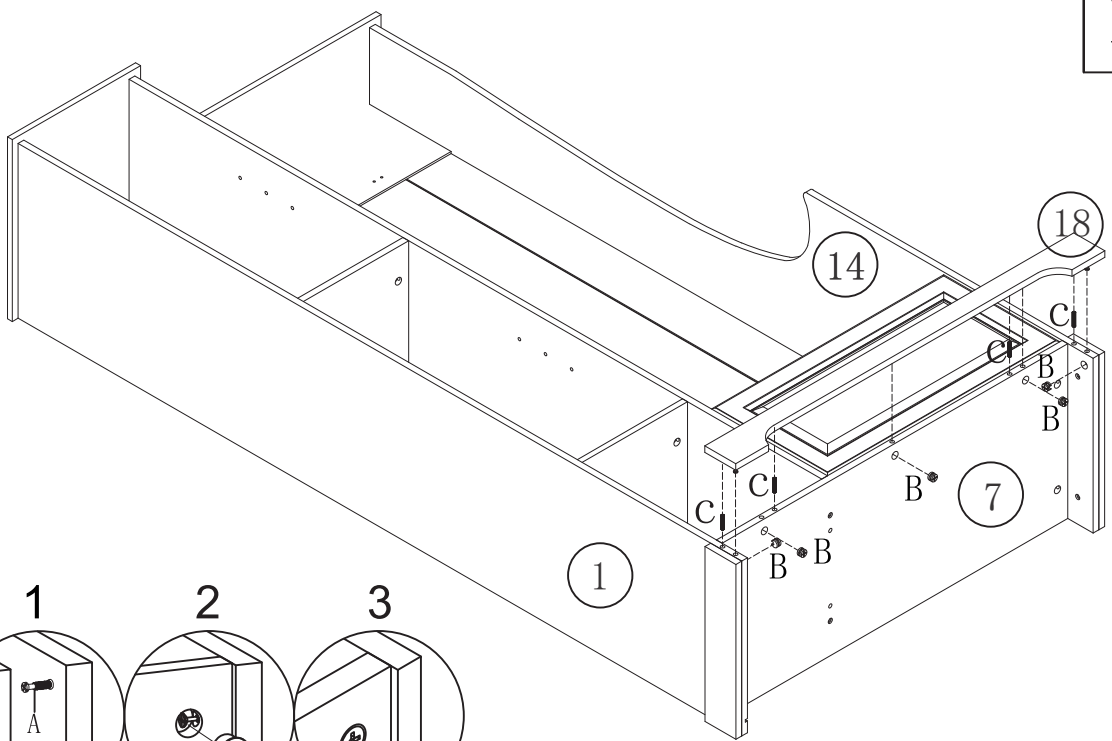

Assembly Instructions


Step 23

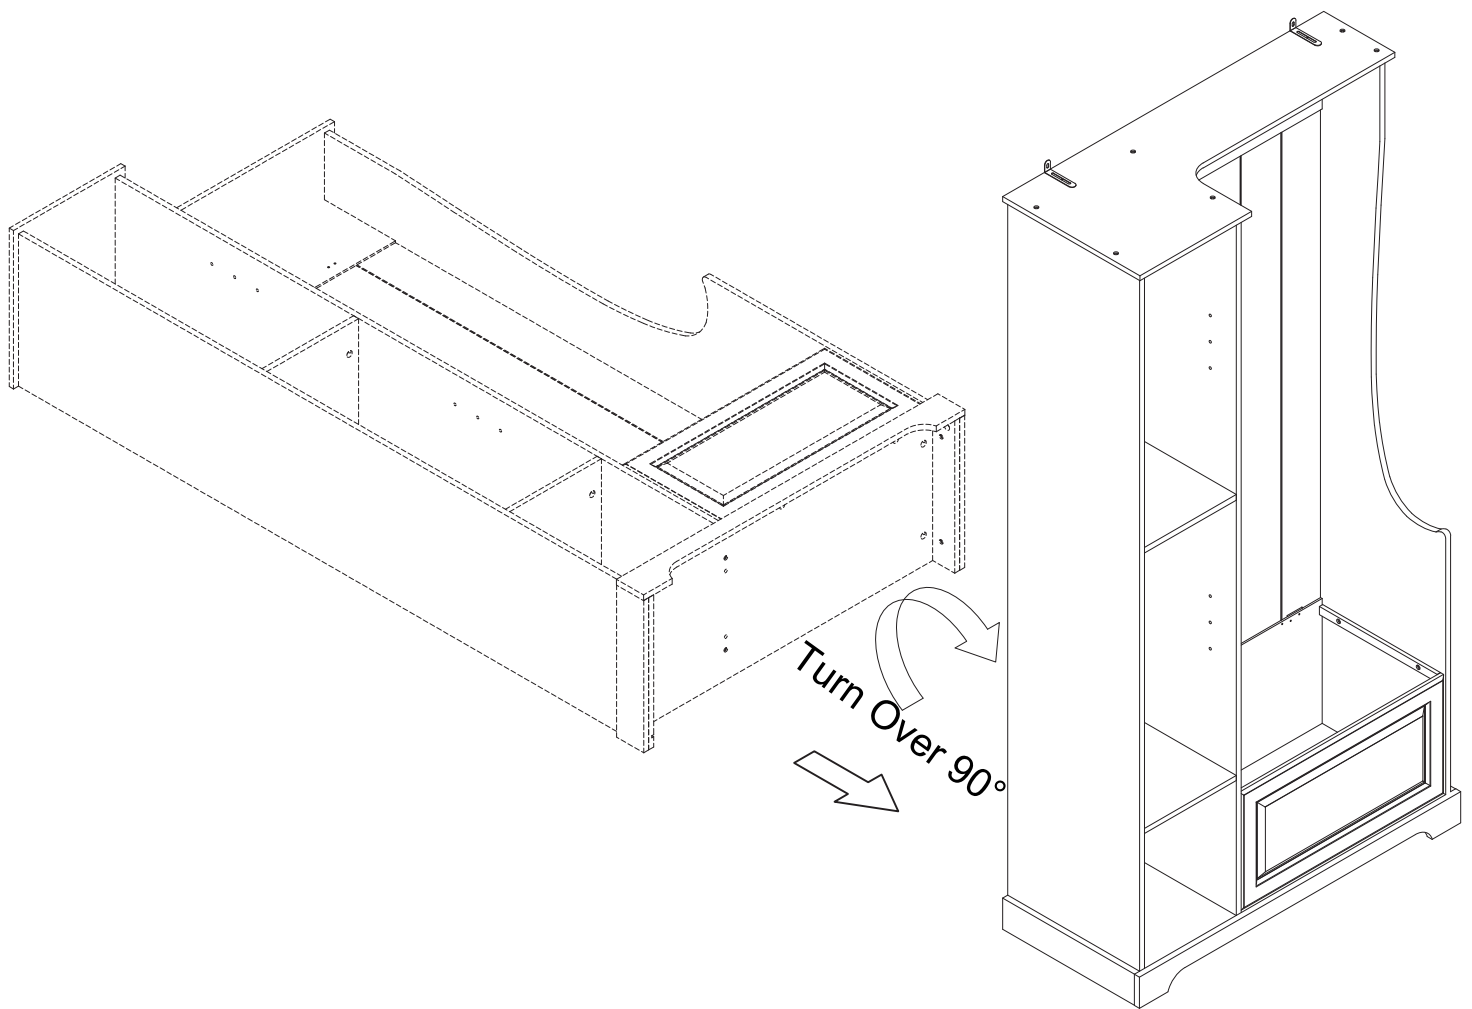

It's better if 2 persons work together in this step.


Assembly Instructions

Step 24

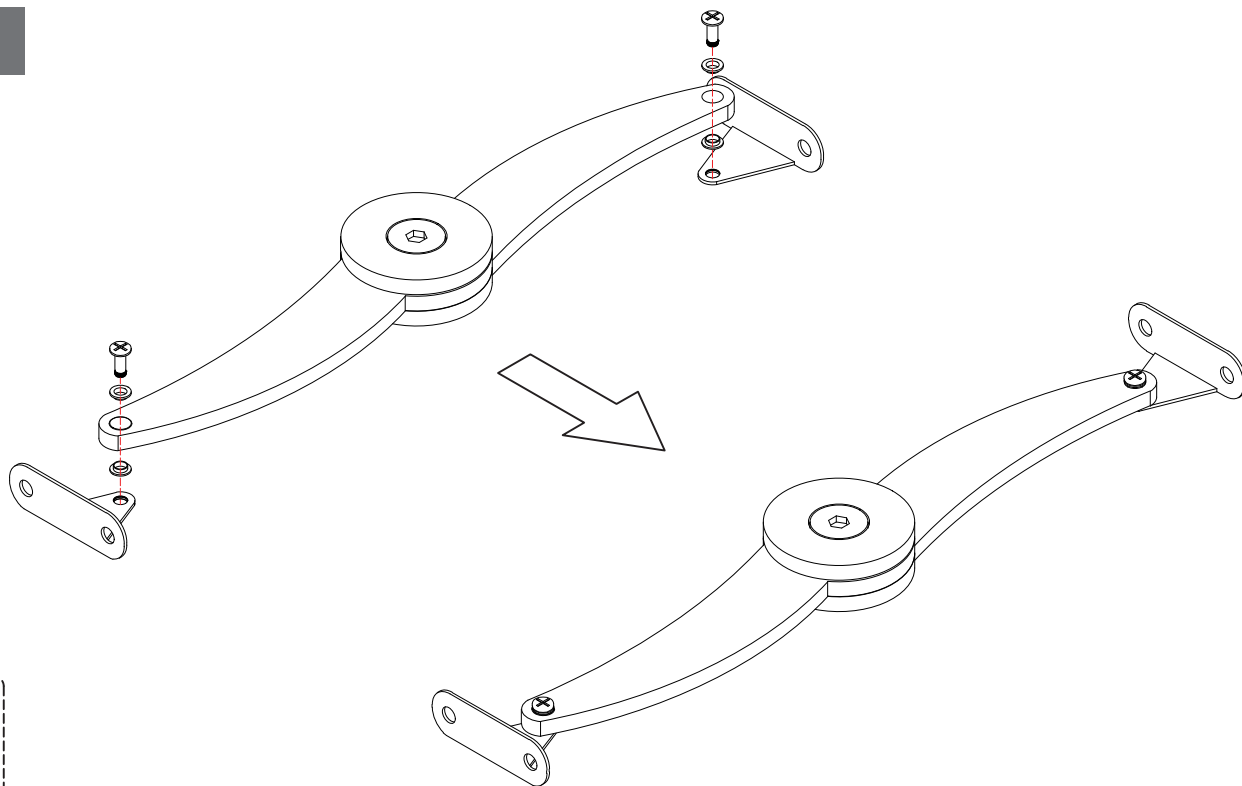

Free Stop Assembly Diagram (For Reference)

Step 25

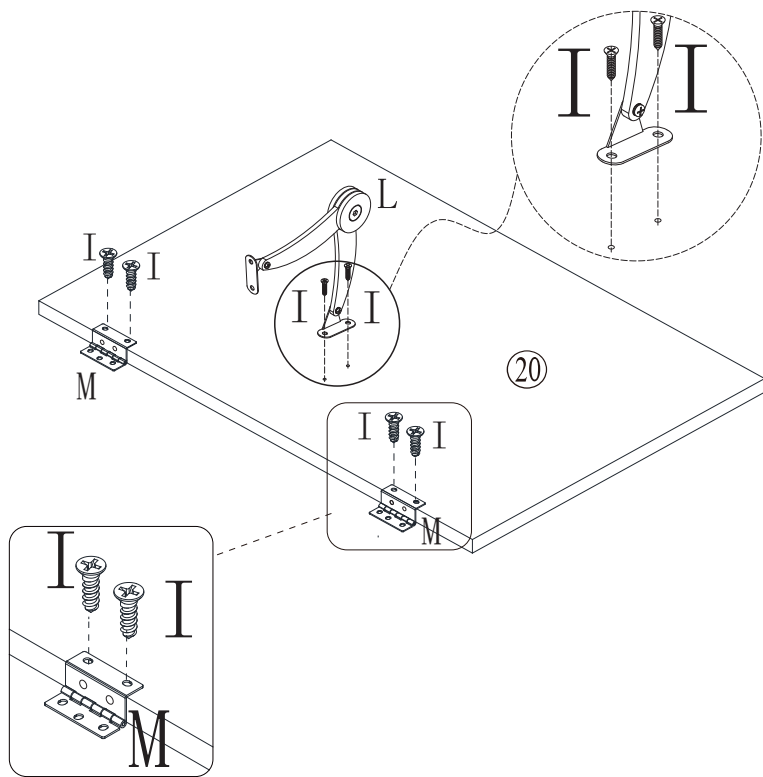



20		1
L		1
M		2
I		6

Assembly Instructions



Step 26





It's better if 2 persons work together in this step.

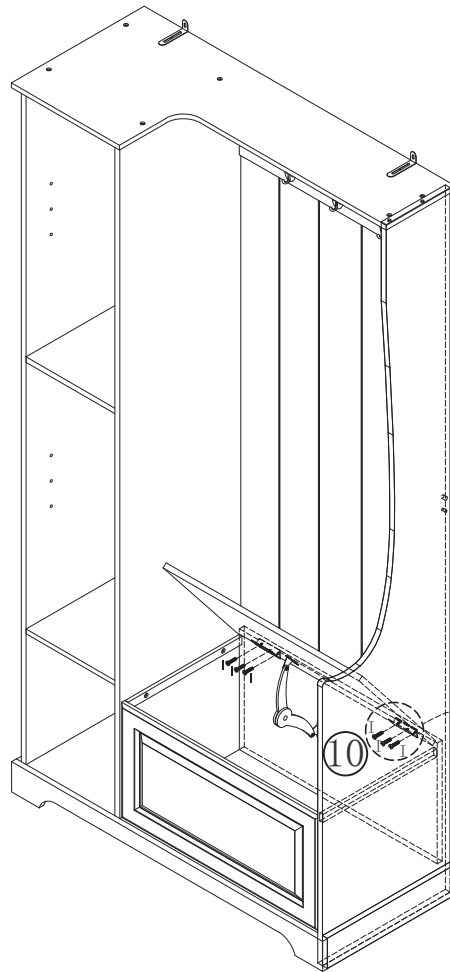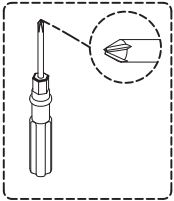



I		6
---	--	---

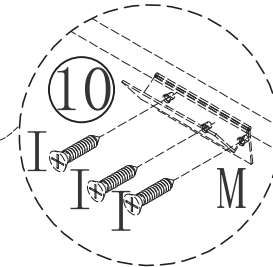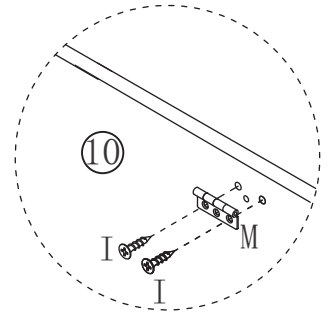

Step 27

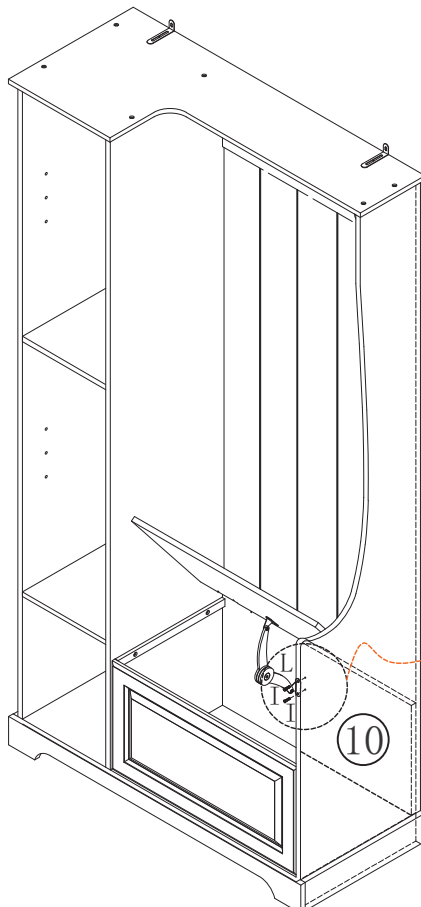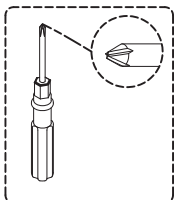


I		2
---	--	---

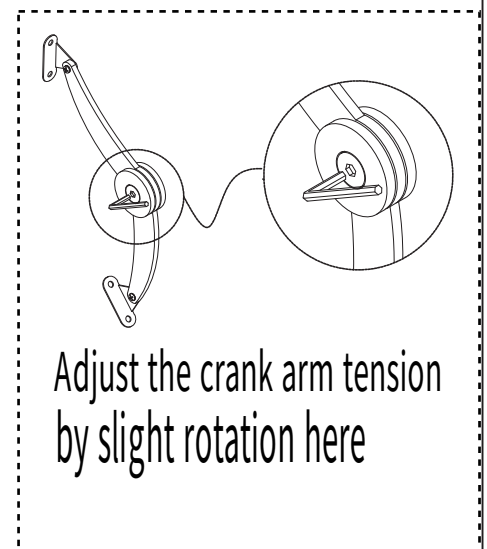
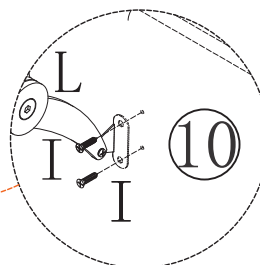


Assembly Instructions


Step 28

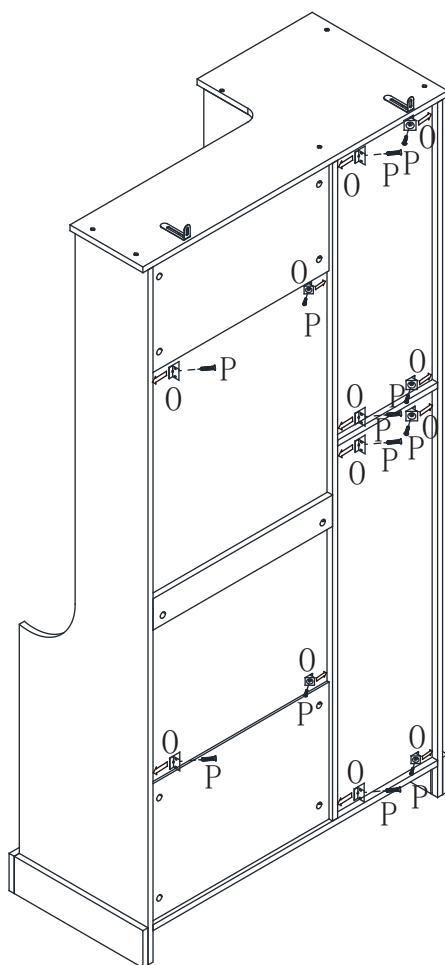


0		12
P		12

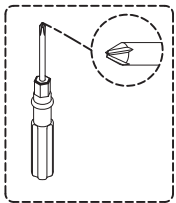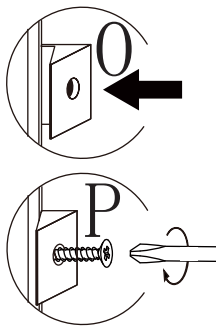

Step 29

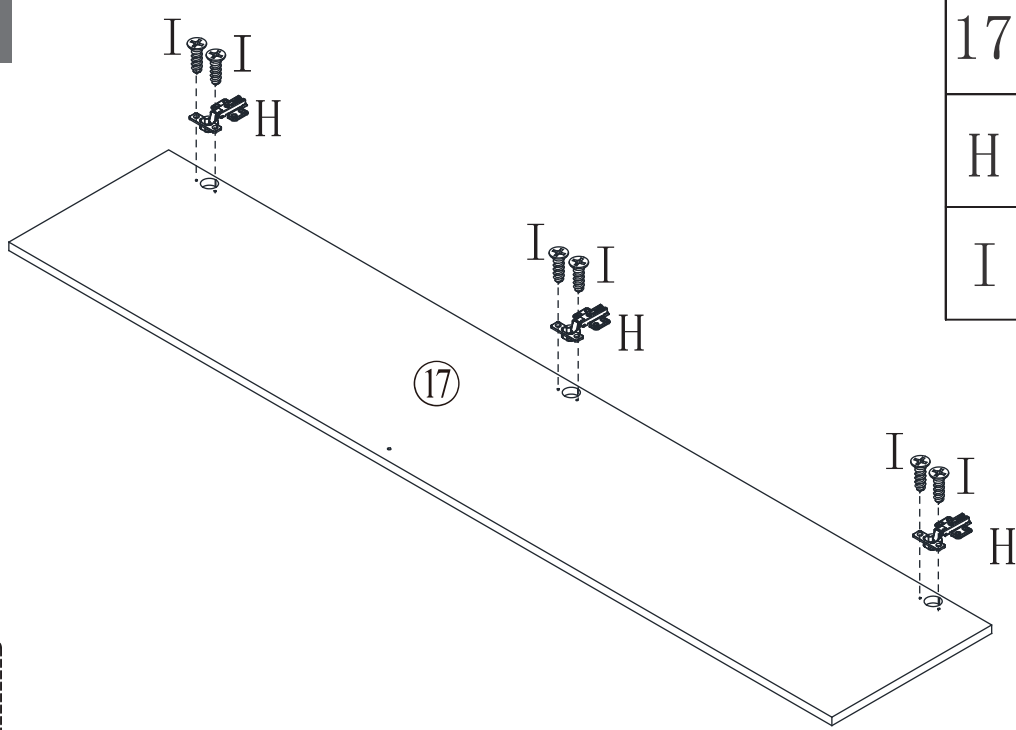


17		1
H		3
I		6

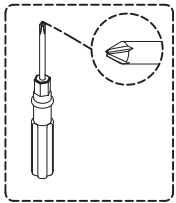

Assembly Instructions


Step 30

E		1
F		1
I		12


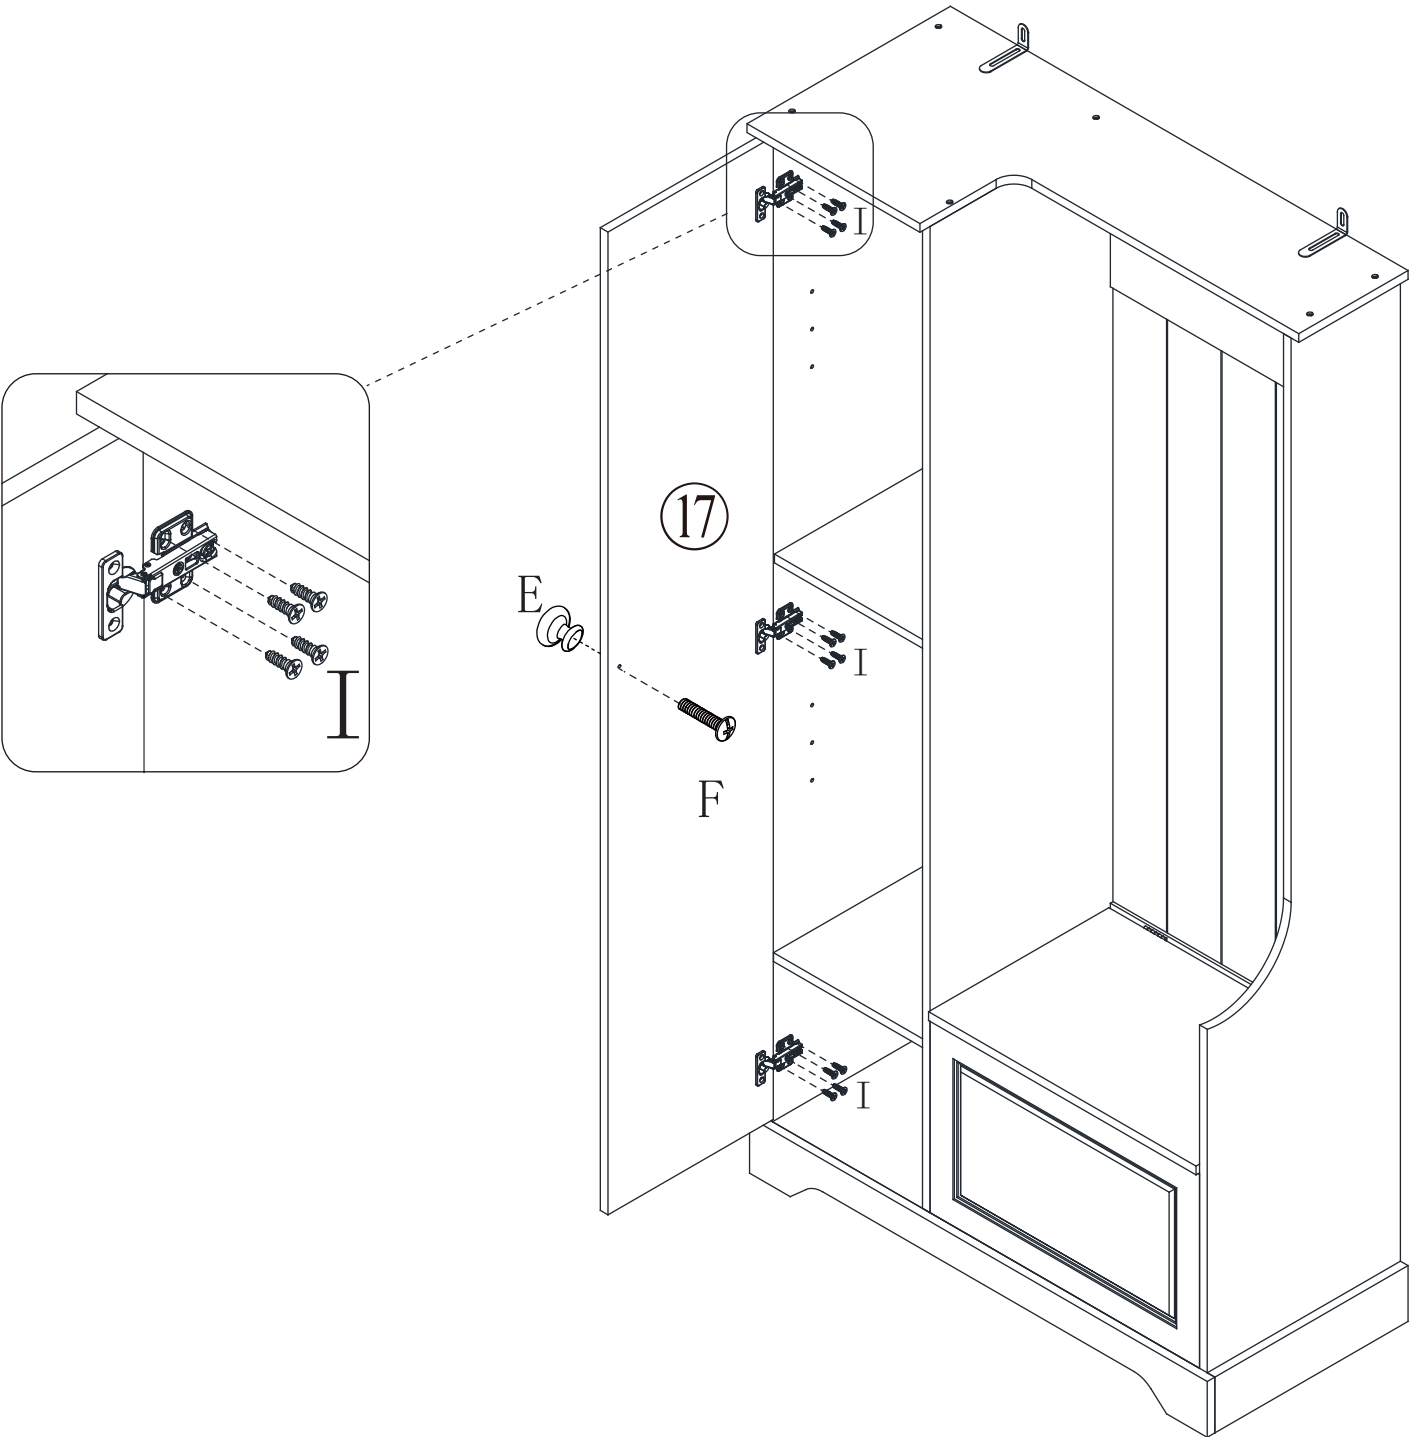


Assembly Instructions



When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

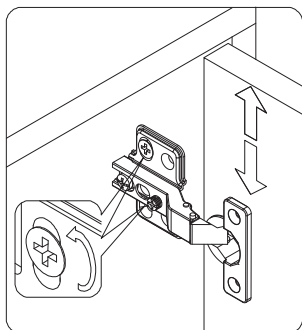



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

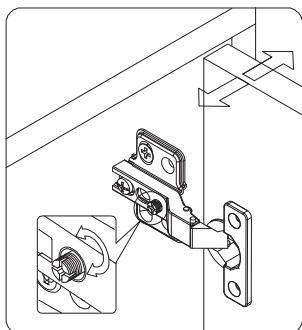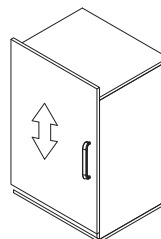

2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

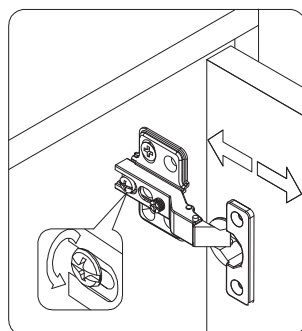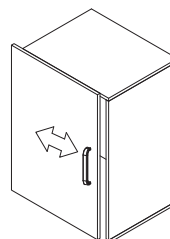

3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

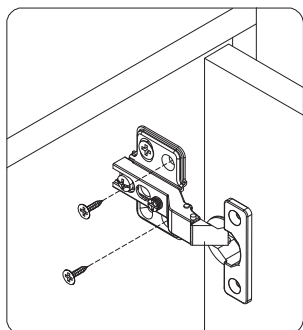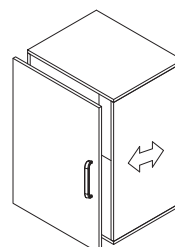


4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Assembly Instructions

Step 31



K		3
J		8
I		6

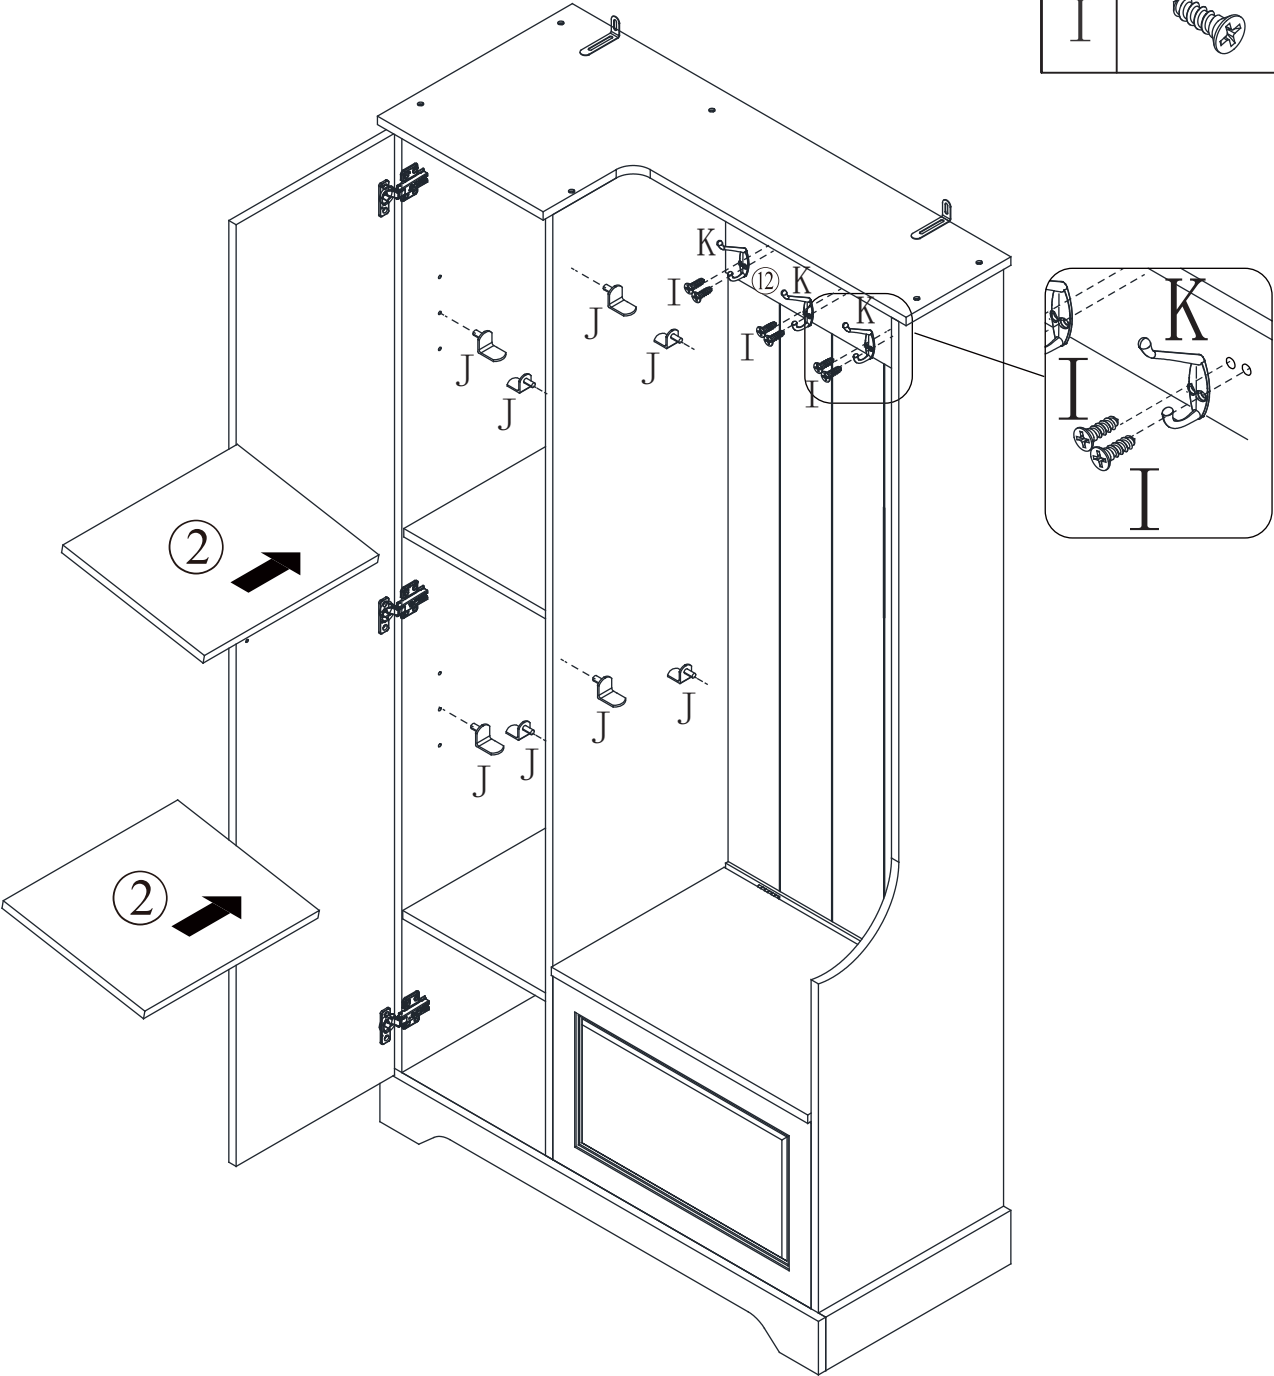

Assembly Instructions


Step 32

Q2		2
D		2

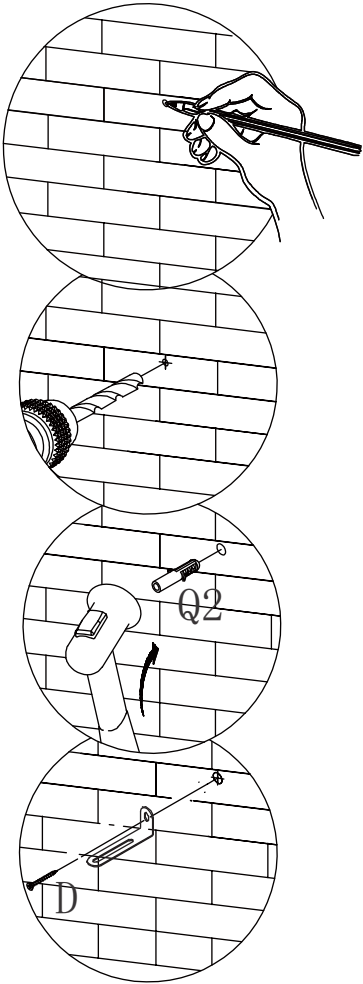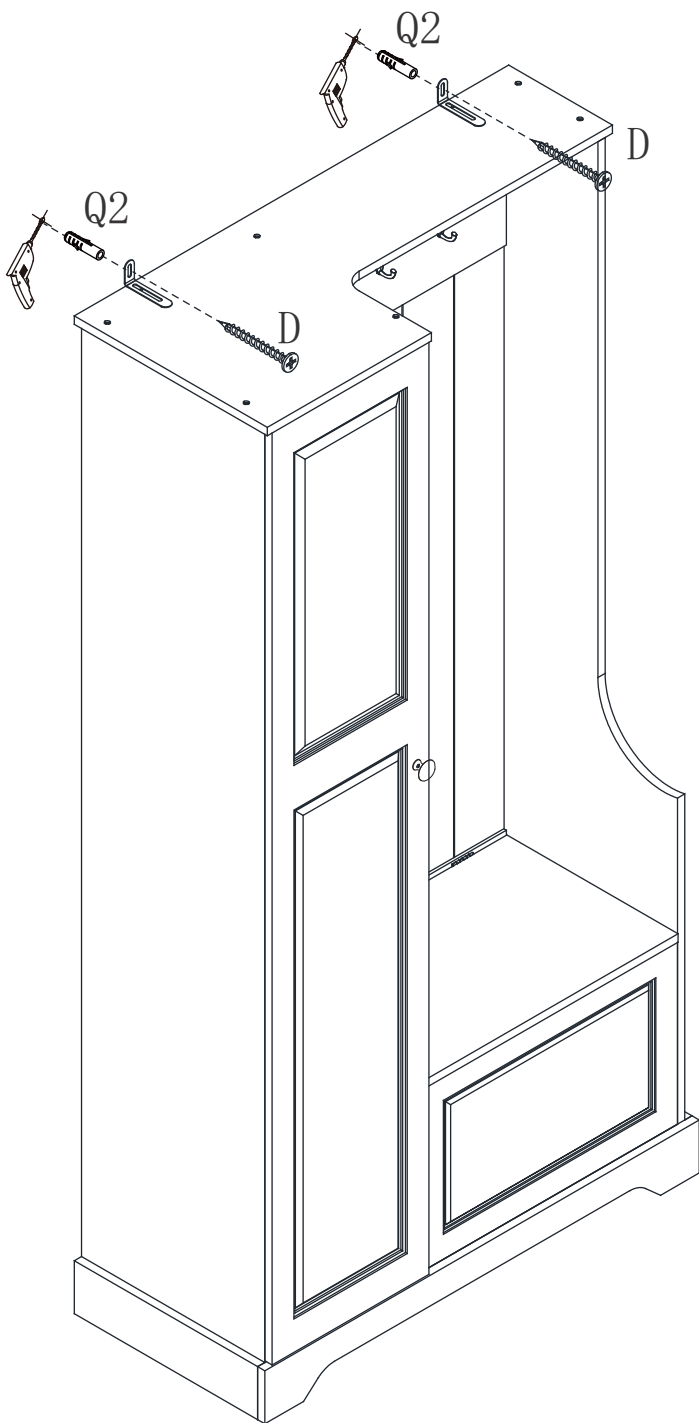

Assembly Instructions

Step 33

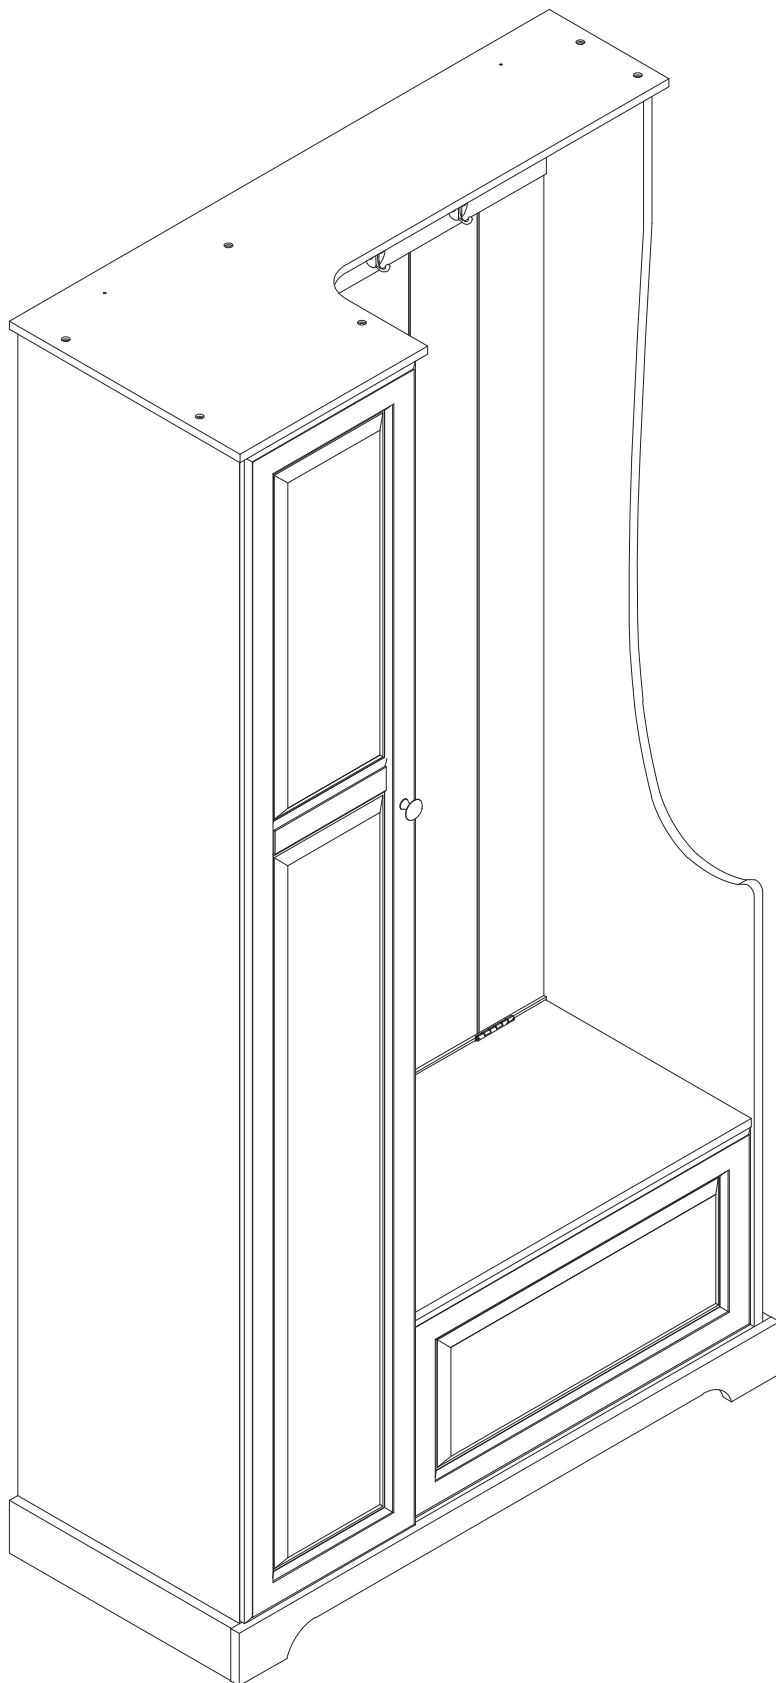

Finish/Finir