
Hall Tree

Assembly Instructions - Please keep for future reference

WARNING

CSU

This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

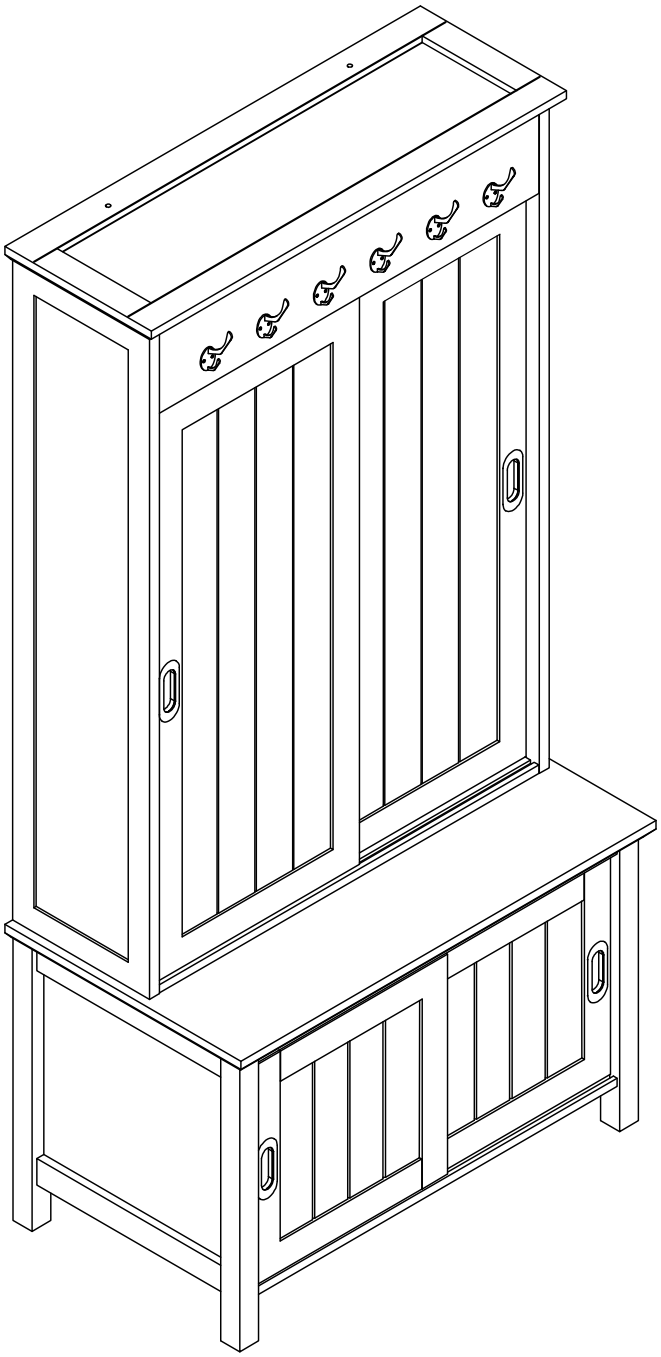

Dimensions

Widthe-34.65inch

Depth-19.69inch

Height-70.47inch

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

•Check you have all the components and tools listed on the following pages.

•Remove all fittings from the plastic bags and separate them into their groups.

•Keep children and animals away from the work area, small parts could choke if swallowed.

•Make sure you have enough space to layout the parts before starting.

•During assembly do not stand or put weight on the product, this could cause damage.

•Assemble the item as close to its final position (in the same room) as possible.

•Assemble on a soft level surface to avoid damaging the unit or your floor.

•Parts of the assembly will be easier with 3 people.



•To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

•Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

•From time to time check that there are no loose screws on this unit.

•This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

•Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

•Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions









To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

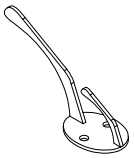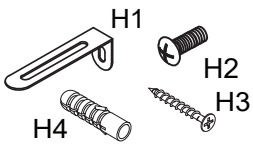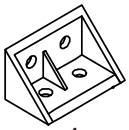A  Cam Bolt x 30+2	B  9.5mm Cam lock x 30+2	C  8x30mm Dowel x 24+2	D  3x12mm Screw x 16+2
E  7x50mmScrew x 4	F  Clothes-hook x 6	G  Screwdriver x 1	H  Anti-tipping device X 2
I  Plastic buckle x 12	K  3*16mm Screw x 12+1	L  Movable partition bracket x 20	M  Allen Wrench x 1
N  Angle iron x 4			

Tools required Not Included

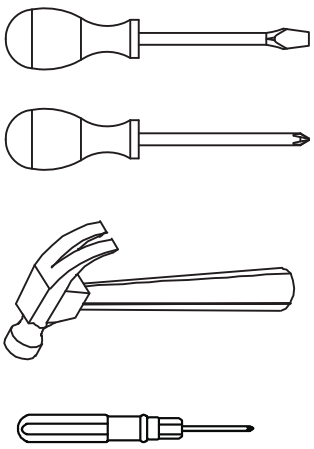


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

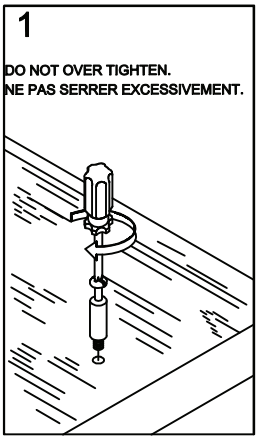

Step 2


Push the male camlock into the entry hole.

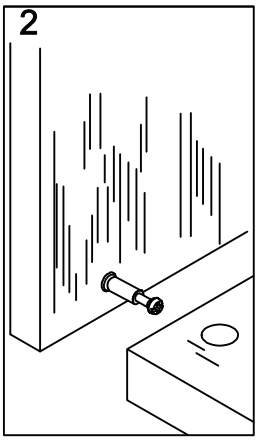

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

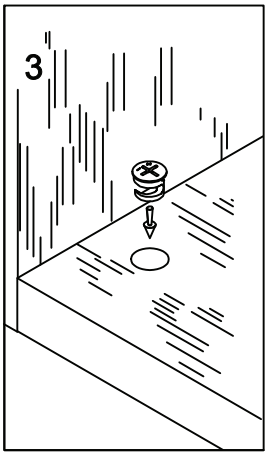


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.















The joint is now secure.

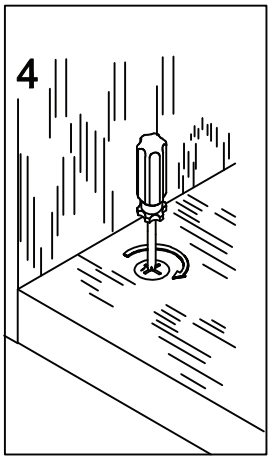

Components - Parts


Please check you have all the panels listed below.

BOX A - N721P557459

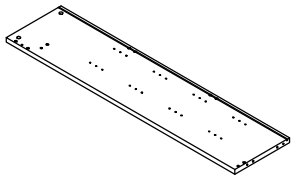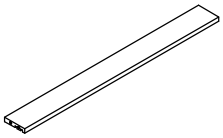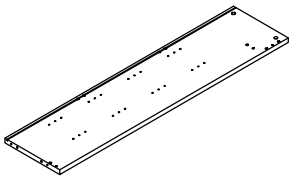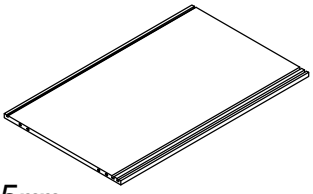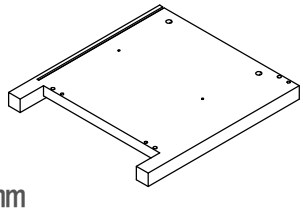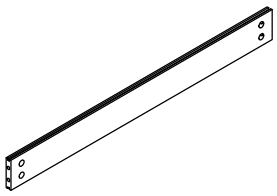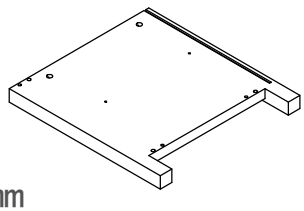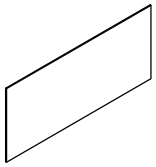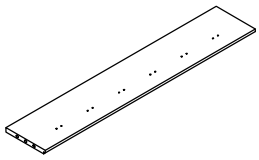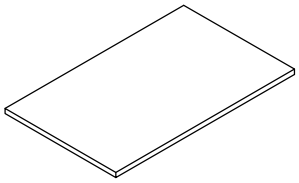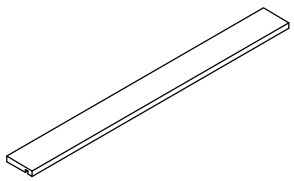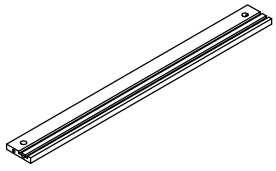② 1PC  1210x290x21mm	⑩ 1PC  765x80x15mm
③ 1PC  1210x290x21mm	⑪ 1PC  765x475x15mm
⑤ 1PC  816x420x40mm	⑫ 2PCS  805x80x15mm
⑥ 1PC  642x398x40mm	⑬ 3PCS  813x358x4mm
⑦ 1PC  805x150x15mm	⑮ 1PC  764x395x15mm
⑧ 1PC  805x65x15mm	⑰ 1PC  1037x430x15mm
⑨ 1PC  805x80x15mm	⑱ 1PC  1037x430x15mm







Components - Parts

BOX A - N721P557459

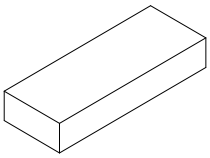


Hardware Kit x1


BOX B - N721P557460

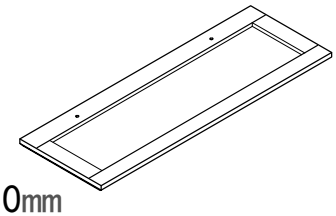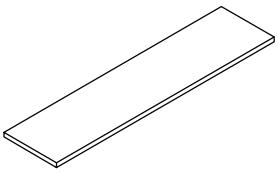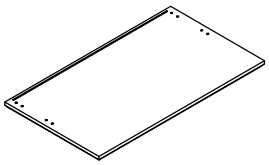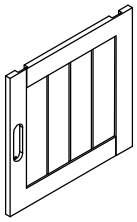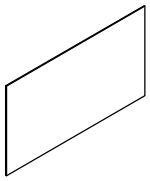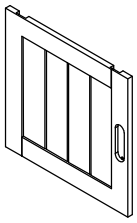① 1PC  880x310x30mm	⑯ 4PCS  804x195x15mm
④ 1PC  880x500x30mm	⑲ 1PC  402x410x15mm
⑭ 1PC  773x433x4mm	⑳ 1PC  402x410x15mm

Assembly Instructions

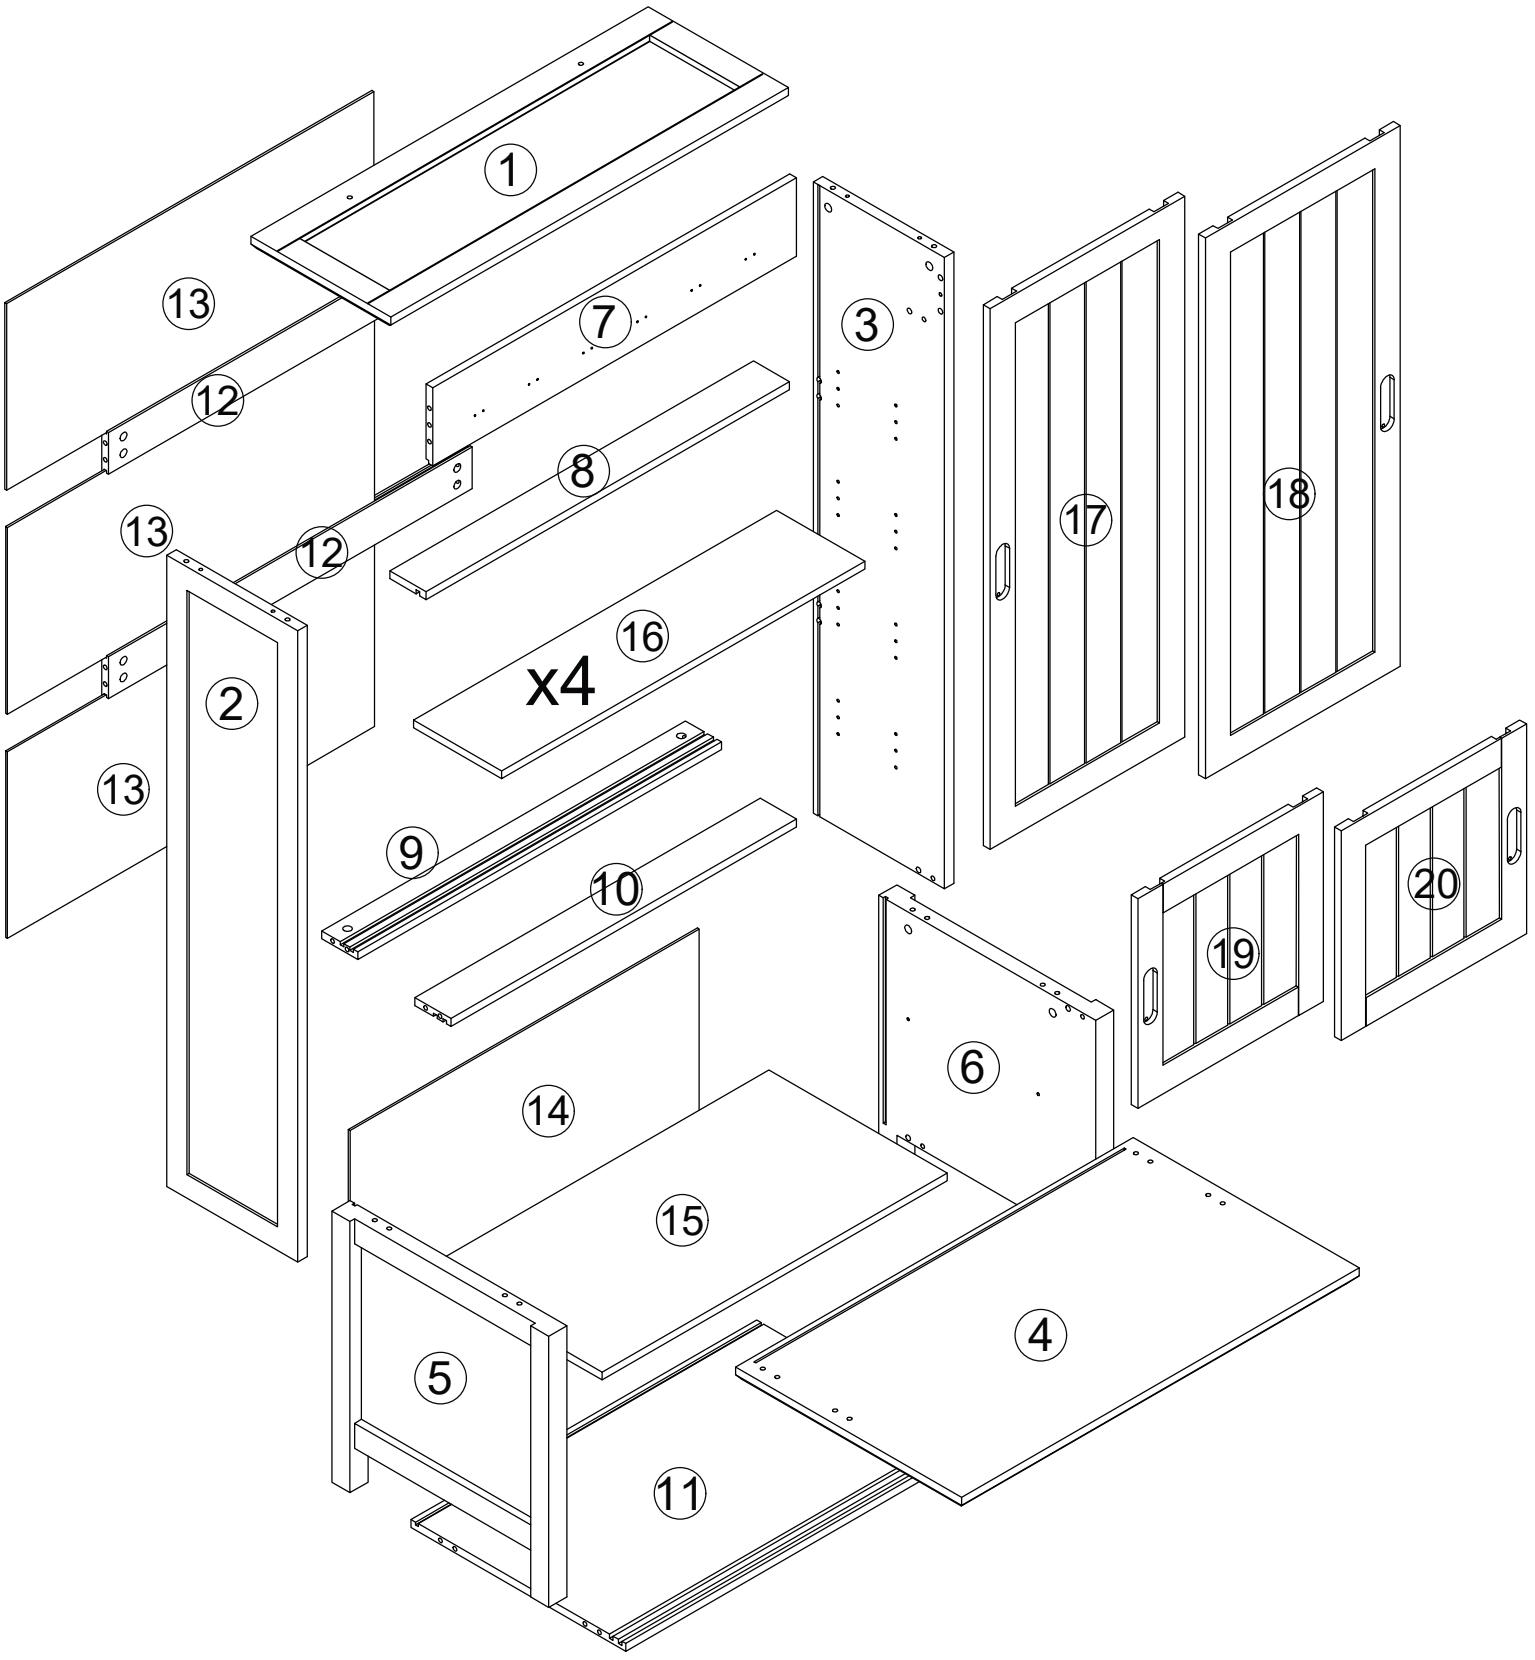


STEP 1

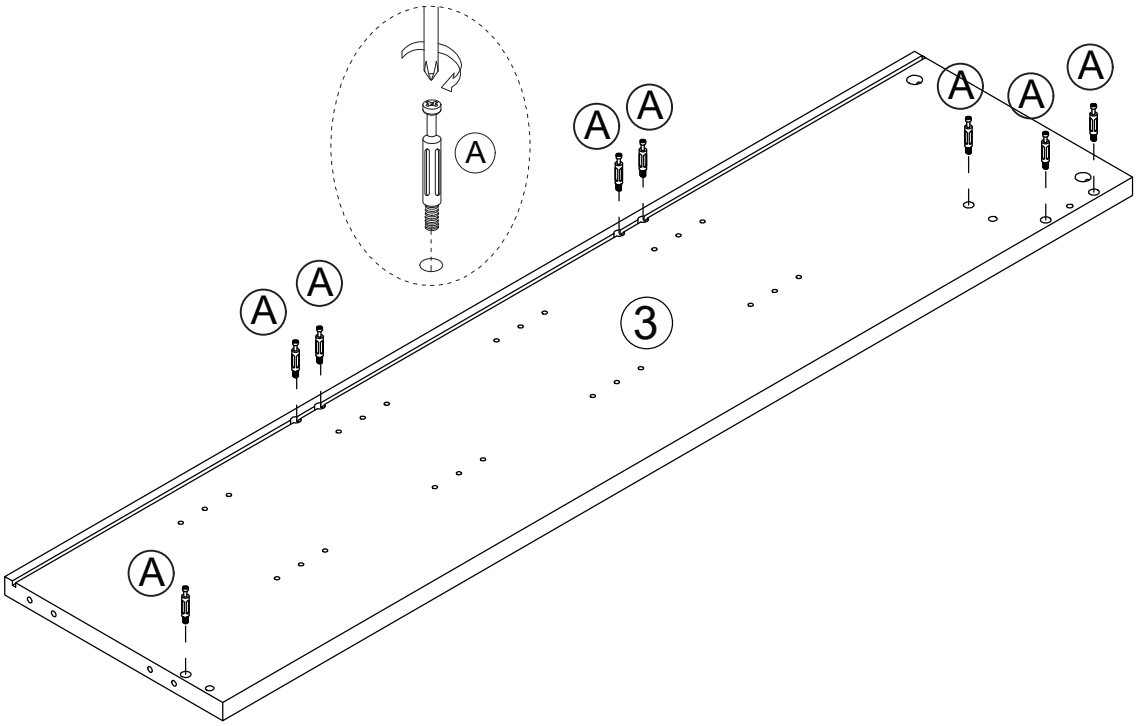


A	
Cam Bolt x 8	

STEP 2

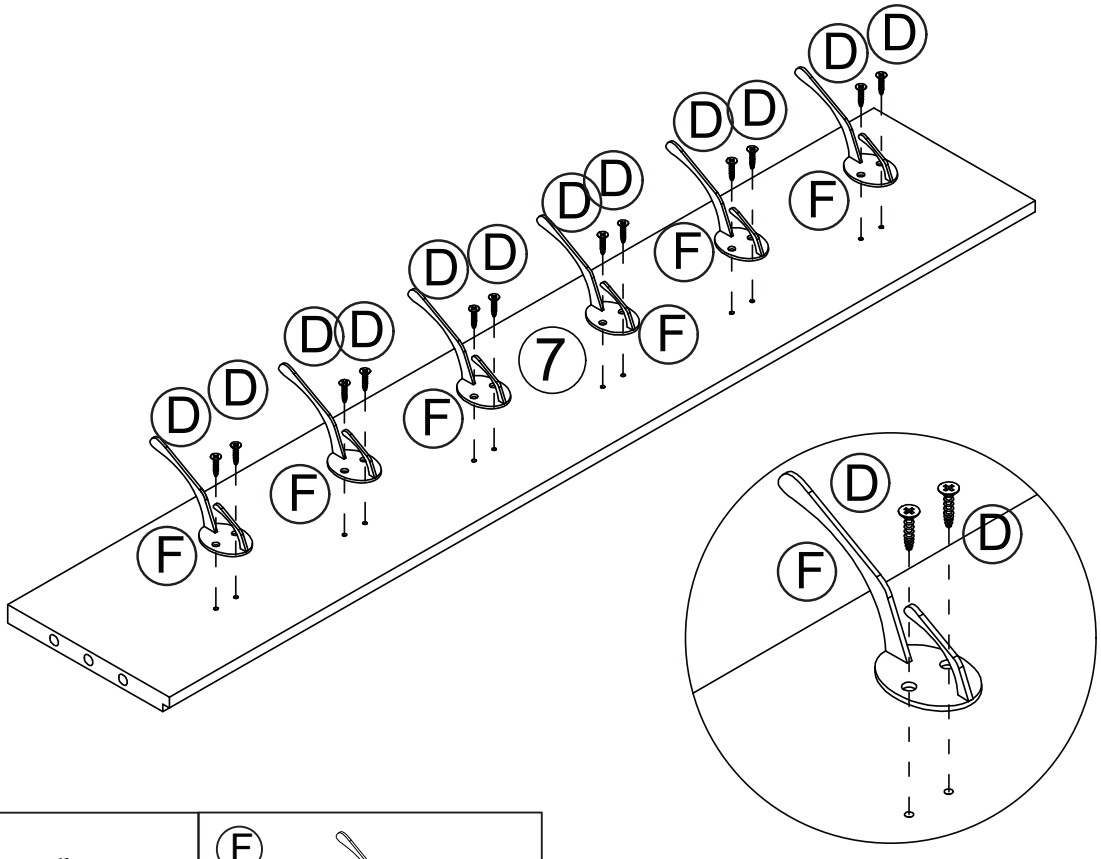

D 	F 
3*12mm Screw x 12	Clothes-hook x 6

STEP 3

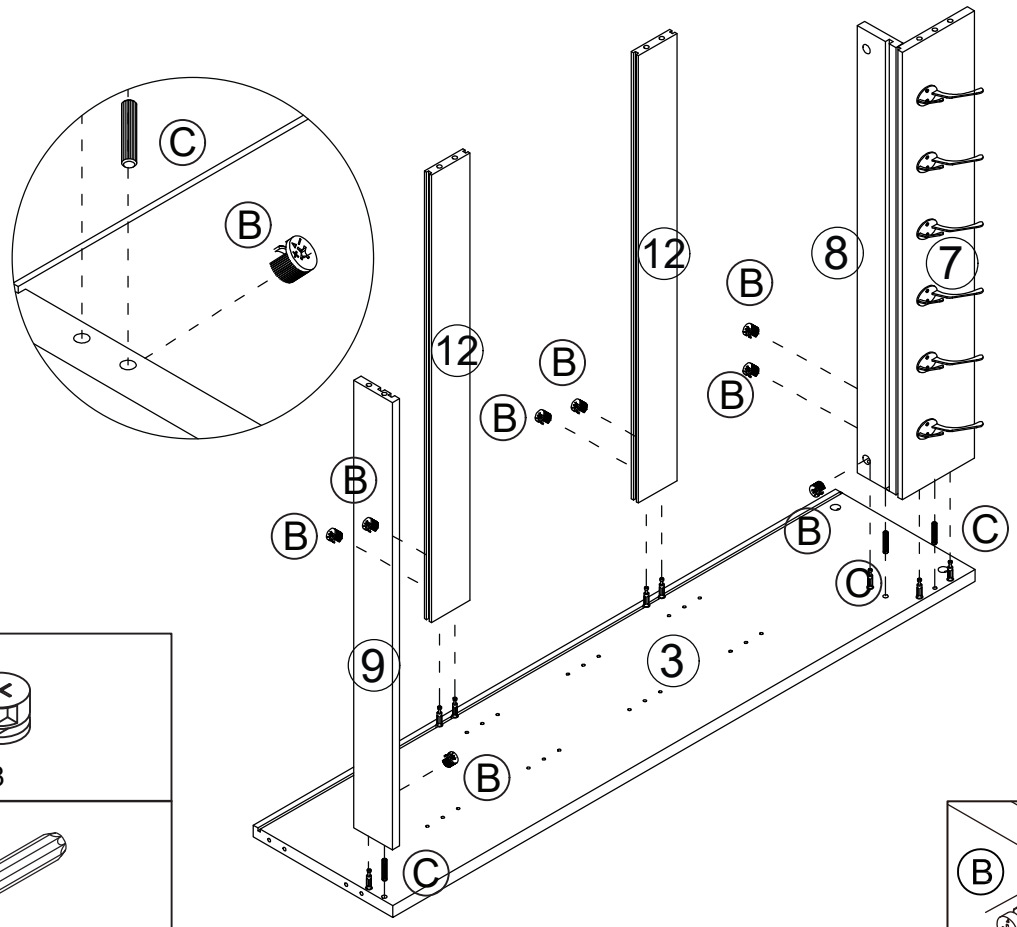


B




Cam lock x 8


C

Dowel x 3

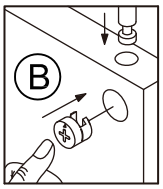

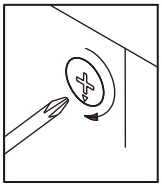

STEP 4

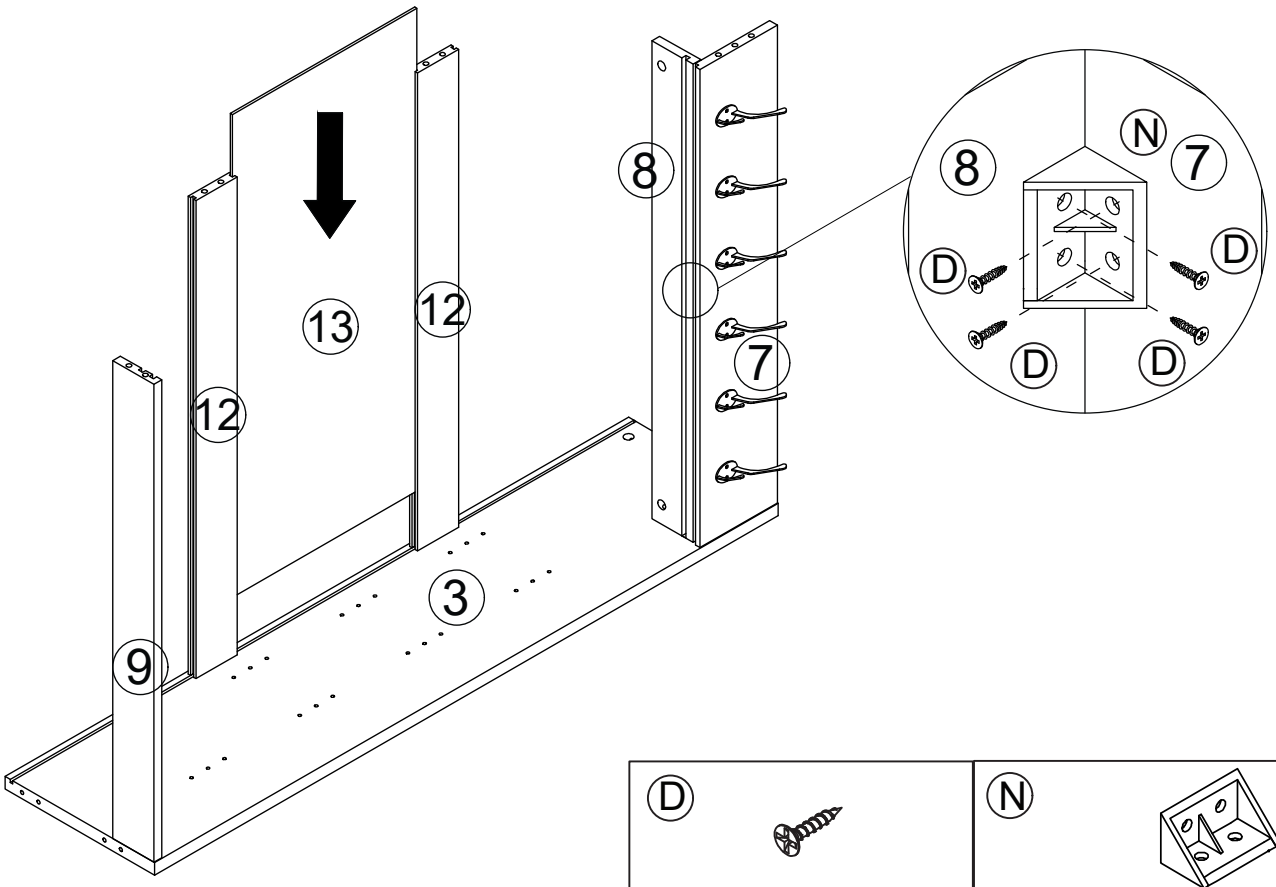


D


3*12mm Screw x 4

N

Angle iron x 4


STEP 5

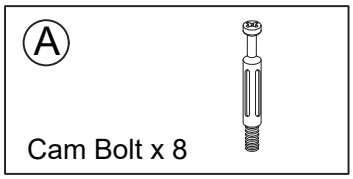


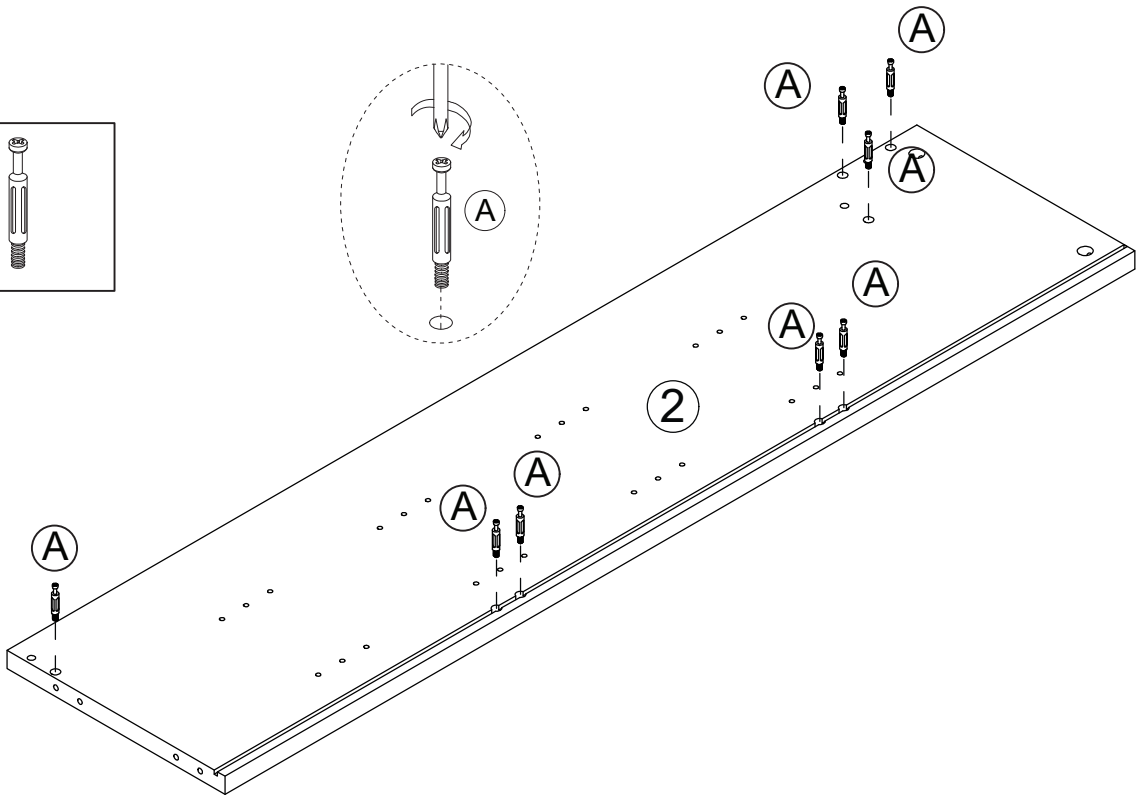



STEP 6

Two people assembling should hold the cabinet steady.

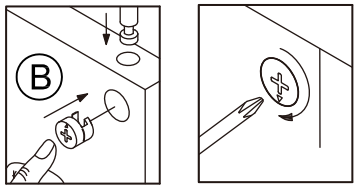

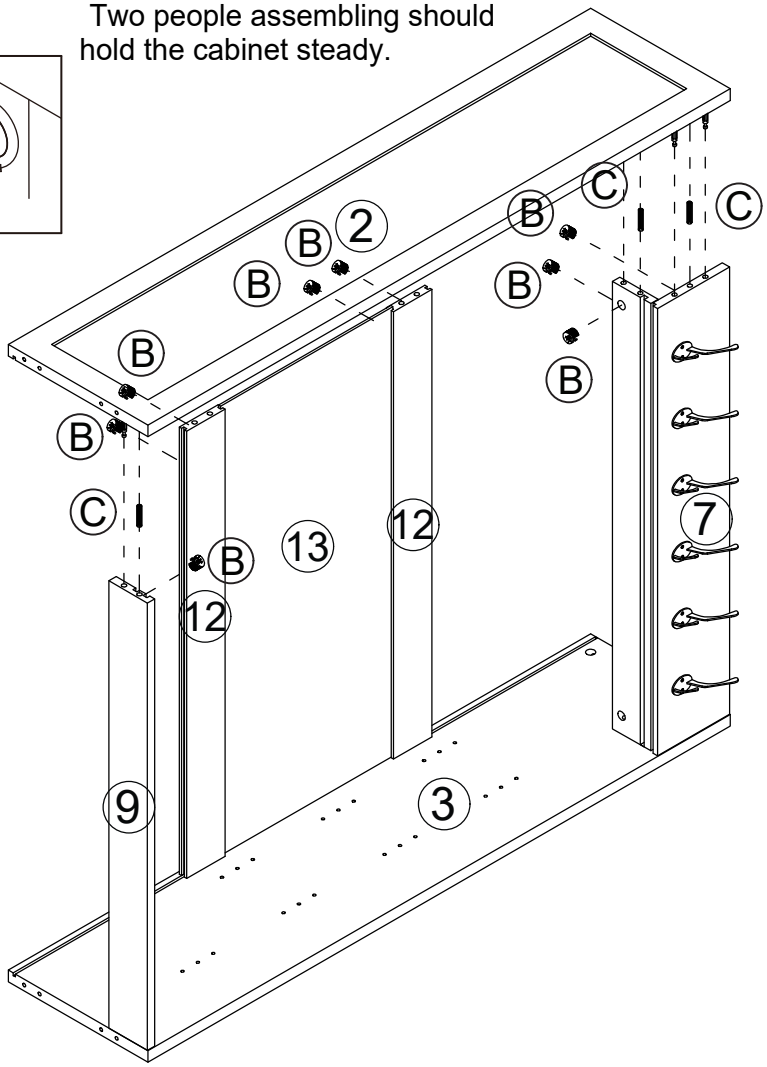


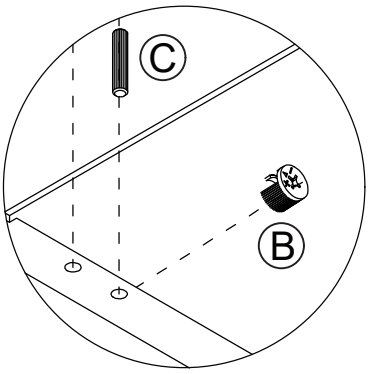

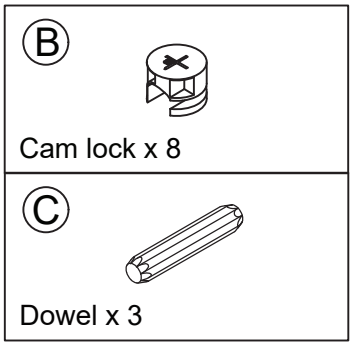


STEP 7

After assembling panel number 13

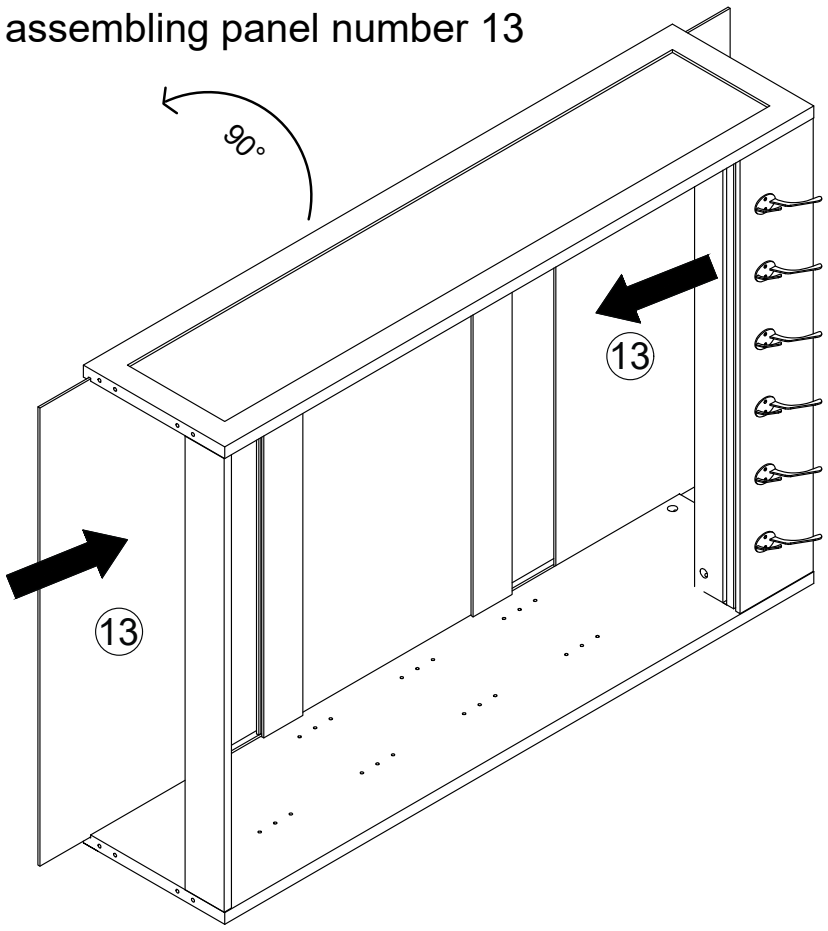

STEP 8

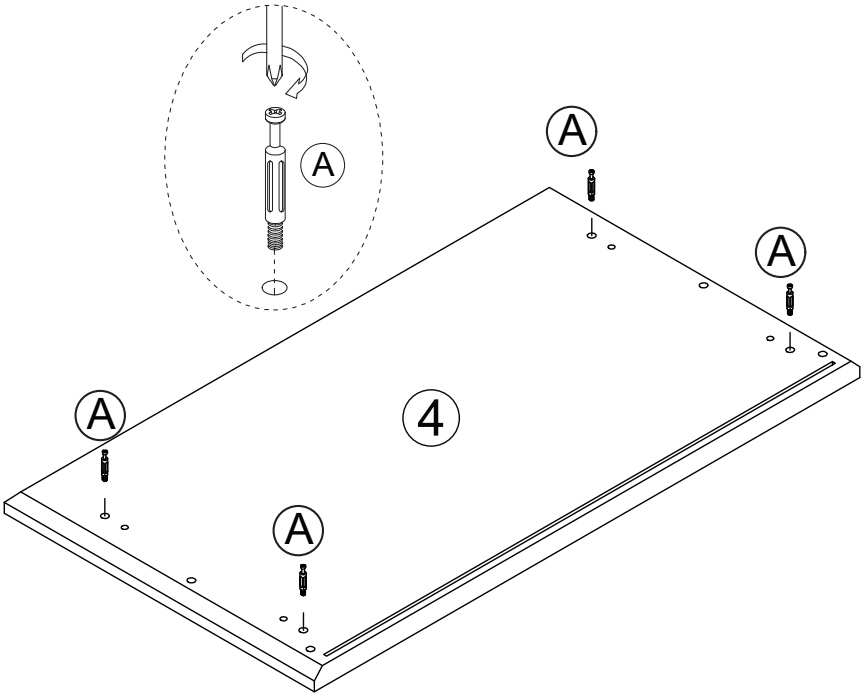


Ⓐ

Cam Bolt x 4



STEP 9


Two people assembling should hold the cabinet steady.

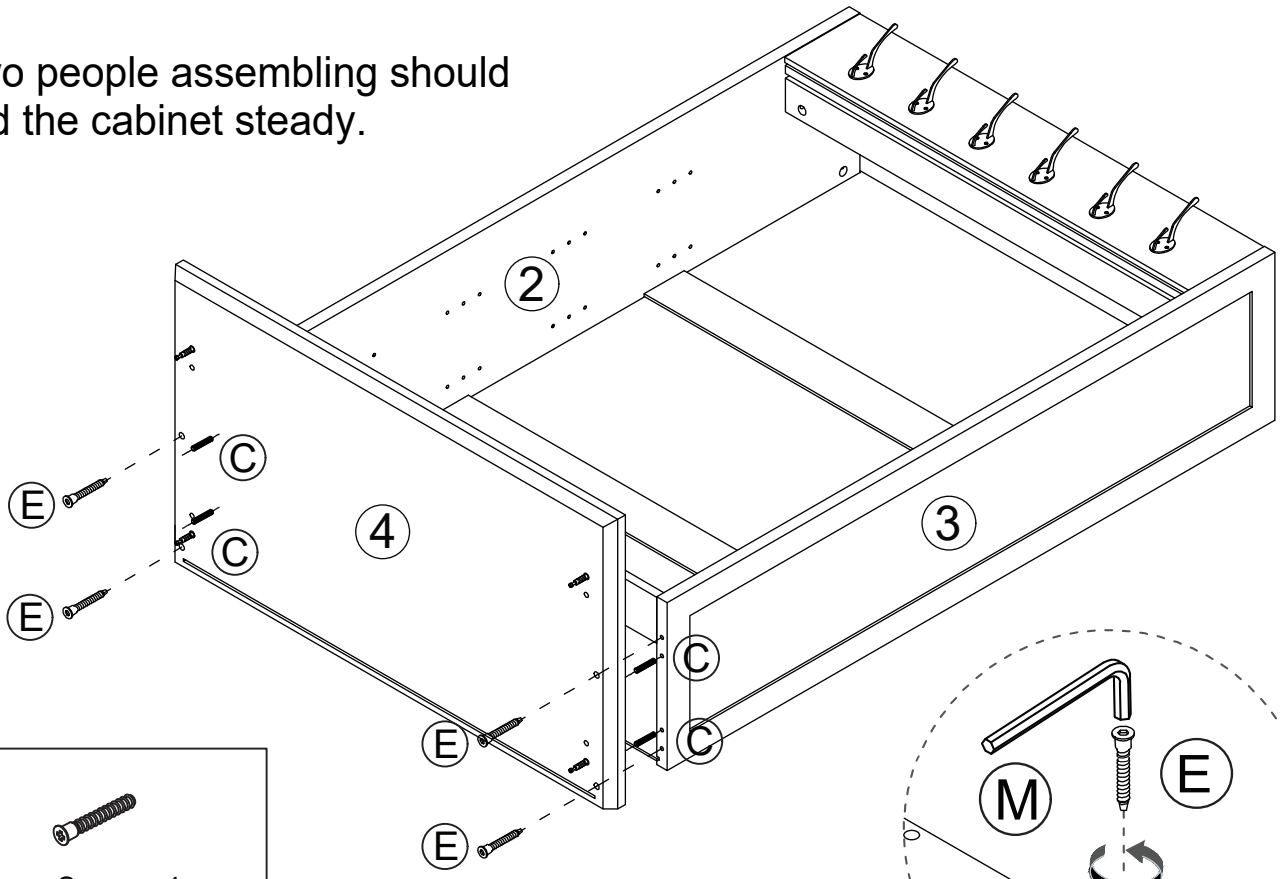

E


7*50mm Screw x 4

C



Dowel x 4

STEP 10

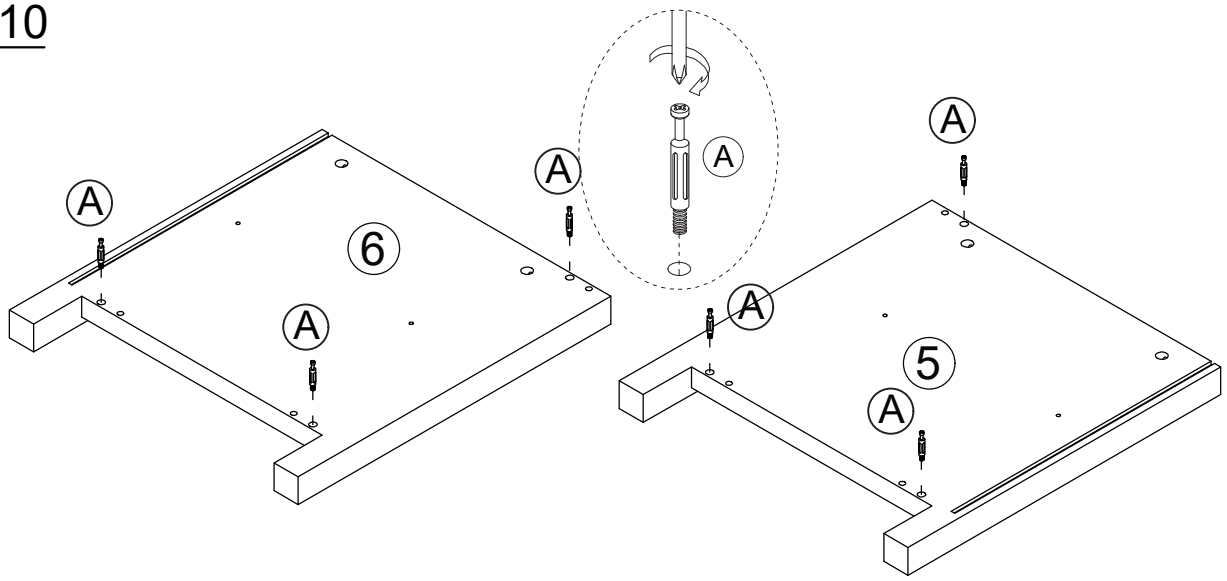



A




Cam Bolt x 6


STEP 11

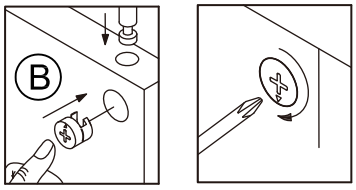

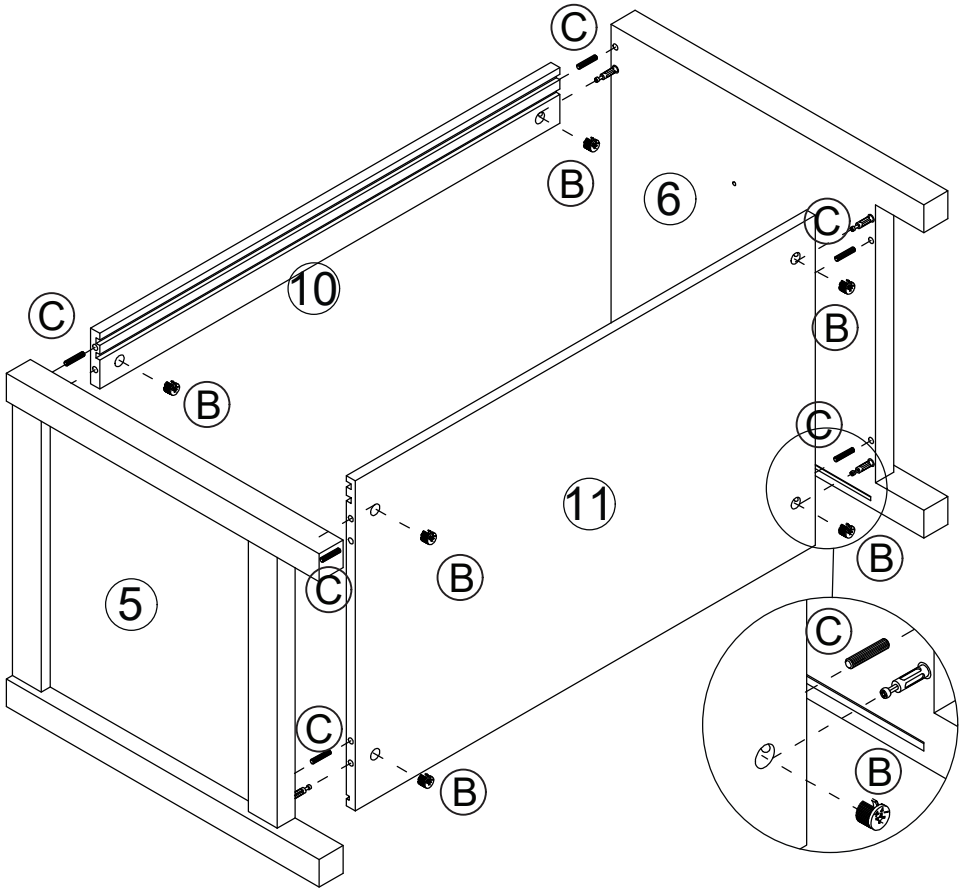



B  Cam lock x 6	
C  Dowel x 6	

STEP 12

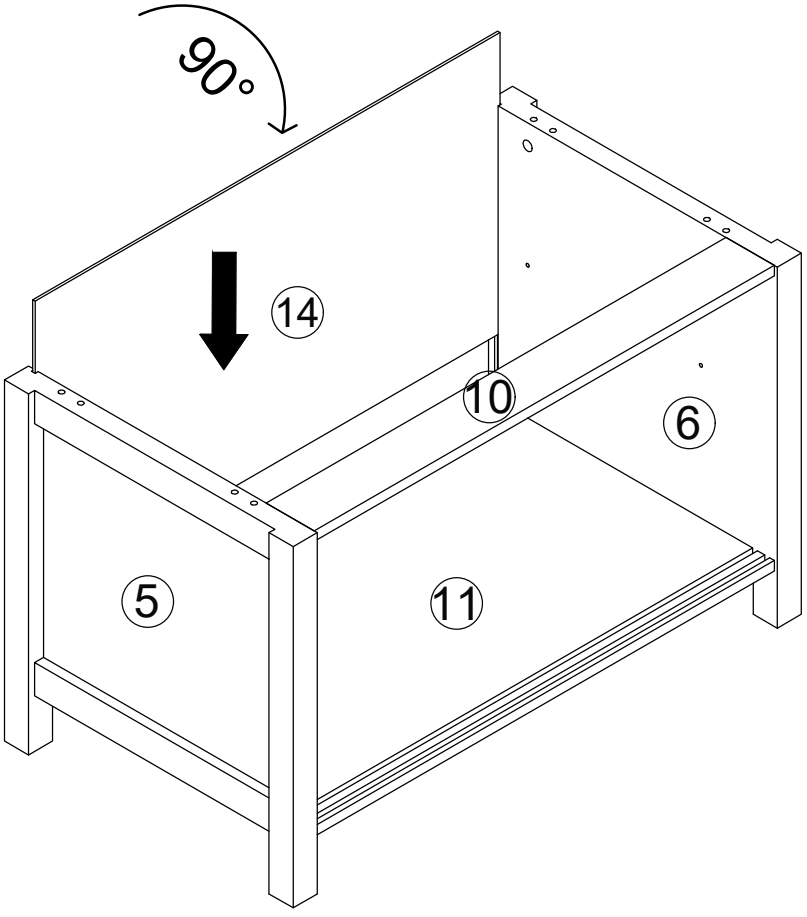


STEP 13

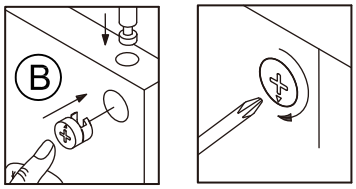

B  Cam lock x 4	
C  Dowel x 4	


Two people assembling should hold the cabinet steady.

STEP 14

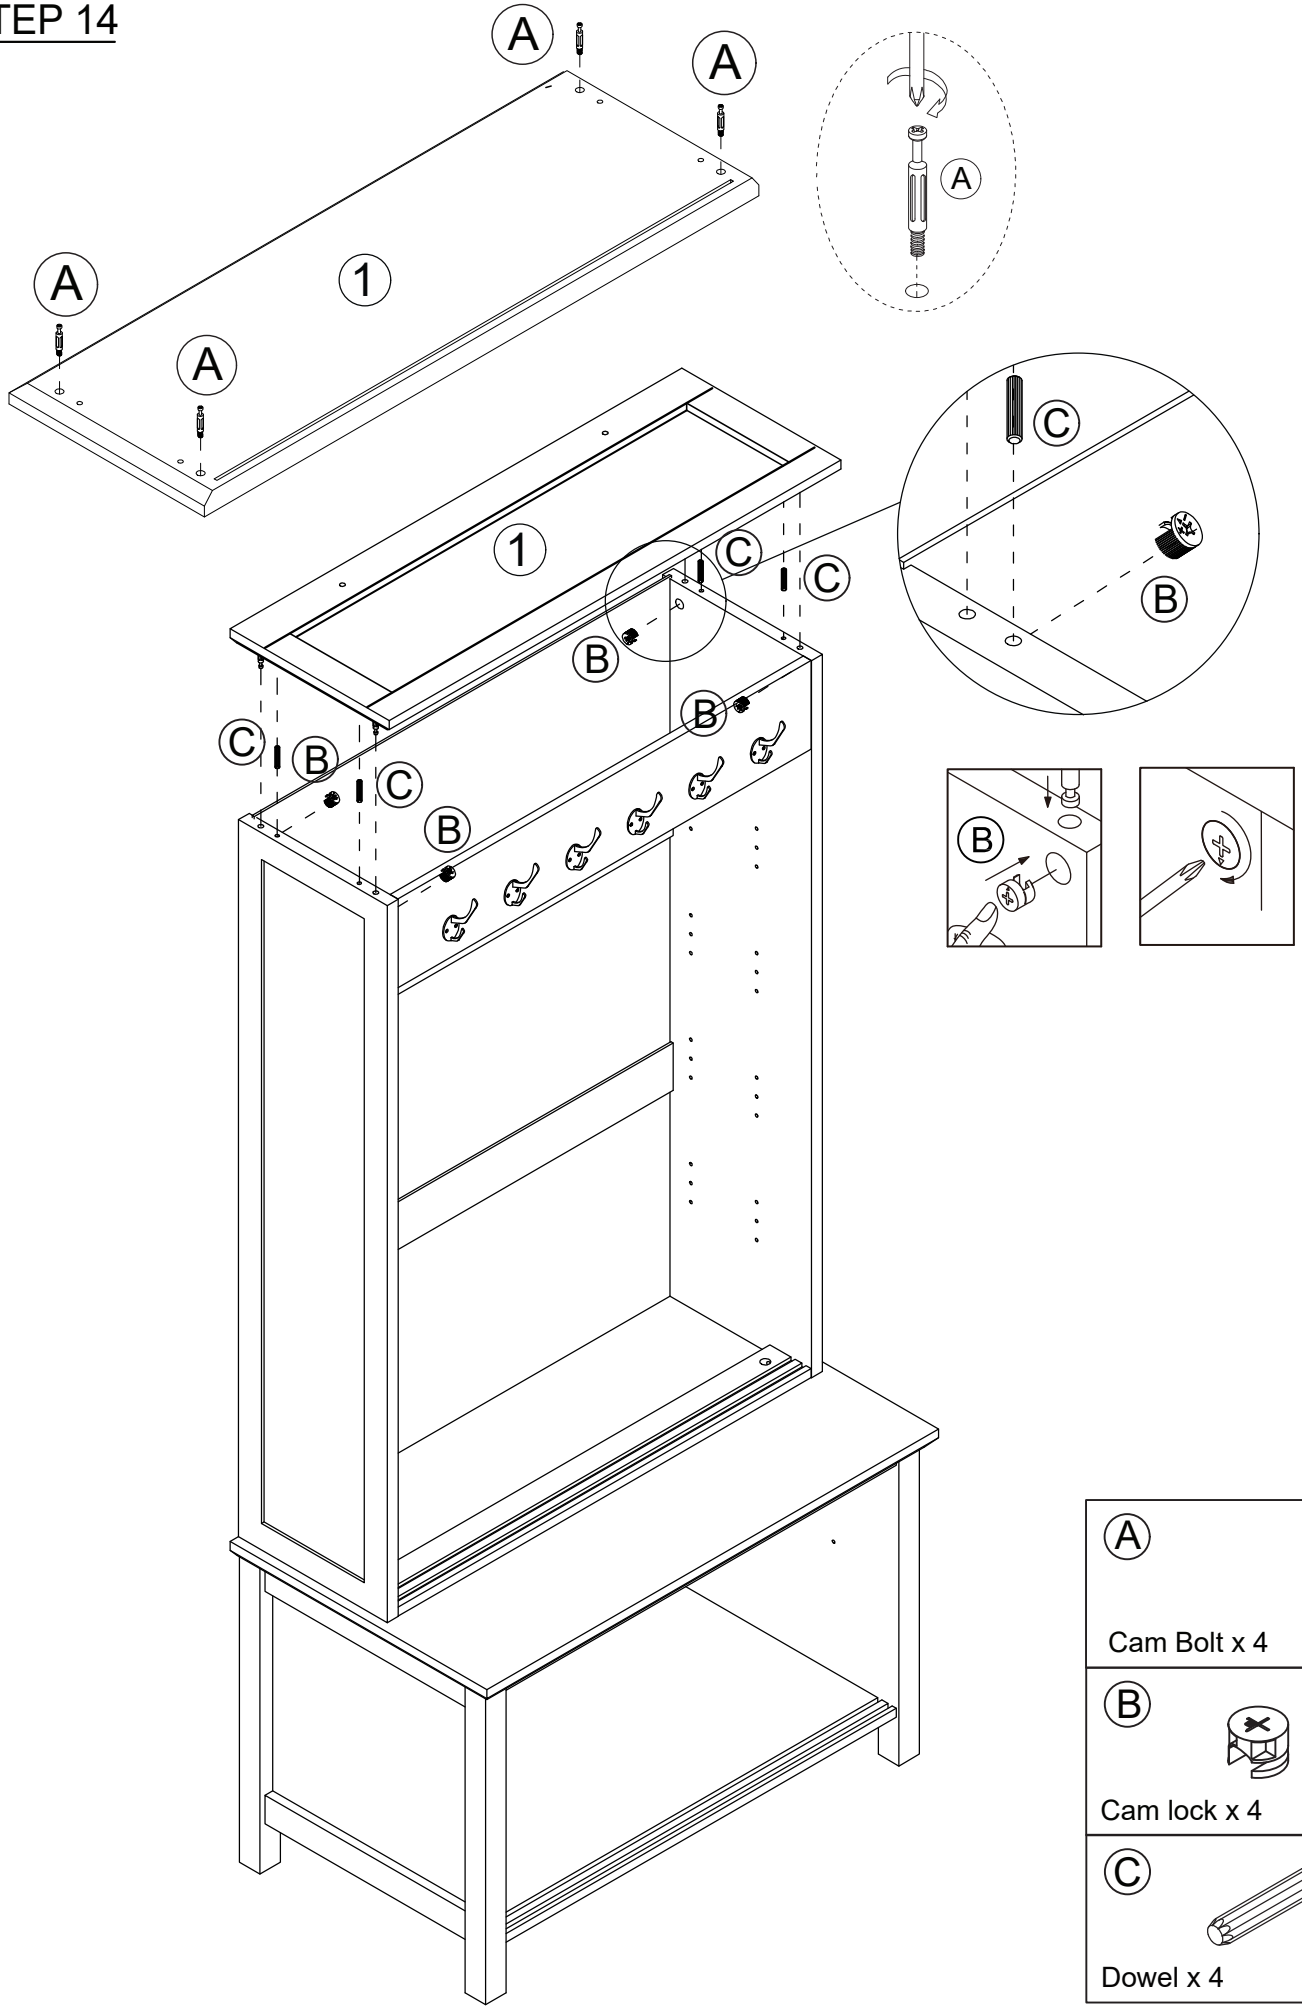

A	Cam Bolt x 4
B	Cam lock x 4
C	Dowel x 4

STEP 15

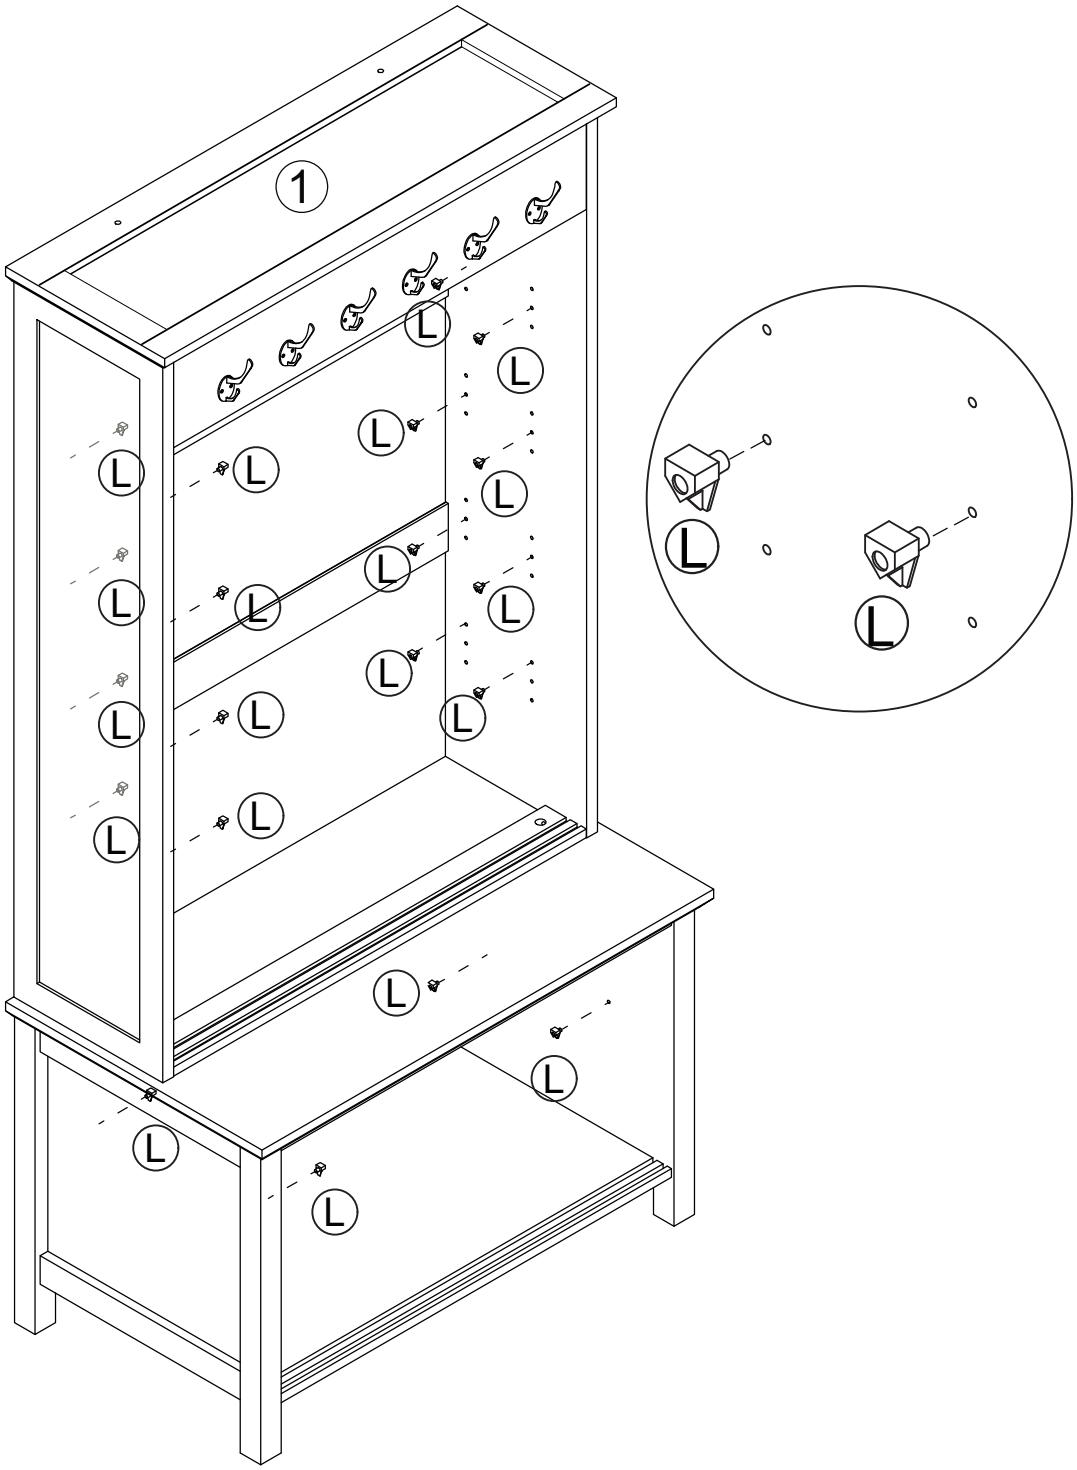


L




Movable partition bracket x 20

STEP 16

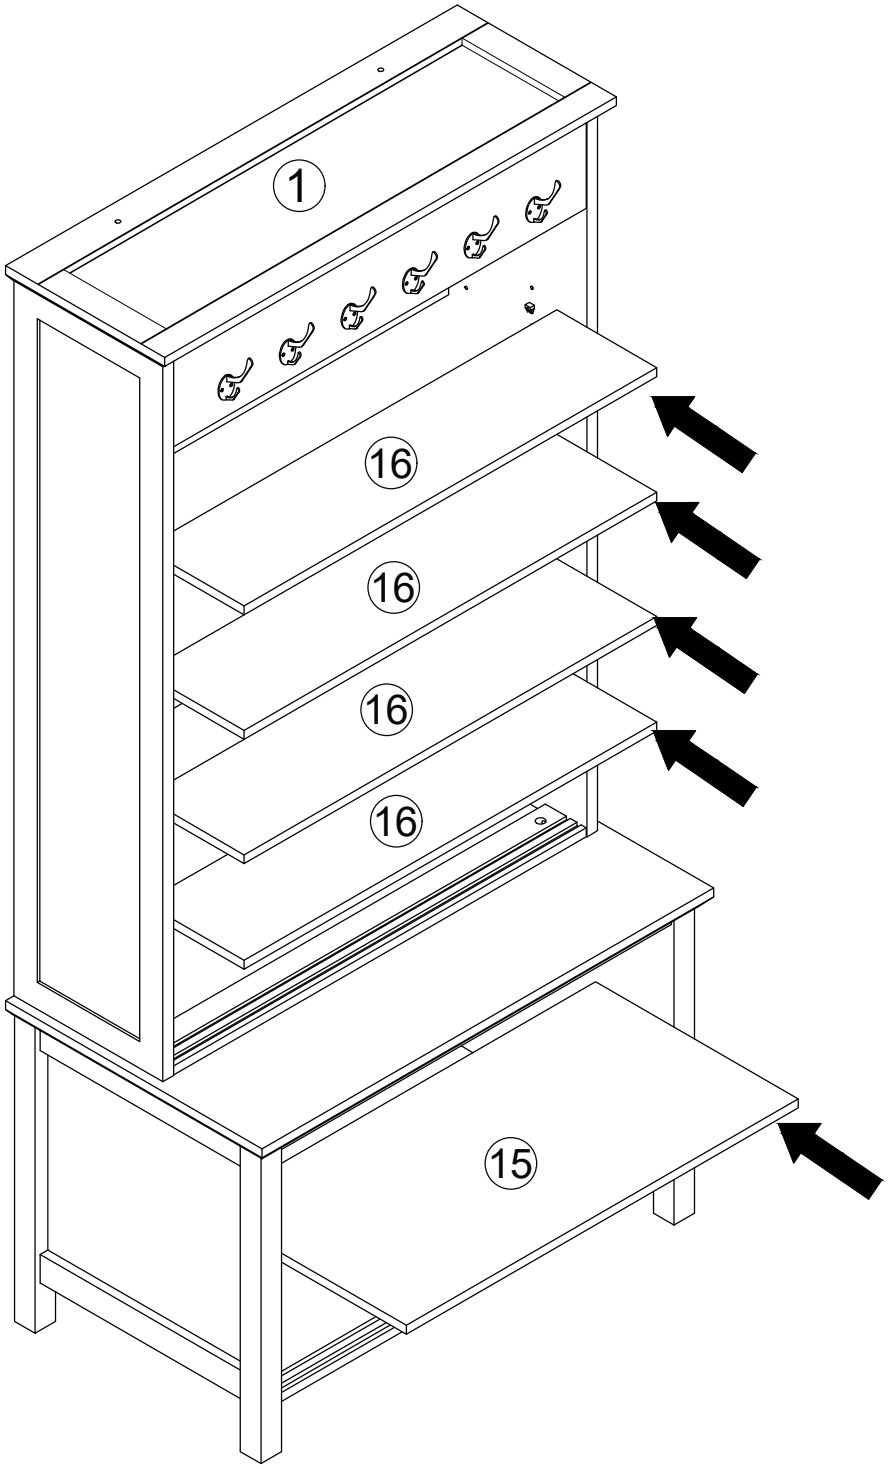

STEP 17

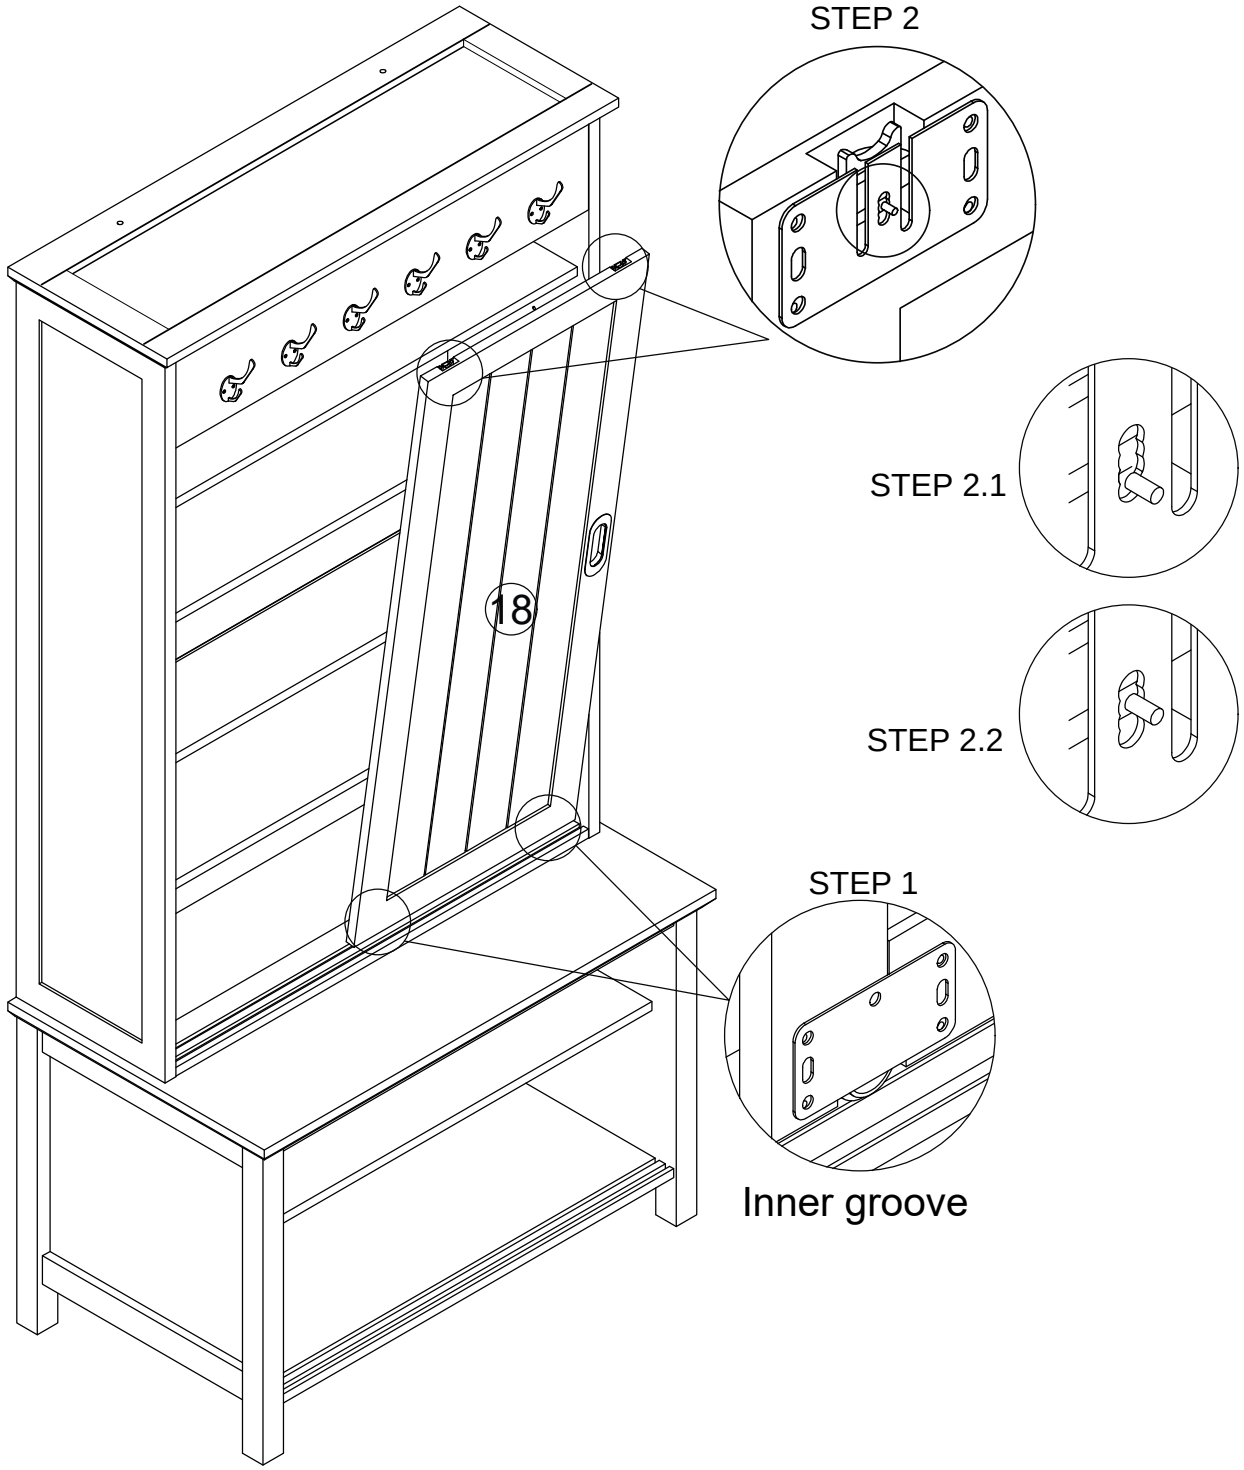

STEP 1: Install the bottom panel of the cabinet door (the part with the wheels) into the grooved position.


STEP 2: Stand the cabinet door upright and insert the top part into the corresponding groove.

STEP 2.1: Before installing the top part of the cabinet door into the groove, adjust the door latch downward.


STEP 2.2: Stand the door upright in position and push the latch upward into the groove.

NOTE: There is a lock pin that can be pressed to adjust the door latch up and down.


STEP 18

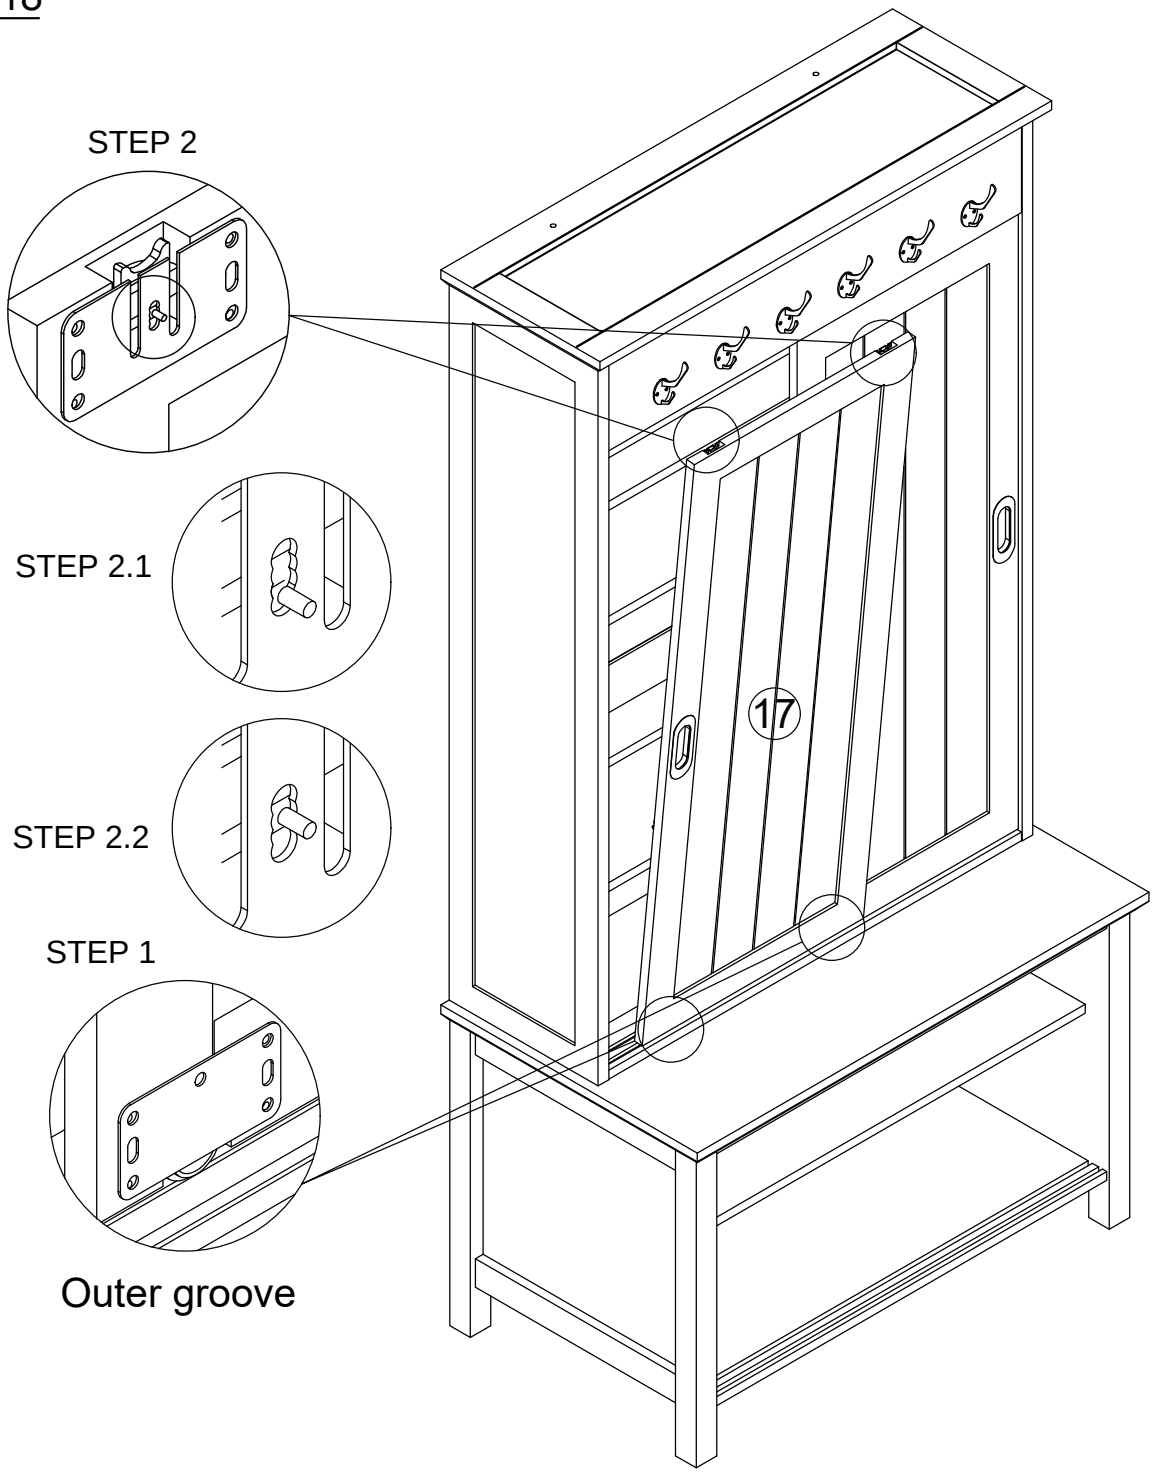


STEP 19

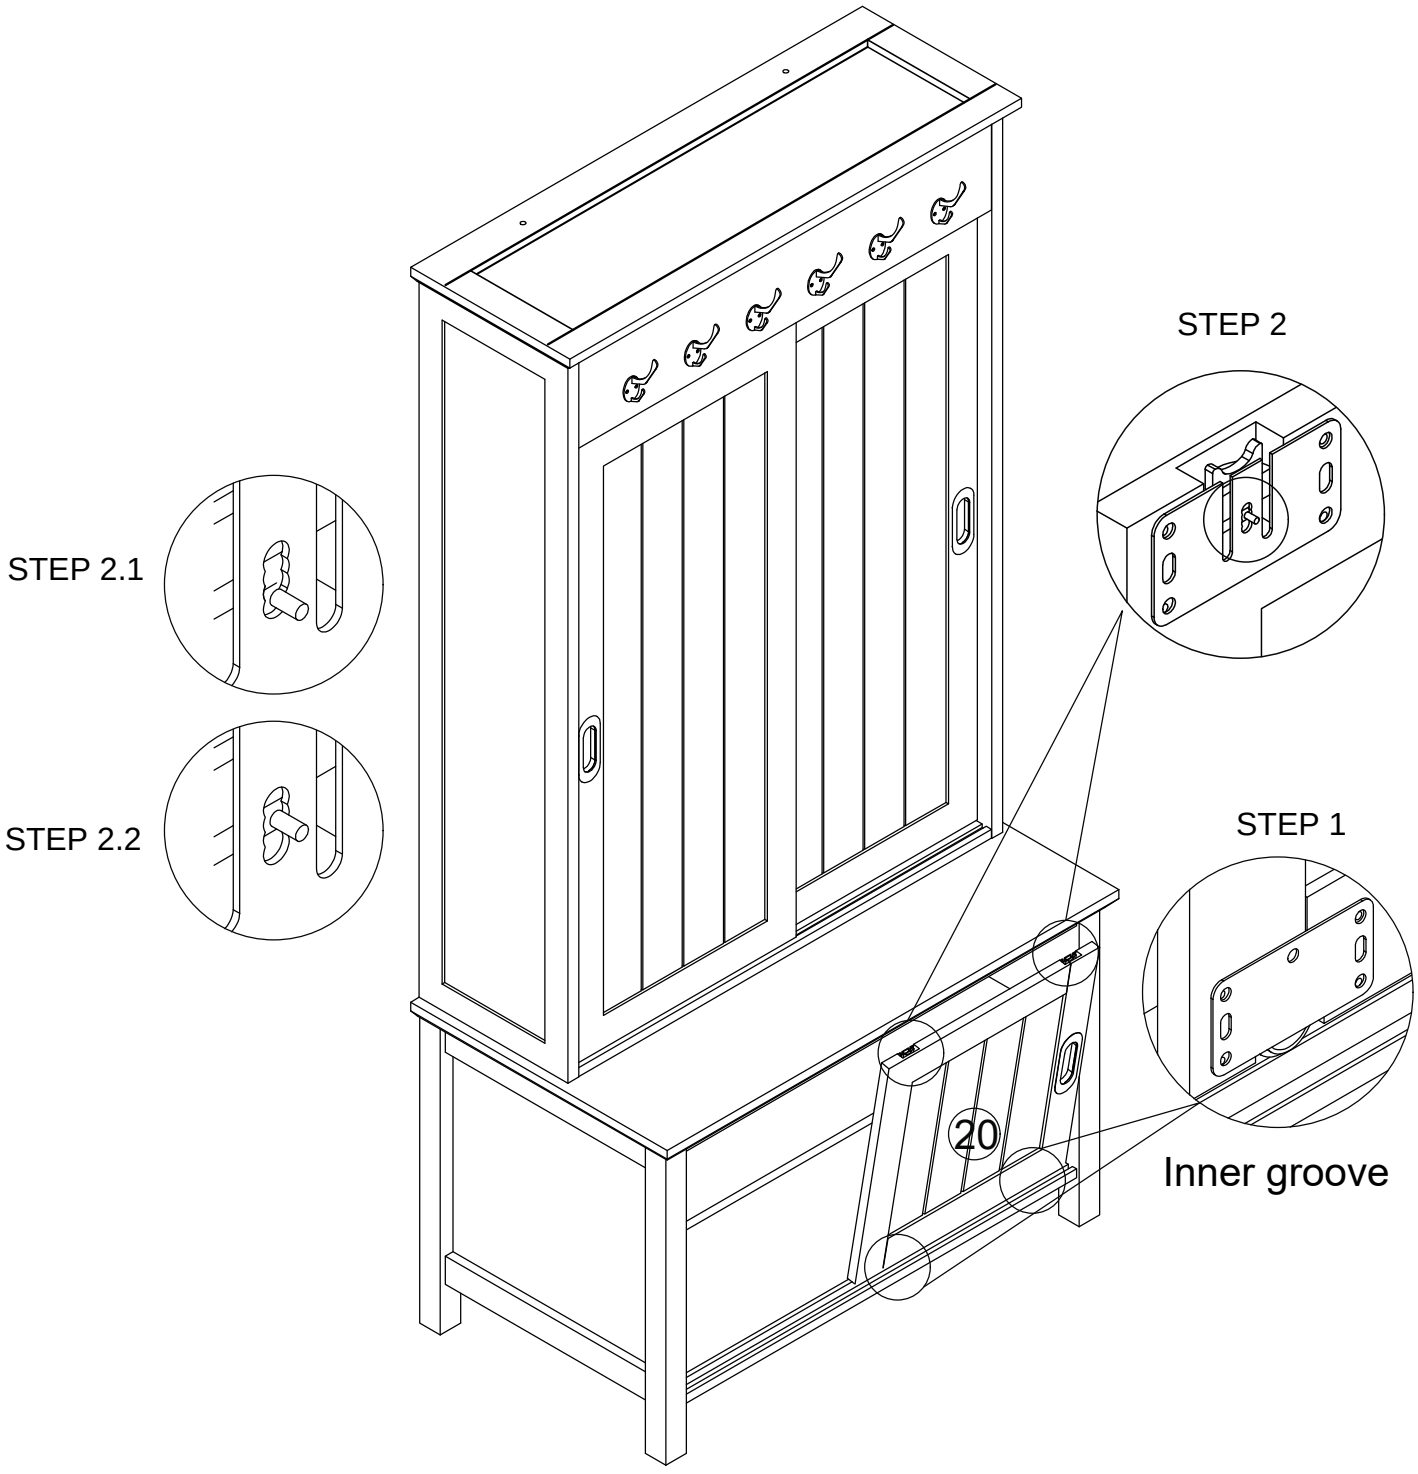

STEP 20

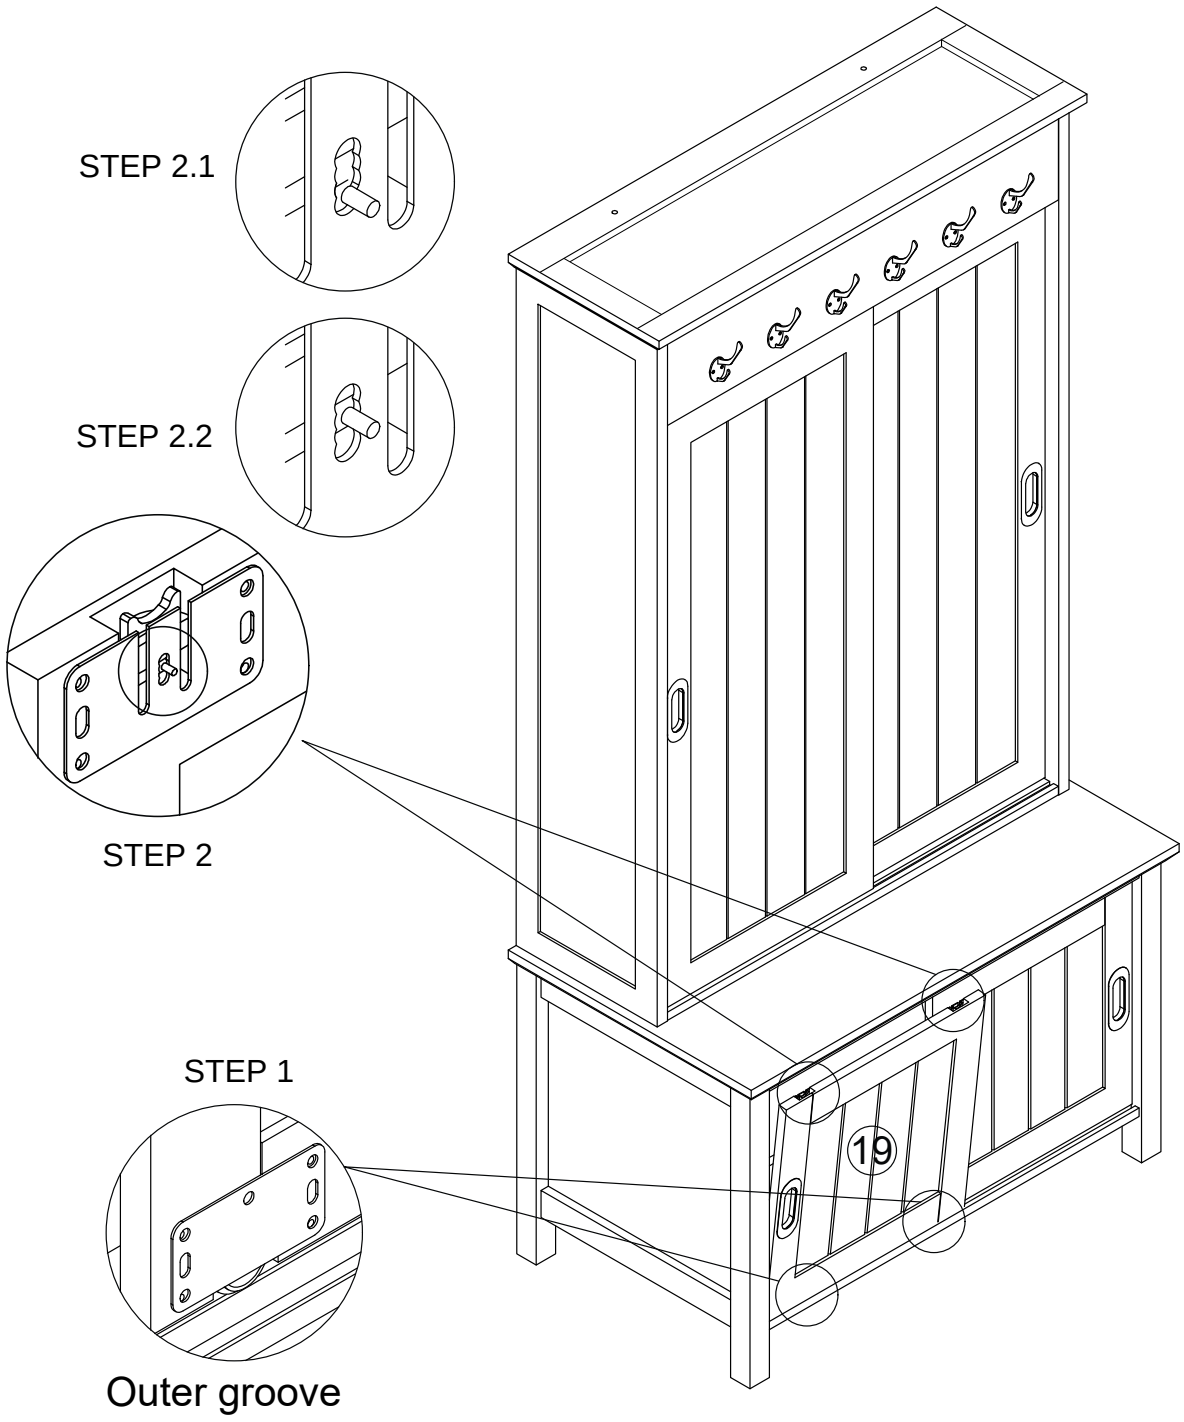


STEP 21

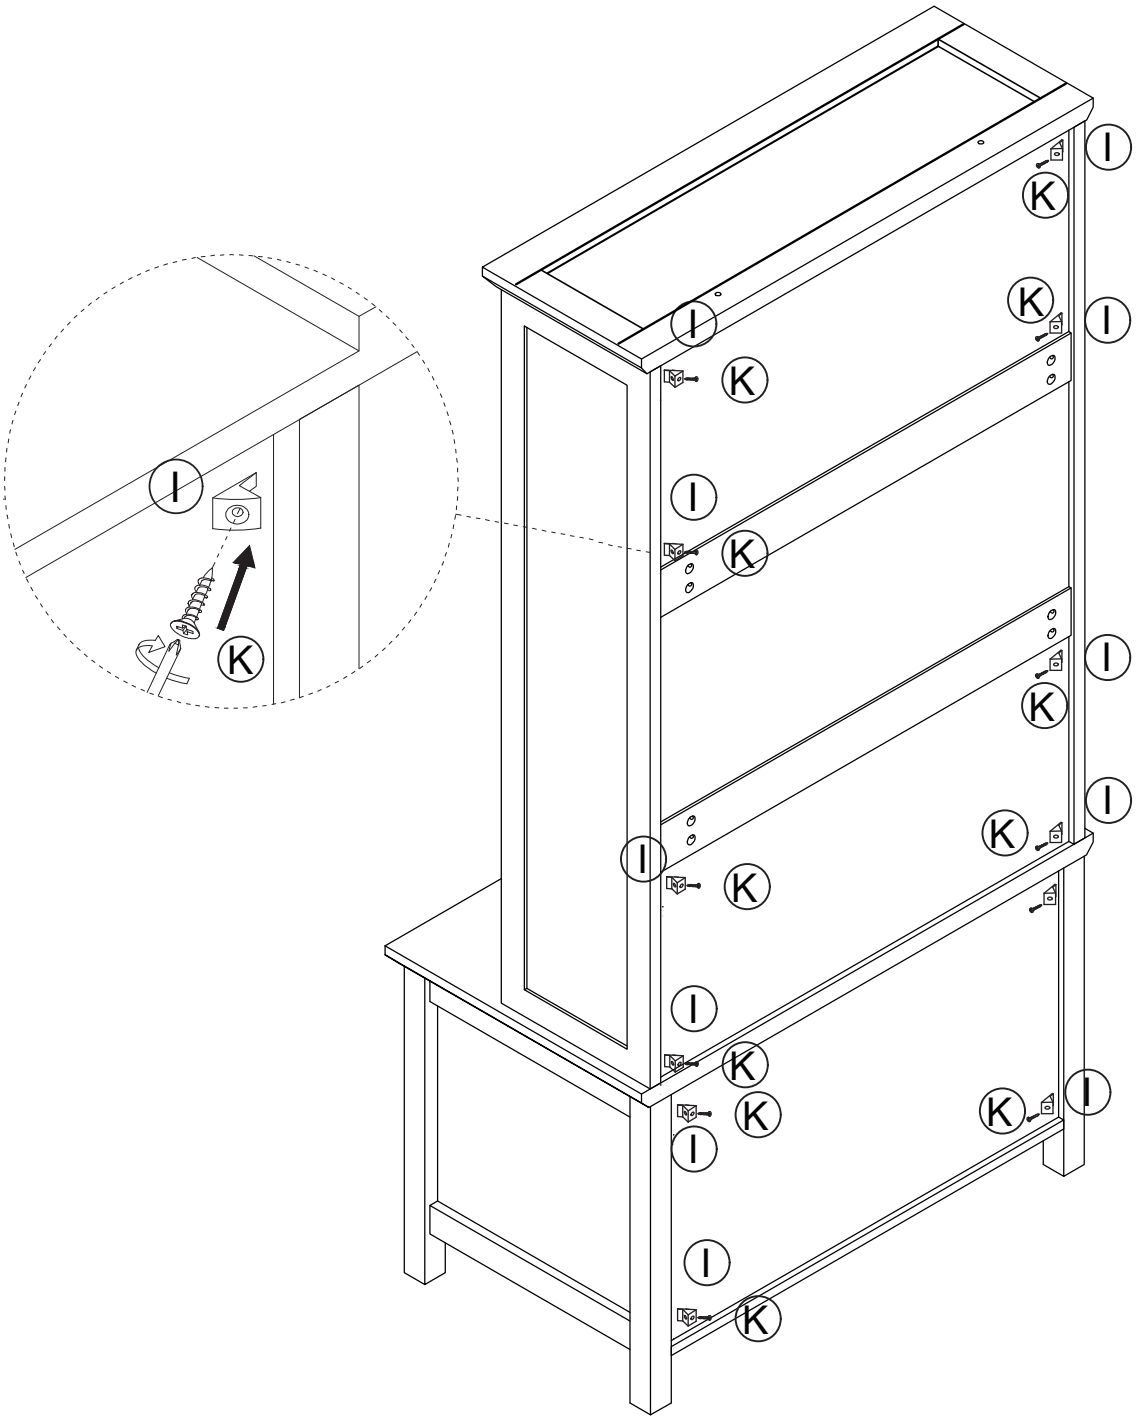


I	K
	
Plastic buckle x 12	3*16mm Screw x 12

STEP 22

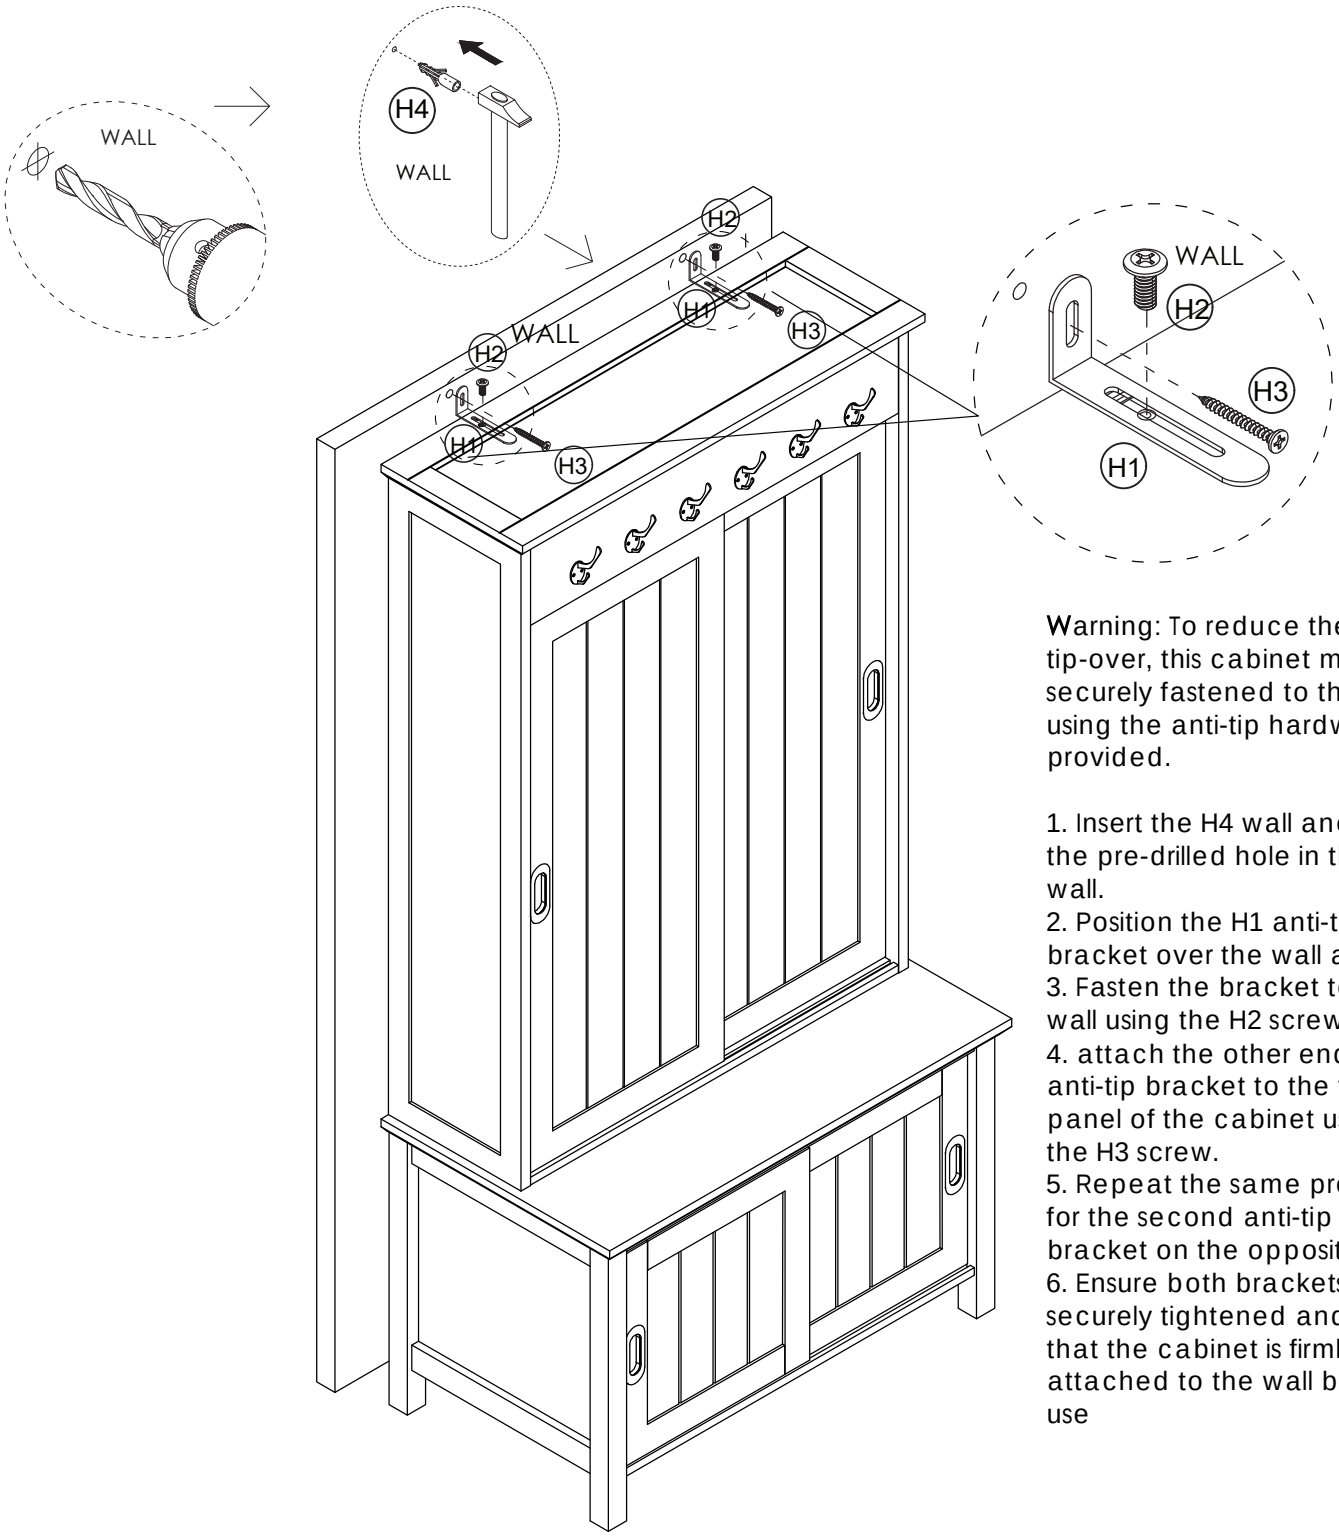


Warning: To reduce the risk of tip-over, this cabinet must be securely fastened to the wall using the anti-tip hardware provided.

1. Insert the H4 wall anchor into the pre-drilled hole in the wall.
2. Position the H1 anti-tip bracket over the wall anchor.
3. Fasten the bracket to the wall using the H2 screw.
4. attach the other end of the anti-tip bracket to the top panel of the cabinet using the H3 screw.
5. Repeat the same procedure for the second anti-tip bracket on the opposite side.
6. Ensure both brackets are securely tightened and verify that the cabinet is firmly attached to the wall before use

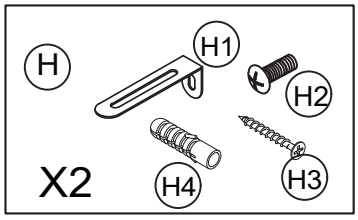

STEP 23

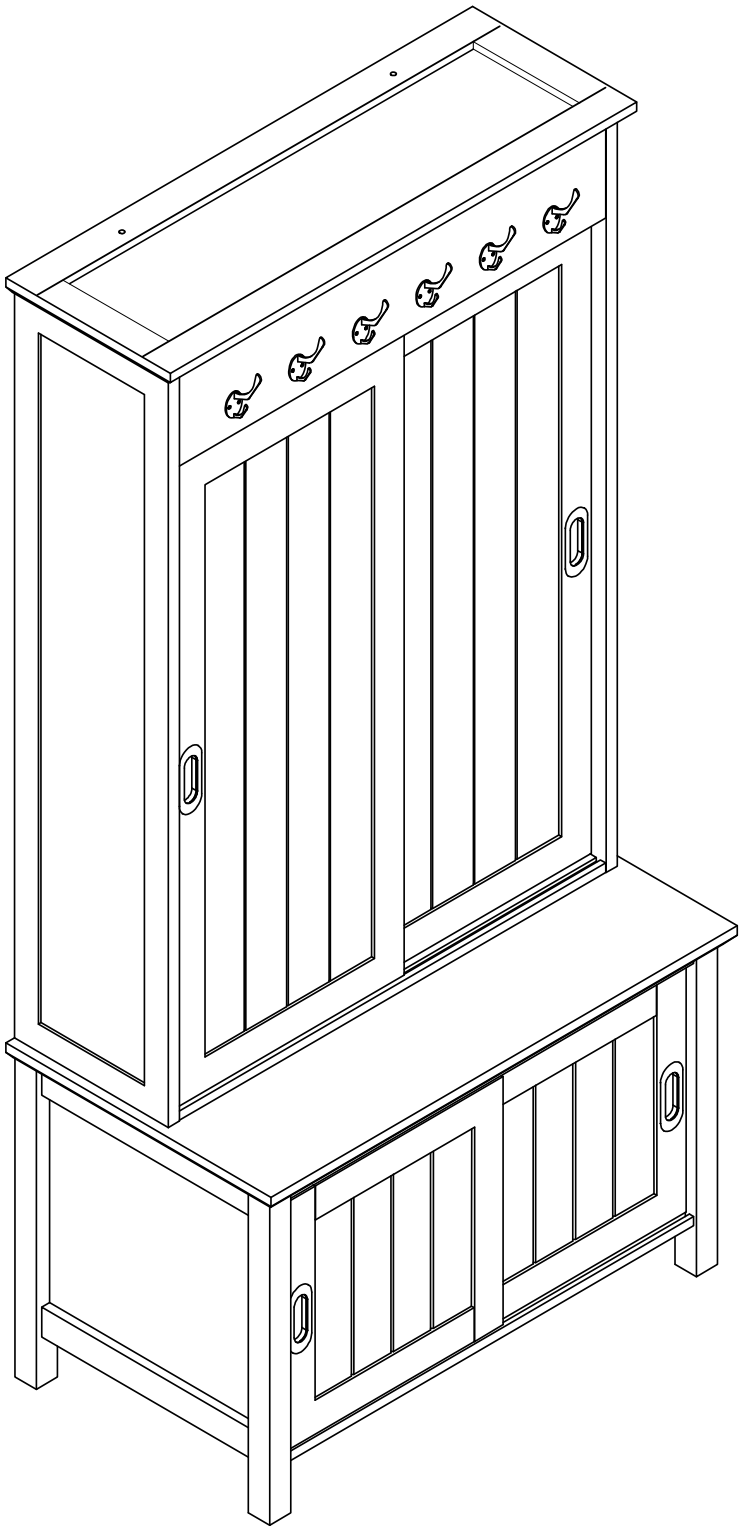

FINISH